

1 Introduction

The upgrade version of this software is Version **DVP3040Z_12V46**, **DVP3040ZS_12V58** and **12.06.12.23**.

This software can be used to upgrade the following Philips DVD Players:

- **DVP3040/12 and DVP3042/12**

After you have completed the upgrade procedure, your DVD player will typically perform better. What improvements are made depends on the upgrade software you are using as well as the software that your DVD player contained before the upgrade.

2 Key Features

This software version includes:

- 1) Improved playability
- 2) Reduce noise during disc loading

3 Preparations

You will need the following items:

- Personal Computer
- CD-R/RW drive and writing application software
- 1x blank CD-R

4 Software Version Verification Procedure

It's important to write down the Software Version information of your DVD player before you start the upgrade procedure. This information is also useful in case you need to call Philips Customer Care Center.

- To view the software version for serial number **XX1AXXXXXXXXXX**
 1. **POWER ON** the set
 2. Press **SYSTEM MENU** key to enter **SETUP** menu
 3. Press < or > to navigate to **GENERAL** menu
 4. Press keys **1,3,7,9** successively
- To view the software version for serial number **XX1BXXXXXXXXXX**, **XX1CXXXXXXXXXX**, **XX1DXXXXXXXXXX**, **XX2BXXXXXXXXXX**, **XX2CXXXXXXXXXX**,
 1. Press **OPEN** to open the tray
 2. Press keys **9,6,6** successively.

5 Download Software

1. Click the link to download Firmware upgrade to your PC.



2. Unzip the .zip file
 - i) Visit <http://www.winzip.com/> for downloads if you cannot open the .zip file.

6 Software Upgrade Additional Steps

For **Type 1** models (Serial Number: XX1X-XXXX-XXXX)

1. Open tray, then press "5", "5" to display upgrade file name.
2. Burn the "DVP3040_12.bin" file to a disc. **(Step 7)**
3. Play the upgrade disc, When TV display ".....Press play to start", then press "play" key to start upgrade.

For **Type 2** models (Serial Number: XX2X-XXXX-XXXX, XX3X-XXXX-XXXX)

Serial Number: XX2X-XXXX-XXXX

- Burn the "DVP3040Z_12V46.img" file and "update.ver" file in the same disc. Disc name is not needed.

Serial Number: XX3X-XXXX-XXXX

- Burn the "DVP3040ZS_12V58.img" file and "updateso.ver" file in the same disc. Disc name is not needed.

7 Burning upgrade software on CD-R or CD-RW

1. Extract the files by unzipping the zipped file.

Write the required files **(Step 6)** – not the zip file - onto a blank CD-R or CD-RW disc, using the following settings:


- File System CD-ROM Joliet
- File name length: max 31 chars (ISO Level 2)
- Mode: 2/XA
- Character set ISO 9660
- Single session
- Write speed: low

Finalize the disc. (The application may do this automatically.)

Tip: For more information on burning software we suggest you can refer to two popular burning software programs


www.nero.com


www.easycdcreator.com

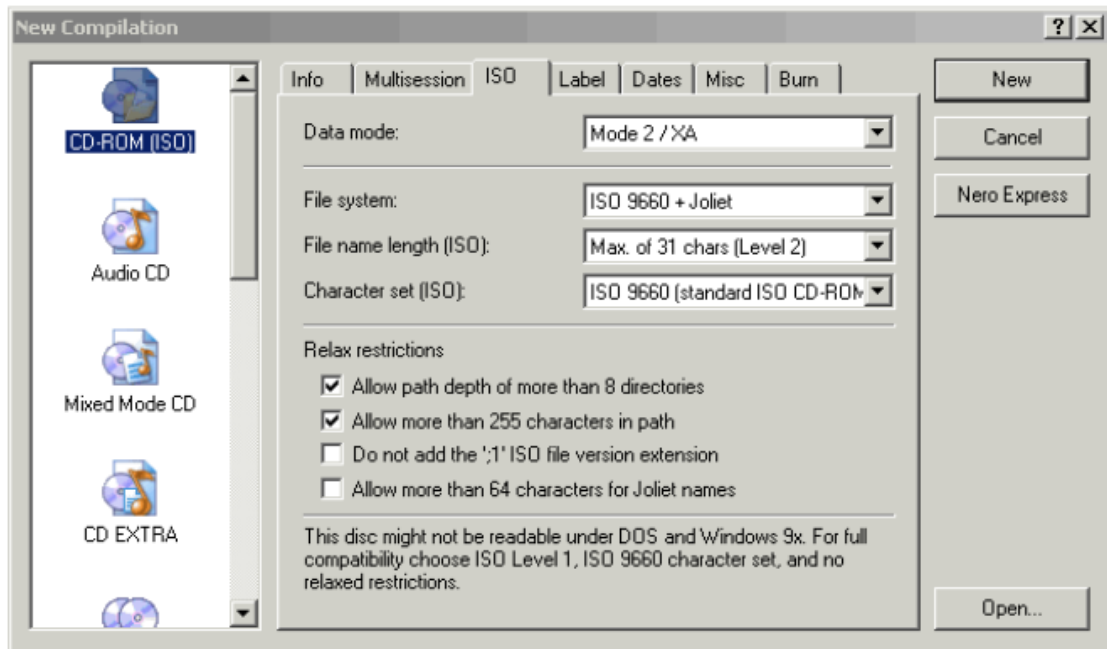

Using Nero Express 6

 
Please make sure you are using Nero Express. You can start Nero Express from the Nero folder in Windows Start menu.

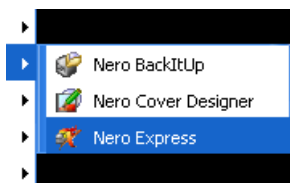

1. Insert a blank CD-R or CD-RW disc.
2. Open Nero Express and select **"Data disc"**.
3. Click on the **"Add"**  tab to browse.
4. Select the unzipped files
5. Click **"Add"** and **"Finished"**.
6. Click on **"Next"** and follow by **"Burn"**. The firmware upgrade will now be burned onto the disc.


Using Easy CD Creator

1. Insert a blank CD-R or CD-RW disc
2. Open Easy CD Creator

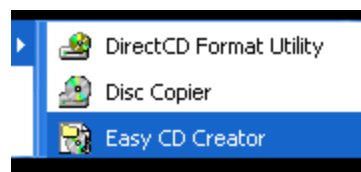

3. Select the unzipped files from the browser on top.
4. Click **"Add"** to copy the files below.
5. Select **"Record CD"** in the **'File'** menu.

6. Click **“Start Recording”**, the firmware upgrade will now be burned onto the disc.

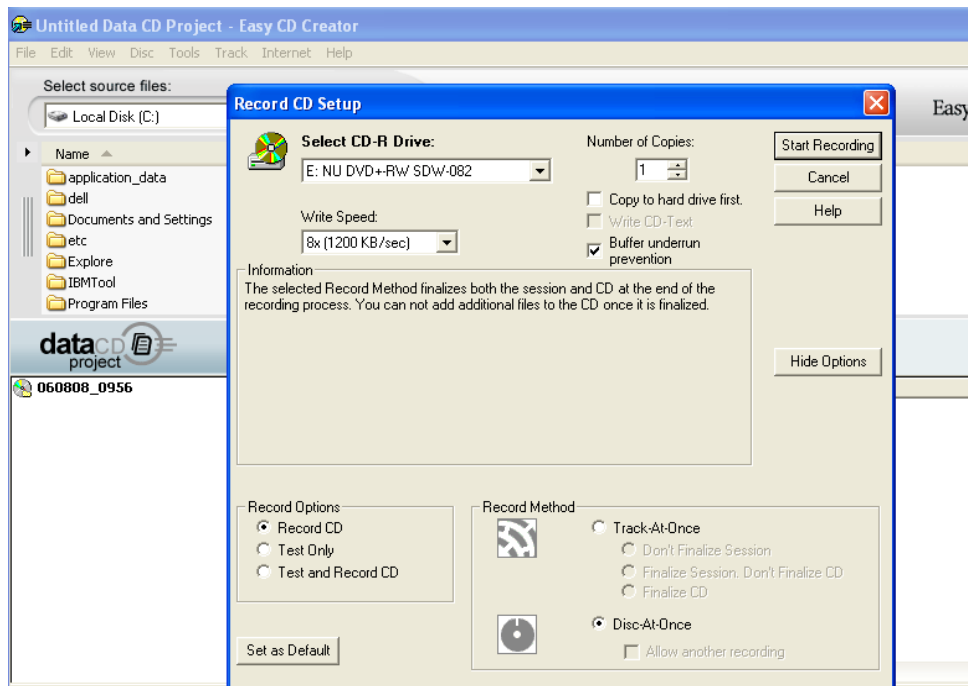

8 Steps to Upgrade Software

1. Power on the set and put in the disc.
2. A message will be displayed on the OSD after the upgrade file is recognized.
3. Follow the instruction displayed on the TV Screen – Press “OK” to upgrade (if applicable)
4. After reading the file, the disc will be ejected
5. Remove the disc, but DO NOT close the tray
6. Wait approximately 3-5 minutes for the software to be upgraded
7. The set will restart itself once the upgrade is completed.
8. **Caution: Do not unplug or power off the set while upgrading in progress.**

9 After the upgrade

Do check the change in the Software Version to confirm the upgrade.

Please follow the procedure described in the Section 4.