

# DVD VIDEO PLAYER

DVP640 • DVP642

DVD  
PLAYER



## Need help? Call us!


*Philips representatives are ready to help you with any questions about your new product. We can guide you through Connections, First-time Setup, or any of the Features. We want you to start enjoying your new product right away!*

**CALL US BEFORE YOU CONSIDER  
RETURNING THE PRODUCT!**

**1-800-531-0039**

or

Visit us on the web at [www.philips.com](http://www.philips.com)

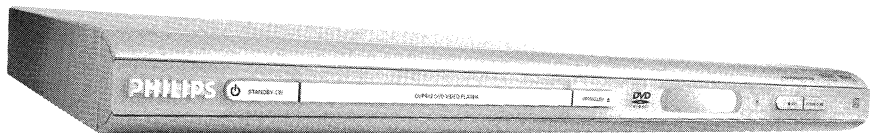

# PHILIPS

# Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.

- Once your Philips purchase is registered, you're eligible to receive all the privileges of owning a Philips product.
- So complete and return the Warranty Registration Card enclosed with your purchase at once, and take advantage of these important benefits.

## Warranty Verification

Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your Philips warranty.

## Owner Confirmation


Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.


## Model Registration

Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

Know these *safety* symbols



 This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

 The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

### For Customer Use

Enter below the Serial No. which is located on the rear or bottom of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

**WARNING:** TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, and fully insert.



# PHILIPS



***Congratulations on your purchase,  
and welcome to the "family!"***

**Dear Philips product owner:**

Thank you for your confidence in Philips. You've selected one of the best-built, best-backed products available today. And we'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the Philips "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry.

What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

And most importantly you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome – and thanks for investing in a Philips product.

Sincerely,

 
Lawrence J. Blanford  
President and Chief Executive Officer

**P.S. Remember, to get the most from your Philips product, you must return your Warranty Registration Card within 10 days. So please mail it to us right now!**

# IMPORTANT SAFETY INSTRUCTIONS


1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. Do not defeat the safety purpose of the polarized or grounding-type plug.



A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.

12.  Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. Battery usage **CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:

- Install **all** batteries correctly, + and - as marked on the unit.
- Do not mix batteries (**old** and **new** or **carbon** and **alkaline**, etc.).
- Remove batteries when the unit is not used for a long time.

16. Apparatus shall not be exposed to dripping or splashing.

17. Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).

18. This product may contain lead and mercury. Disposal of these material may be regulated due to environment considerations.

**For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance : [www.eiae.org](http://www.eiae.org).**

**Class II equipment symbol**



This symbol indicates that the unit has a double insulation system

EL 6475-E004: 03/12

## Canada

### English:

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

### Français:

Cet appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Class B prescrites dans le Règlement sur le Brouillage Radioélectrique édicté par le Ministère des Communications du Canada.

**This warning label is located on the rear panel and inside this laser product.**

**CAUTION** INVISIBLE LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM.

**DANGER** INVISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EXPOSURE TO BEAM.

**VARO!** AVATTAESSA JA SUOJALUKITUS OHITETTAESSA OLET ALLTIINANAKYMYTTOMAAALLE LASERSATEILYLLE. ALA KATSO SATEESEEN.

**WARNING!** OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. OCH SPÄRREN ÄR URKOPPLAD. BETRÄKTA EJ STRÅLEN.

or

**DANGER** - Invisible laser radiation when open. AVOID DIRECT EXPOSURE TO BEAM.

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.

## WARNING

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure.

The set complies with the FCC-Rules, Part 15 and with 21 CFR 1040.10.

## ATTENTION

L'utilisation des commandes ou réglages ou le non-respect des procédures ci-incluses peuvent se traduire par une exposition dangereuse à l'irradiation.

## ATENCIÓN

El uso de mando o ajustes o la ejecución de métodos que no sean los aquí descritos puede ocasionar peligro de exposición a radiación.

### Important Note:

Due to the numerous versions of new CD-Audio copy protection or enhanced CD-Audio protection recently available on certain discs, Philips is unable to guarantee that this DVD Player is fully compatible with such new discs. Should you have difficulty playing any such CD-Audio discs, kindly refer them to your CD-Audio disc retailer.

Due to the inconsistency of disc formats provided by various disc manufacturers, your DVD system may require a playability enhancement or upgrade. As DVD technology advances, these enhancements will become common and will be easy to complete.  
**Go to [www.p4c.philips.com](http://www.p4c.philips.com) for software upgrade.**

'CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 525 OR 625 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE 'STANDARD DEFINITION' OUTPUT. IF THERE ARE QUESTIONS REGARDING OUR TV SET COMPATIBILITY WITH THIS MODEL 525p AND 625p DVD PLAYER, PLEASE CONTACT OUR CUSTOMER SERVICE CENTER.'

# General Information

## Environmental Information

All unnecessary packaging has been omitted. The packaging has been made easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet).

Your DVD player consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

**DivX, DivX Certified, and associated logos are trademarks of DivX Networks, Inc and are used under license.**



*This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.*

### For Customer Use:

Read carefully the information located at the rear of your DVD Player and enter below the Serial No. Retain this information for future reference.

Model No. DVD 640 / DVD 642

Serial No. \_\_\_\_\_

## Laser safety

This unit employs a laser. Due to possible eye injury, only a qualified service person should remove the cover or attempt to service this device.

### NOTE:

**PICTURES SHOWN MAY BE DIFFERENT BETWEEN COUNTRIES.**

### CAUTION

**(WARNING LOCATION: ON THE BACKPLATE OF THE SET)**

**NEVER MAKE OR CHANGE CONNECTIONS WITH THE POWER SWITCHED ON.**

*Manufactured under license from Dolby Laboratories. "Dolby", "Pro-Logic" and the double-D symbol are trademarks of Dolby Laboratories.*

### LASER

Type	Semiconductor laser GaAlAs
Wave length	650 nm (DVD) 780 nm (VCD/CD)
Output Power	7 mW (DVD) 10 mW (VCD/CD)
Beam divergence	60 degree

---

## General Information

Supplied accessories .....	8
Care and safety information .....	8

---

## Connections

Connecting TV .....	9-11
Using Composite Video jack (CVBS) .....	9
Using S-Video jack .....	9
Using Component Video jacks (Pr Pb Y) ..	10
Using an accessory RF modulator .....	10-11
Connecting the power cord .....	11
Optional : Connecting to an Audio System ..	12
Stereo has Dolby Pro Logic or Right / Left	
Audio In jacks .....	12
Optional: Connecting to a Digital Receiver ..	12
Receiver has a PCM, Dolby Digital, or	
MPEG2 decoder .....	12

---

## Functional Overview

Front and Rear Panels .....	13
Remote Control .....	14

---

## Getting Started

Step 1: Inserting batteries into the	
Remote Control .....	15
Using the Remote Control to operate the	
Player .....	15
Step 2: Setting up the TV .....	15-16
Deactivate Progressive manually .....	15-16
Selecting the color system that corresponds	
to your TV .....	16
Step 3: Setting language preferences .....	17
Setting the OSD Language .....	17
Setting the Audio, Subtitle and Disc menu	
languages .....	17

---

## Disc Operations

Playable Discs .....	18
Region Codes .....	18
Playing discs .....	19
Using the Disc Menu .....	19
Basic playback controls .....	19-21
Pausing playback .....	19
Selecting track/chapter .....	19
Mute .....	20
Resuming playback from the last stopped	
point .....	20
Zoom .....	20
Repeat .....	20
Repeat A-B .....	20
Display .....	21
Slow Motion .....	21
Searching .....	21
Program playback .....	21

Special DVD features .....	22
Playing a Title .....	22
Camera Angle .....	22
Changing the Audio Language .....	22
Subtitles .....	22
Special VCD & SVCD Features .....	22-23
Playback Control (PBC) .....	22
Preview .....	23
Playing MP3/DivX/MPEG-4/JPEG/Kodak	
Picture CD .....	24
General Operation .....	24
Playback selection .....	24
Special MP3/JPEG features .....	24
Preview Function (JPEG) .....	24
Zoom picture (JPEG) .....	24
Playback with multi-angles (JPEG) .....	24
Scan Effect (JPEG) .....	24
Playback speed control (MP3) .....	24

---

## DVD Menu Options

Basic Operations .....	25
General Setup menu .....	25-26
Screen Saver .....	25
Smart Power .....	25
Disc Lock .....	26
Program .....	26
Audio Setup Menu .....	27-28
DOWNMIX .....	27
Digital Output .....	27
LPCM Output .....	27
Sound Mode .....	28
Reverb Mode .....	28
D.R.C. (Dynamic Range Control) .....	28
Video Setup Menu .....	29-31
TV Display .....	29
Closed Captions .....	29
Video Output .....	30
Progressive .....	30
Smart Picture .....	31
Preferences Menu .....	31-33
Parental .....	31-32
Password .....	32
Default .....	33
MP3/JPEG Navigator .....	33

---

## Specifications .....

---

## Troubleshooting .....

---

## Glossary .....

---

## Limited Warranty .....

 
# General Information

## Supplied accessories


Video cable  
(yellow)



Audio cable  
(white, red)



Remote Control  
and  
two AA batteries

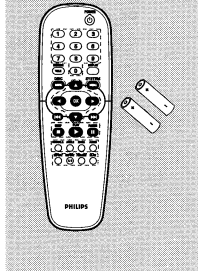

## Care and safety information

### ● Power consumption

– When the system is switched to Standby mode, it is still consuming power. To disconnect the system from the power supply completely, remove the AC power plug from the wall jack.

### ● Avoid high temperatures, moisture, water and dust

 
– Do not expose the player, batteries or discs to humidity, rain, sand or excessive heat (caused by heating equipment or direct sunlight).

### ● Avoid condensation

– The lens may cloud over when the player is suddenly moved from cold to warm surroundings, making it impossible to play a disc. Leave the player in the warm environment until the moisture evaporates.

### ● Do not block the vents

– Do not operate the DVD Player in an enclosed cabinet. Allow about 10 cm (4 inches) of free space around the player for adequate ventilation.



### ● Care of the cabinet


– Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

### ● Finding a suitable location

– Place the player on a flat, hard, and stable surface.

### ● Disc handling

– To clean a CD, wipe it in a straight line from the center toward the edge using a soft, lint-free cloth. A cleaning agent may damage the disc.


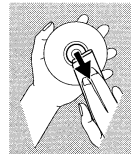


– Write only on the printed side of a CD-R/CD-RW and only with a soft felt-tipped pen.

– Handle the disc by its edge; do not touch the surface.



## Connecting TV

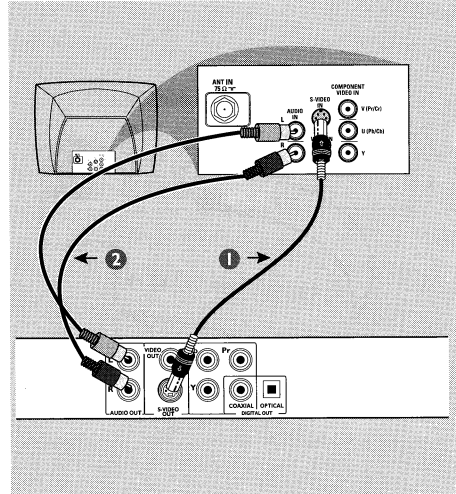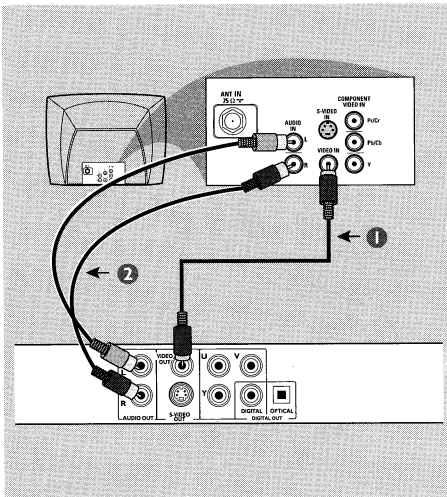

### IMPORTANT!

- You only need to make one video connection from the following options, depending on the capabilities of your TV.
- Connect the DVD Player directly to the TV.

#### Using Composite Video jack (CVBS)

- 1 Use the supplied composite video cable (yellow) to connect the DVD Player's **yellow VIDEO OUT (CVBS)** jack to the VIDEO IN jack (labeled as Video In, Composite, CVBS, or Baseband) on the TV.
- 2 To hear the sound of this DVD Player through your TV, use the audio cables (white/red) to connect AUDIO OUT (L/R) jacks of the DVD Player to the corresponding AUDIO IN jacks on the TV (cable supplied).



### IMPORTANT!

- S-Video provides better picture quality. This option must be available on your TV.

#### Using S-Video jack

- 1 Use the S-video cable to connect the DVD Player's **S-VIDEO OUT** jack to the S-Video in jack (labeled as Y/C or S-VHS) on the TV (cable not supplied).
- 2 To hear the sound of this DVD Player through your TV, use the audio cables (white/red) to connect AUDIO OUT (L/R) jacks of the DVD Player to the corresponding AUDIO IN jacks on the TV (cable supplied).

# Connections

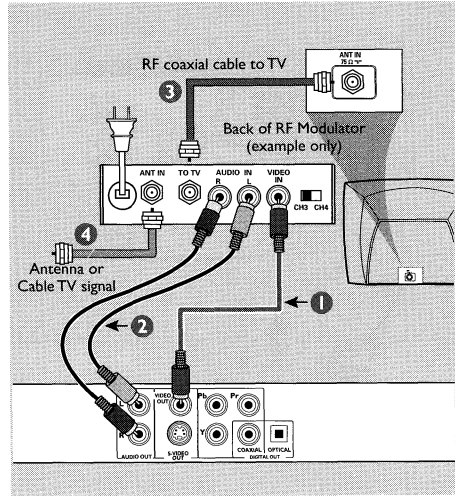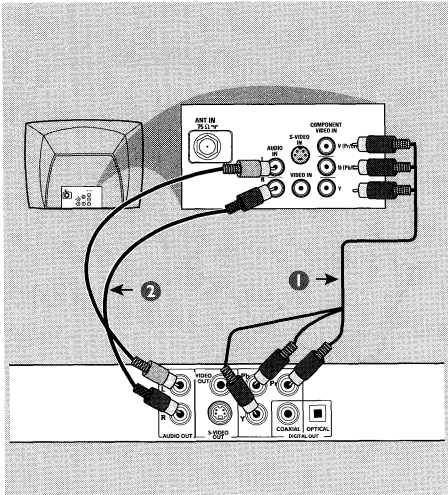

## IMPORTANT!

- Component Video provides higher picture quality. This option must be available on your TV.
- Progressive Scan video quality is only possible when using Component Video (Pr Pb Y).

### Using Component Video jacks (Pr Pb Y)

- 1 Use the component video cables (red/blue/green) to connect the DVD Player's **Pr Pb Y** jacks to the corresponding Component video in jacks (labeled as Pr/Cr Pb/Cb Y or YUV) on the TV (*cable not supplied*).
- 2 To hear the sound of this DVD Player through your TV, use the audio cables (white/red) to connect AUDIO OUT (L/R) jacks of the DVD Player to the corresponding AUDIO IN jacks on the TV (*cable supplied*).


## IMPORTANT!

- If your TV only has a single Antenna In jack (labeled as 75 ohm or RF In), you will need an RF modulator in order to view DVD playback on the TV. The RF modulator is not supplied with the DVD Player. See your electronics retailer or contact Philips for details on RF modulator availability and operations.

### Using an accessory RF modulator

- 1 Use the supplied composite video cable (yellow) to connect the DVD Player's **yellow VIDEO OUT (CVBS)** jack to the video in jack on the RF modulator.
- 2 Use the supplied audio cable (white/red) to connect the DVD Player's AUDIO OUT (L/R) jacks to the AUDIO jacks on the TV.

## Connecting the power cord

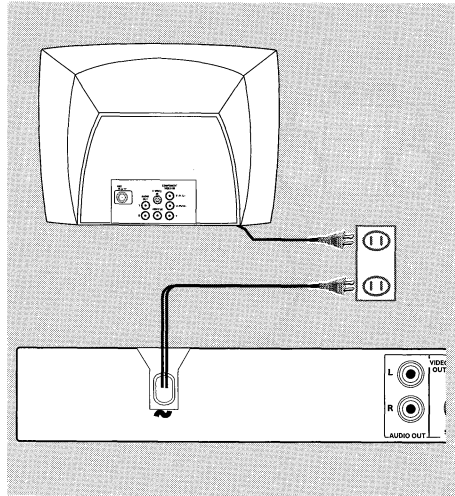

### Using an accessory RF modulator (cont'd)


- 3 Use an RF coaxial cable (not supplied) to connect ANTENNA OUT or TO TV jack of the RF modulator to the ANTENNA IN jack on the TV.
- 4 Connect the Antenna or Cable TV service signal to the ANTENNA IN or RF IN jack on the RF modulator. (It may have been connected to your TV previously. Disconnect it from the TV).
- 5 Set the CH3/4 switch on the RF modulator to 3 or 4. Set your TV to the same channel.

**After everything is connected properly, plug the AC power cord into the power outlet.**

Never make or change any connections with the power switched on.


When no disc is loaded, press **STANDBY ON** on the DVD Player to turn it on.

**"NO DISC"** may appear on the display panel.

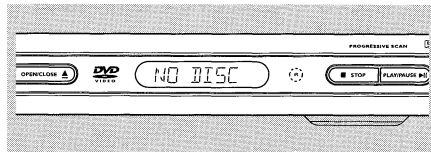

# Connections


## Optional: Connecting to an Audio System

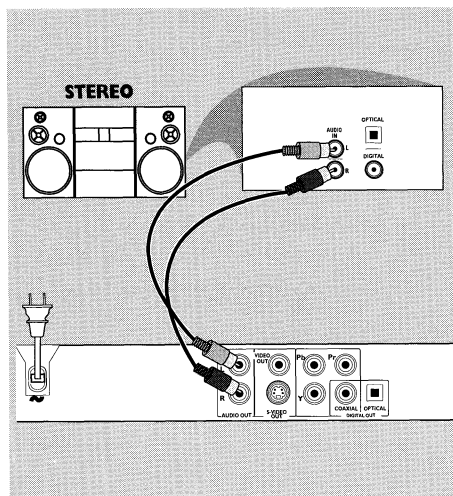

### Stereo has Dolby Pro Logic or Right / Left Audio In jacks

- 1 Select one of the video connections to your TV (CVBS VIDEO IN, S-VIDEO IN, or COMPONENT VIDEO IN) depending on the options available on your TV.
- 2 Use the audio cables (white/red) to connect **AUDIO OUT (L/R)** jacks of the DVD Player to the corresponding **AUDIO IN** jacks on the stereo (*cable supplied*).

## Optional: Connecting to a Digital Receiver

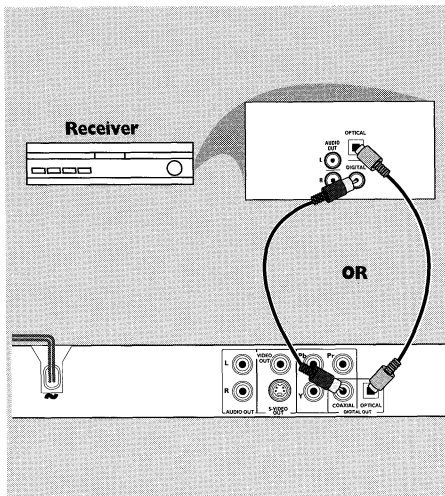

### Receiver has a PCM, Dolby Digital, or MPEG2 decoder



- 1 Select one of the video connections to your TV (CVBS VIDEO IN, S-VIDEO IN, or COMPONENT VIDEO IN) depending on the options available on your TV.
- 2 Connect either the **COAXIAL** or **OPTICAL** jack of the DVD Player to the corresponding Digital Audio In jack on your Receiver (*cable not supplied*).
- 3 Set the DVD Player's Digital Output to **PCM-ONLY** or **ALL** depending on the capabilities of your Receiver (see page 27 "Digital Output").

#### Helpful Hint:

— If the audio format of Digital Output does not match the capabilities of your receiver, the receiver will produce a strong, distorted sound or no sound at all.

# Functional Overview


## Front and Rear Panels

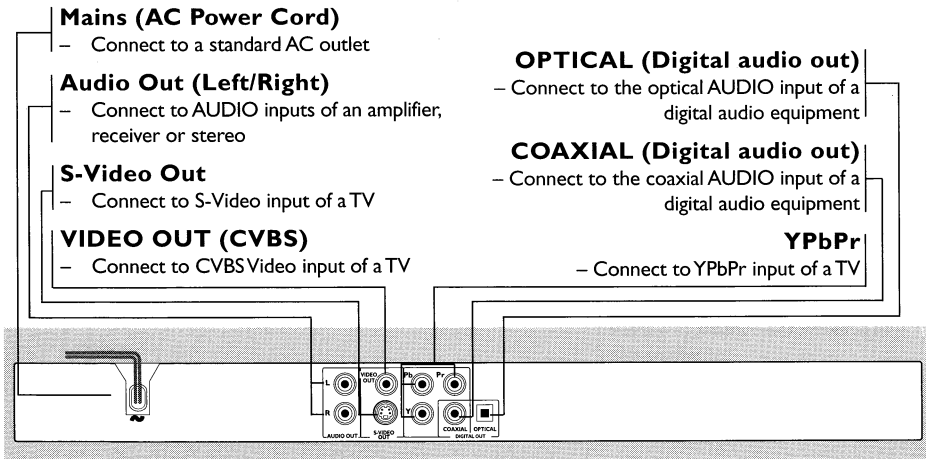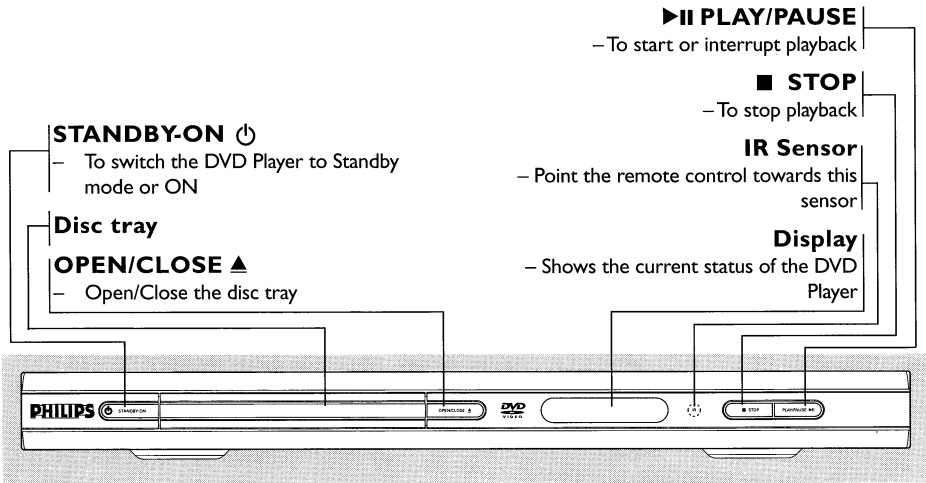

**Caution: Do not touch the inner pins of the jacks on the rear panel. Electrostatic discharge may cause permanent damage to the unit.**

# Functional Overview


## Remote Control

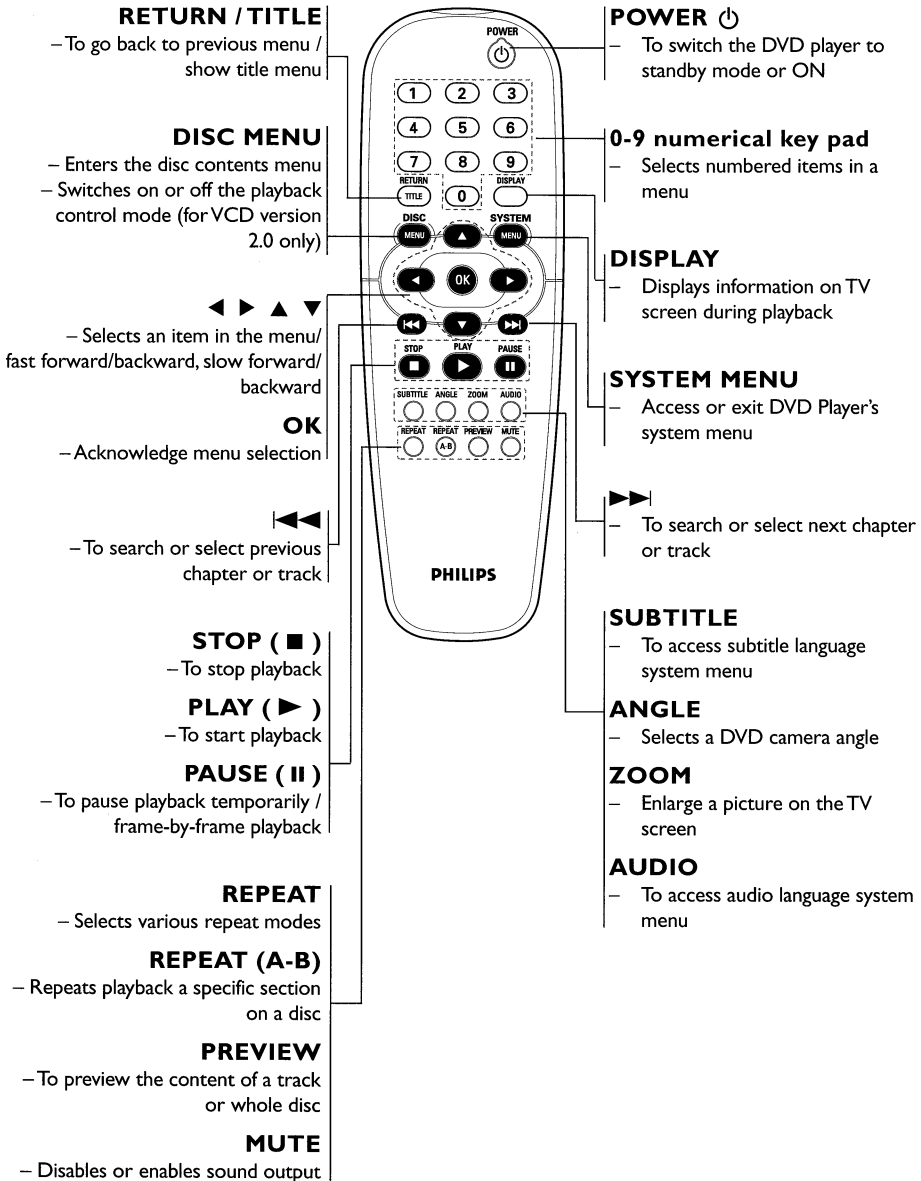

### Helpful Hint:

Press "STOP" for about 2 seconds to OPEN or CLOSE disc tray.


## Step 1: Inserting batteries into the Remote Control

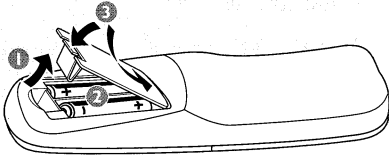

- 1 Open the battery compartment.
- 2 Insert two batteries type R06 or AA, following the indications (+ -) inside the compartment.
- 3 Replace the cover.

## Using the Remote Control to operate the Player

- 1 Aim the Remote Control directly at the remote sensor (iR) on the front panel of the DVD Player.
- 2 Do not put any objects between the Remote Control and the DVD Player while operating the DVD Player.

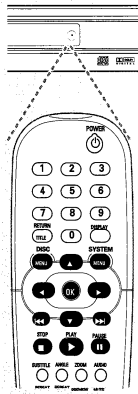

### CAUTION!

- Remove batteries if they are exhausted or if the Remote Control will not be used for a long time.
- Do not use old and new or different types of batteries in combination.
- Batteries contain chemical substances, so they should be disposed properly.

## Step 2: Setting up the TV

### IMPORTANT!

Make sure you have completed all the necessary connections. (See pages 9-11 "Connecting TV").

- 1 Turn on the TV and set it to the correct Video-In channel. You should see the blue Philips DVD background screen on the TV.
  - 2 Usually these channels are between the lowest and highest channels and may be called FRONT, A/V IN, or VIDEO. See your TV manual for more details.
    - Or, you may go to channel 1 on your TV, then press the Channel down button repeatedly until you see the Video In channel.
    - Or, the TV Remote Control may have a button or switch that chooses different video modes.
    - Or, set the TV to channel 3 or 4 if you are using an RF modulator.
- 3 If you are using other external equipment (audio system or receiver), turn it on and select the appropriate input source for the DVD Player. Refer to the equipment owner's manual for details.





## Deactivate Progressive Scan manually

The progressive scan display presents 60 complete frames per second, rather than 30 frames per second of interlaced scanning (normal TV system). With nearly double the number of lines, progressive scan offers higher picture resolution and eliminates bothersome motion artifacts jagged edges on moving objects.

To enjoy the quality offered by progressive scan, a progressive scan TV is required. To activate progressive scan, refer to 'Progressive' on page 30.


# Getting Started

If the progressive function is activated but your TV does not support progressive scan or the cables are not connected accordingly, the TV screen will be blank. You can deactivate progressive scan as below.

- 1 Press **STANDBY ON**  on the front panel to switch on the DVD player.
- 2 Press **OPEN/CLOSE**  on the front panel to open the disc tray.
- 3 Press **STOP**  on the front panel.
- 4 Press **PLAY/PAUSE**  on the front panel.  
→ The blue Philips DVD background appears on the TV screen.

## Selecting the color system that corresponds to your TV

This DVD Player is compatible with both NTSC and PAL. In order for a DVD to play on this Player, the color system of the Disc, the TV and the DVD Player should match.

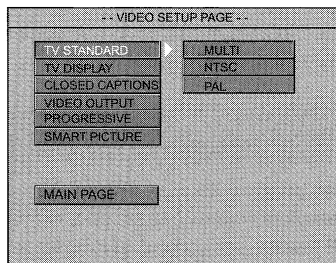

- 1 Press **SYSTEM MENU**.
- 2 Press **▼ ▲** to select 'Video Setup Page'.
- 3 Enter its submenu by pressing **OK**.
- 4 Use the **◀ ▶ ▲ ▼** keys on the Remote Control to navigate in the menu.  
Move to 'TV Standard' and press **▶**.



**PAL** – Select this if the connected TV has the PALcolor system. It will change the video signal of an NTSC disc and output it in PAL format.

**NTSC** – Select this if the connected TV has the NTSC color system. It will change the video signal of a PAL disc (VCD only) and output it in NTSC format.

**Multi** – Select this if the connected TV is compatible with both NTSC and PAL (multi-system). The output format will be in accordance with the video signal of the disc.

### Helpful Hint:

- **Before changing the current TV Standard setting, determine the color system of your TV**
- **If there is not a proper picture on your TV, wait for 15 seconds for auto recover.**

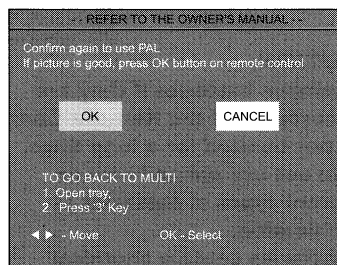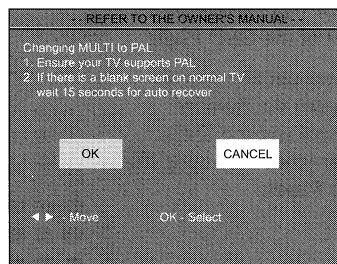


**To exit from the menu**  
Press **SYSTEM MENU**.



## Step 3: Setting language preferences

You can select your preferred language settings. This DVD Player will automatically switch to the language for you whenever you load a disc. If the language selected is not available on the disc, the disc's default language will be used instead. The OSD (on-screen display) language for the system menu will remain as you set it, regardless of various disc languages.


### Setting the OSD Language

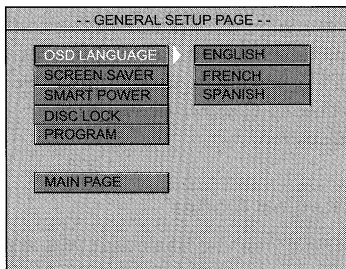

- 1 Press **SYSTEM MENU**.
- 2 Press **▼▲** to select 'General Setup' page.
- 3 Enter its submenu by pressing **OK**.
- 4 Use the **◀▶▲▼** keys on the Remote Control to navigate in the menu. Move to 'OSD Language' and press **▶**.
- 5 Select a language and press **OK**.

**To exit from the menu**  
Press **SYSTEM MENU**.

### Setting the Audio, Subtitle and Disc menu languages

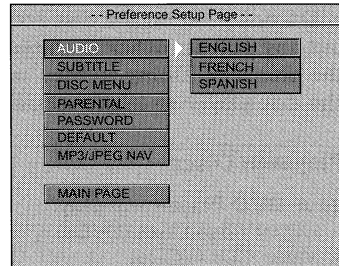

- 1 Press **STOP** twice, then press **SYSTEM MENU**.
- 2 Press **▼▲** to select 'Preferences Page'.
- 3 Enter its submenu by pressing **OK**.
- 4 Press **▲▼** to highlight one of the following in the Preferences Page.
  - 'Audio' (disc's soundtrack)
  - 'Subtitle' (disc's subtitles)
  - 'Disc Menu' (disc's menu)
- 5 Enter its submenu by pressing **▶**.
- 6 Select a language and press **OK**.
- 7 Repeat steps 4~6 for other language settings.

**To exit from the menu**  
Press **SYSTEM MENU**.

# Disc Operations

## IMPORTANT!

- Depending on the DVD or VIDEO CD, some operations may be different or restricted.
- Do not push on the disc tray or put any objects other than discs in the disc tray. Doing so may cause the disc player to malfunction.

## Playable Discs

### Your DVD Player will play:

- Digital Video Discs (DVDs)
- Video CDs (VCDs)
- Super Video CDs (SVCDs)
- Finalized Digital Video Discs + Recordable (DVD+R)
- Finalized Digital Video Discs + Rewritable (DVD+RW)
- Audio Compact Discs (CDs)
- MP3 files on CD-R(W):
  - Maximum 30 characters display
  - Supported sampling frequencies : 32 kHz, 44.1 kHz, 48 kHz (MPEG-1) 16 kHz, 22.05 kHz, 24 kHz (MPEG-2)
  - Supported bitrates : 32-256 kbps (MPEG-1), 8-160 kbps (MPEG-2) variable bitrates
- Picture files on CD-R/CD-RW:
  - JPEG pictures.
  - KODAK pictures.
  - Fuji color pictures.
- MPEG-4 files on CD-R/CD-RW:
  - Simple profile
  - Advanced simple profile (640-480)
- DivX® disc on CD-R/CD-RW:
  - DivX 4.x and 5.x
  - GMC (Global Motion Compensation) and Q-Pel (Quarter Pixel) not supported


This DVD Player can play DivX, MPEG-4, MP3, JPEG, VCD & SVCD files on a personally recorded CD-R/CD-RW disc or commercial CD.

- Maximum files programmable is 24.
- MP3: Maximum supported bitrate is 320 kbps or 48 kHz.
- DivX4.x and 5.x comply with this standard, except GMC (Global Motion Compensation) and QP (Quarter Pixel) features.
- MPEG-4: All video codecs that comply with specifications of ISO-MPEG4.
- JPEG: For baseline JPEG, maximum resolution is 5120 x 3840 (beyond this picture will be cropped). For progressive JPEG, maximum resolution is 2048 x 1536 (beyond this, picture will not be displayed).

## Region Codes

DVDs must be labeled for ALL regions or Region 1 in order to play on this Player. You cannot play Discs that are labeled for other regions.

Look for the symbols on your DVD's.

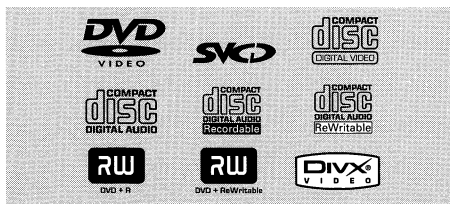

### Helpful Hint:



 
- If you are having trouble playing a certain disc, remove the disc and try a different one. Improperly formatted disc will not play on this DVD Player.

## IMPORTANT!



If the inhibit icon appears on the TV screen when a button is pressed, the function is not available on the current disc or at the current time.

## Playing discs

- 1 Connect the power cords of the DVD Player and TV (and any optional stereo or receiver) to a power outlet.
- 2 Turn on the TV and set it to the correct Video In channel. (See page 15 "Setting up the TV").
- 3 Press **STANDBY-ON**  on the front of the DVD Player.  
→ You should see the blue Philips DVD background screen on the TV.
- 4 Press **OPEN•CLOSE**  to open the disc tray and load a disc. Press again to close the disc tray.  
→ Make sure the label is facing up. For double-sided discs, make sure the label of the side you want to play is facing up.
- 5 Playback may start automatically (depending on the disc type).  
→ If a disc menu appears on the TV, see "Using the Disc Menu".  
→ If the disc is locked by parental control, you must enter your four-digit password. (See page 32).
- 6 At any time, simply press **STOP**  to stop playback.

## Using the Disc Menu

Depending on the disc, a menu may appear on the TV screen once you load the disc.

### To select a playback feature or item

- Use the **◀▶ ▲ ▼** or **numeric keypad (0-9)** on the Remote Control, then press **PLAY ▶** to start playback.

### To access the menu

- Press **DISC MENU** on the Remote Control.

## Basic playback controls

Unless otherwise stated, all operations described are based on Remote Control use.

### Pausing playback (DVD/VCD/CD)

- 1 During playback, press **PAUSE II**.  
→ Play will pause and sound will be mute.
- 2 During pause mode, press **◀▶** to select the previous or next picture frame.
- 3 To return to normal playback, press **PLAY ▶**.

### Selecting a title (track) /chapter (DVD/VCD/CD)

- Press **◀◀ / ▶▶** or use the numeric keypad (0-9) to key in a title (track) / chapter number.

# Disc Operations

## Mute (DVD/VCD/CD/MP3/DivX/JPEG)

- Press **MUTE** repeatedly to disable and enable the sound.

## Resuming playback from the last stopped point (DVD/VCD/CD)

Resume playback of the last five discs, even if the disc was removed from the Player.

- 1 Load one of the last five discs.  
→ "LOADING" appears.
- 2 Press **PLAY** ► and the disc will play from the last point.

### To cancel resume mode

- While play is stopped, press **STOP** ■ again.

#### Helpful Hint:

- Resume may not be available on some discs.

## Zoom (DVD/VCD)

Zooming allows you to enlarge the video image during playback.

- 1 Press **ZOOM** during playback to select the zoom factor.
- 2 Press ◀▶▲▼ to move through the zoomed image.
- 3 Press **ZOOM** repeatedly to increase and decrease the zoom factor.  
→ Playback will continue.

## Repeat (DVD/VCD/CD/MP3)

You can play a chapter, track, title or entire disc repeatedly.

- Press **REPEAT** continuously to choose a Repeat mode during playback.

### → DVD

'CHAPTER REPEAT ON/TITLE REPEAT ON/REPEAT OFF'.

### → VCD / CD

'REP-ONE/REP-ALL/REPEAT OFF'.

For VCD2.0, SVCD discs:

- Not available if Playback Control is on (PBC On).

### → MP3

If 'MP3/JPEG Nav' is WITH MENU:

'REP-ONE/FOLDER REPEAT/REP-ALL/REPEAT OFF'.

If 'MP3/JPEG Nav' is NO MENU:

'REP-ONE/REP-ALL/REPEAT OFF'.

#### Helpful Hint:

- Repeat options are not available on some discs.

## Repeat A-B (DVD/VCD/CD)

You can play only a specific portion of a Title/Track or Chapter repeatedly.

- 1 During playback, press **REPEAT A-B** at your chosen starting point.  
→ 'A TO B SET A' appears on the TV screen.
- 2 When the disc reaches your selected ending point, press **REPEAT A-B** again.  
→ 'A TO B SET B' appears on the TV screen, and the repeat sequence begins.
- 3 To resume regular playback, press **REPEAT A-B** again.  
→ 'A TO B CANCELLED' appears on the TV screen.

## Preview

### For VCD

- While pl on the n → The p



### 1. INTF

The DVI few seco disc con

- 1 Press 1
- 2 Press ST

### 2. DISC

Divide a regular i page to l



- 1 Press 2 → The p on the T
- 2 To selec ►►|.
- 3 Use the track to

## Display (DVD/VCD)

The Display function allows you to start playback at any chosen time on the disc.

- 1 During playback, press and hold **DISPLAY** until the time edit box appears.
  - 2 Press **DISPLAY** once. Use ◀▶ to highlight one of the options and use the numeric key pad (0-9) to enter the number of title (track) /chapter.
  - 3 Press **DISPLAY** twice. Use ▶ to highlight the time option and use the numeric key pad (0-9) to enter hours, minutes and seconds from left to right in the time edit box.
  - 4 Press **OK** to confirm. → Playback starts from the selected time on the disc.
- Highlight 'TIME', then press ▲ ▼ to view the status of the playing disc.

### For DVD

→ 'TITLE ELAPSED/ TITLE REMAIN/ CHP ELAPSED/ CHP REMAIN' appears.

### For VCD

→ 'SINGLE ELAPSED/ SINGLE REMAIN/ TOTAL ELAPSED/ TOTAL REMAIN' appears.

## Slow Motion (DVD/VCD/SVCD)

During playback, press ▲ or ▼ to select slow reverse (SR) or slow forward (SF).

### → DVD

- Press ▲ or ▼ repeatedly to select the slow reverse or slow forward speed:  
SFx2 → SFx4 → SFx8 → PLAY  
SRx2 → SRx4 → SRx8 → PLAY

### → VCD / SVCD

- Press ▲ repeatedly to select the slow forward speed:  
SFx1 → SFx2 → SFx3 → PLAY

### Helpful Hint:

- Slow Reverse is not available in VCD/ SVCDs.

## Searching

### (DVD/VCD/SVCD/CD/MP3)

- Press ◀ or ▶ repeatedly to select fast reverse (FR) search or fast forward (FF) search.

### → DVD / MP3

FRx2 → FRx4 → FRx6 → FRx8 → PL  
FFx2 → FFx4 → FFx6 → FFx8 → PL

### → VCD / SVCD / CD

FRx1 → FRx2 → FRx3 → FRx4 → PL  
FFx1 → FFx2 → FFx3 → FFx4 → PL

## Program Playback

### (DVD/VCD/CD)

- 1 Press **SYSTEM MENU**. Press ▼ ▲ to select 'General Setup Page'.
  - 2 Select 'Program' and set it to ON, then press **OK** (see page 26, 'Program'). → The 'Program' menu appears.
  - 3 Use the ◀▶▲▼ keys and numeric keypad (0-9) on the Remote Control to select a title (track) /chapter.
  - 4 Press **PLAY** ▶ to start playback. → For DVD, the maximum programmable titles or chapters is 16. → For VCD/CD, the maximum programmable tracks is 24.
- **To erase a selection in the Program**  
Use the ◀▶▲▼ keys to select the item(s), then press **OK** to delete.
  - **To list the programmed item(s)**  
While play is stopped, press **SYSTEM MENU**. Select 'Program' and set it to ON, then press ▶.

## Special

### Playing

- 1 Press **R** → The screen.
- 2 Use **▲▼** (0-9) to
- 3 Press **C**

### Camera

- Press **A** different perspective

### Change

#### For DV

- Press **A** different the DV

#### Change

#### For VCR

- Press **A** available disc (LI MONC

### Subtitle

- Press **S** differer the DV


## Playing MP3/DivX/MPEG-4/ JPEG/Kodak Picture CD

### IMPORTANT!

You have to turn on your TV and set it to the correct Video In channel. (See page 15 "Setting up the TV").

### General Operation

- 1 Load an MP3/DivX/MPEG-4/JPEG disc. → The DATA CD MENU appears on the TV screen.
- 2 Use **▲▼** to select a folder. Press **OK** to open the folder.

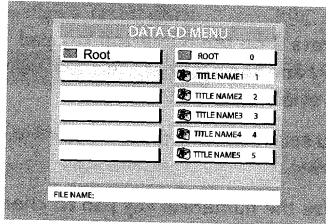

- 3 Press **▲▼** or use the numeric keypad (0-9) to highlight an option.
- 4 Press **OK** to confirm. → Playback will start at the selected file and continue to the end of the folder.

  - During MP3 playback, the selected track name and current playing time will be displayed under the 'File Name'.
  - If the 'MP3/JPEG Nav' is set to NO MENU, the DATA CD MENU will not appear on the TV screen (see page 33).

#### Helpful Hint:

– Kodak Picture CD, playback will start automatically without a disc menu.  
Press **STOP** ■ to display thumbnails of nine pictures.

### Playback selection

During playback, you can:

- Press **◀◀/▶▶** to select another file in the current folder.
- During playback, press **▲▼◀▶** to rotate the picture on the TV screen.
- Press **PAUSE** II to pause playback.

## Special MP3/JPEG features

### Preview (JPEG)

This shows the content of the current folder or the whole disc.

- 1 Press **PREVIEW** during playback. → Thumbnails of 9 pictures appears on the TV screen.

(example for 9 thumbnail pictures display)



- 2 Press **◀◀/▶▶** to display other picture on the previous/next page.
- 3 Use **◀▶▲▼** to highlight a picture. Press **OK** to start playback,

### Zoom picture (JPEG)

- During playback, press **ZOOM** repeatedly to choose 'ZOOM ON' or 'ZOOM OFF'.
- Press **◀◀/▶▶** to display the picture with different zoom factors.
- Use **◀▶▲▼** to move through the zoomed picture.

### Playback with multi-angles (JPEG)

- During playback, press **▲▼◀▶** to rotate the picture on the TV screen.
  - ▲: flip the picture vertically
  - ▼: flip the picture horizontally
  - ◀: rotate the picture counter-clockwise
  - ▶: rotate the picture clockwise

### Scan Effect (JPEG)

- Press **ANGLE** repeatedly to choose different scan effect. → Various scan effects appear in the top left corner of the TV screen.

### Playback speed control (MP3)

- Press **◀/▶** repeatedly to play backward forward at different speeds.
- Press **◀◀/▶▶** to change tracks.


# DVD Menu Options

## Basic Operations

- 1 Press **SYSTEM MENU** when play is stopped to enter the Setup Menu.
- 2 Press **OK** to enter the next level submenu or confirm your selection.
- 3 Press **◀▶** to enter the submenu or return to the previous menu.
- 4 Press **▲▼** to highlight the desired menu.
- 5 Press **SYSTEM MENU** to quit the setup menu.  
→ The settings will be stored in the player's memory even if after the player is switched off.

## General Setup menu

The options in General Setup menu are: 'OSD Language', 'Screen Saver', 'Smart Power', 'Disc Lock' and 'Program'.

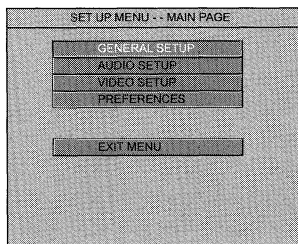


- 1 Press **SYSTEM MENU** to enter the setup menu.
- 2 Press **▲▼** to select 'General Setup' page.
- 3 Press **OK** to confirm.

### NOTE:

Some of the features in the DVD Menu Options are described in "Getting Started".


## Screen Saver

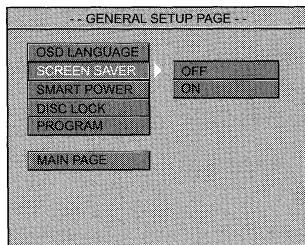

- 1 Press **▲▼** to highlight 'Screen Saver'.
- 2 Enter its submenu by pressing **▶**.
- 3 Press **▲▼** to choose a setting.  
→ **Off**: Screen saver is disabled.  
→ **On**: When play is stopped or if no Disc is in the Player, and if no actions are performed within five minutes, the screen saver will be activated.
- 4 Press **OK**, then press **◀** to return to the General Setup Page.

## Smart Power


When play is stopped or if no Disc is in the Player, the DVD Player will switch to standby mode after fifteen minutes of inactivity to save energy.

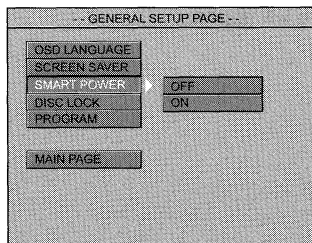


- 1 Press **▲▼** to highlight 'Smart Power'.
- 2 Enter its submenu by pressing **▶**.
- 3 Press **▲▼** to choose a setting.  
→ **Off**: Smart Power is disabled.  
→ **On**: When play is stopped or if no Disc is in the Player, and if no actions are performed for 15 minutes, the Player will turn off.
- 4 Press **OK**, then press **◀** to return to the General Setup Page.

# DVD Menu Options

## Disc Lock (DVD/VCD/CD)

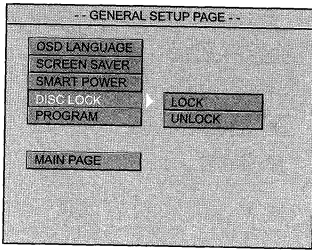

## Program

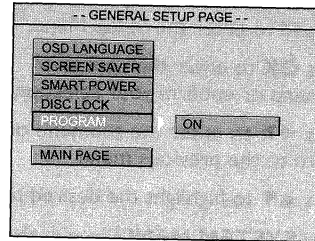


- 1 Press ▲▼ to highlight 'Disc Lock'.
- 2 Enter its submenu by pressing ►.
- 3 Press ▲▼ to choose a setting.
  - **Lock**: Select this option and the player will lock the current playing disc.
  - **Unlock**: Select this option and the player will unlock the current playing disc.
- 4 You will need to enter the password to confirm unlock selection. Use the numerical keypad (0-9) on the remote. The default password is 1234 (see 'Password' on page 32).
- 5 Press **OK**, then press ◀ to return to the General Setup Page.

### Helpful Hint:


— When a locked disc is in the Player, a menu will appear.

- 1 Press ▲▼ to highlight 'Program'.
- 2 Enter its submenu by pressing ►.
  - **On**: Select this option to activate program function.
- 3 Press **OK** to enter to 'Program' menu (see 'Program Playback' on page 21).

### For VCD / CD

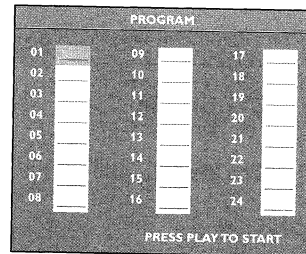

### For DVD

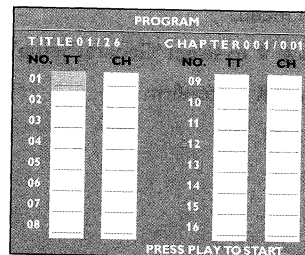




# DVD Menu Options

## Audio Setup Menu

The options in the Audio Setup menu are: 'Downmix', 'Digital Output', 'LPCM Output', 'Sound Mode', 'Reverb Mode' and 'D.R.C. (Dynamic Range Control)'.

- 1 Press **SYSTEM MENU**.
- 2 Press **▲▼** to select the 'Audio Setup' page.
- 3 Press **OK** to confirm.


### Downmix

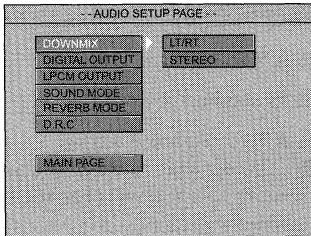

- 1 Press the **▲▼** keys to highlight 'Downmix'.
- 2 Enter its submenu by pressing **▶**.
- 3 Press **▲▼** to choose a setting.  
→ **LT/RT**: Select this option if your DVD Player is connected to a Stereo with a Dolby Pro Logic decoder.  
→ **Stereo**: Select this option if the TV or Stereo has right and left Audio In jacks but does not have Dolby Pro Logic.
- 4 Press **OK**, then press **◀** to return to the Audio Setup Page.

### Digital Output

Set Digital output according to the optional audio equipment you connected.

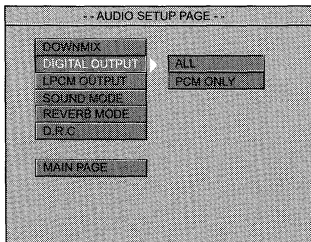

- 1 Press **▲▼** to highlight 'Digital Output'.
- 2 Enter its submenu by pressing **▶**.
- 3 Press **▲▼** to choose a setting.  
→ **All**: If you connected the DVD Player's Digital (Coaxial or Optical) jack to a multi-channel decoder/receiver.  
→ **PCM Only**: Only if your receiver is not capable of decoding multi-channel audio.
- 4 Press **OK**, then press **◀** to return to the Audio Setup Page.


#### Helpful Hint:

– If **DIGITAL OUTPUT** is set to 'All', all audio settings except **MUTE** are invalid.

### LPCM Output

If you connect the DVD Player to a PCM compatible receiver using Player's Digital (Coaxial or Optical) jack, you may need to adjust 'LPCM Output'.

Discs are recorded at a certain sampling rate, measured in kHz. The higher the sampling rate, the better the sound quality.

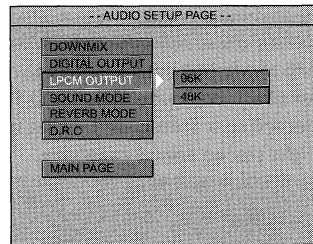

- 1 Press **▲▼** to highlight 'LPCM Output'.
- 2 Enter its submenu by pressing **▶**.
- 3 Press **▲▼** to choose a setting.  
→ **48K**: Play a disc recorded at the sampling rate of 48 kHz.  
→ **96K**: Play a disc recorded at the sampling rate of 96 kHz.
- 4 Press **OK**, then press **◀** to return to the Audio Setup Page.


#### Helpful Hint:

– The average setting for most Discs is **48K**.

# DVD Menu Options

## Sound Mode


The digital sound effect allows you to select from various pre-set modes that control the frequency bands of optimized certain musical styles. It enhances the excitement and enjoyment of your favorite music.

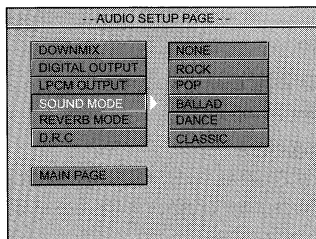

- 1 Press **▲▼** to highlight 'Sound Mode'.
- 2 Enter its submenu by pressing **▶**.
- 3 Press **▲▼** to choose a setting.  
→ **None, Rock, Pop, Ballad, Dance, Classic**
- 4 Press **OK**, then press **◀** to return to the Audio Setup Page.

## Reverb Mode


Reverb mode provides a virtual surround sound effect even when the DVD Player is connected to a Stereo or TV that has only left/right stereo sound capability.

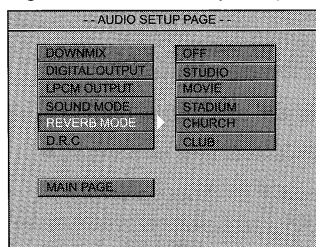

- 1 Press **▲▼** to highlight 'Reverb Mode'.
- 2 Enter its submenu by pressing **▶**.
- 3 Press **▲▼** to choose a setting.  
→ **Off, Studio, Movie, Stadium, Church, Club**
- 4 Press **OK**, then press **◀** to return to the Audio Setup Page.

## D.R.C. (Dynamic Range Control)

High volume outputs are softened, enabling you to watch your favorite action movie without disturbing others at night.

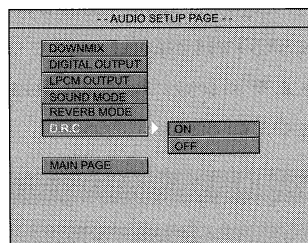

- 1 Press **▲▼** to highlight 'D.R.C.'.
- 2 Enter its submenu by pressing **▶**.
- 3 Press **▲▼** to choose a setting.  
→ **Off**: The dynamic range of the audio is not compressed. You will hear the highs and lows of the sounds.  
→ **On**: The dynamic range of the audio is compressed. The loud and soft sound will be leveled evenly, reducing sudden bursts of loud sounds.
- 4 Press **OK**, then press **◀** to return to the Audio Setup Page.

# DVD Menu Options


## Video Setup Menu

The options in the Video Setup menu are: 'TV Standard', 'TV Display', 'Closed Captions', 'Video Output', 'Progressive' and 'Smart Picture'.


- 1 Press **SYSTEM MENU**.
- 2 Press **▲ ▼** to select 'Video Setup' page.
- 3 Press **OK** to confirm.

### TV Display

Set the aspect ratio of the DVD Player according to the TV you have connected and the Discs you are playing.

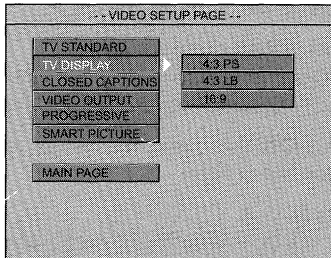

- 1 Press **▲ ▼** to highlight 'TV Display'.
- 2 Enter its submenu by pressing **▶**.
- 3 Press **▲ ▼** to choose a setting.

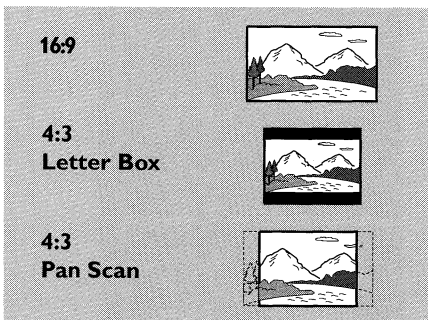

## 16:9

→ If you have a wide screen TV.

## 4:3 Letter Box

→ If you have a standard TV. In this case, a wide picture with black bands on the upper and lower portions of the TV screen will be displayed.

## 4:3 Pan Scan


→ If you have a regular TV and want both sides of the picture to be trimmed or formatted to fit your TV screen.

- 4 Press **OK**, then press **◀** to return to the Video Setup Page.

## Closed Captions

Closed captions are data that is hidden in the video signal on specific discs, invisible without a special decoder. The difference between subtitles and closed captions is that subtitles are intended for hearing persons, and closed captions are for the hearing impaired. For example, closed captions show sound effects (e.g., "phone ringing" and "footsteps"), while subtitles don't.

Before you select this function, please ensure that the disc contains closed captions information and your TV also has this function.

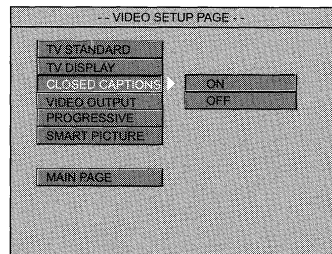


- 1 Press **▲ ▼** to highlight 'Closed Captions'.
- 2 Enter its submenu by pressing **▶**.
- 3 Press **▲ ▼** to choose a setting.
  - **On**: Enable Closed Captions.
  - **Off**: Disable Closed Captions.
- 4 Press **OK**, then press **◀** to return to the Video Setup Page.

# DVD Menu Options

## Video Output


Choose the type of video output that matches the connection of the DVD Player to your TV.

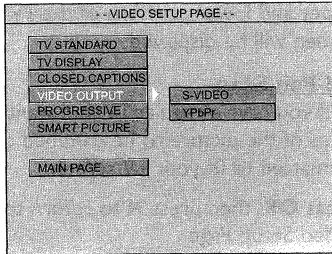

- 1 Press ▲▼ to highlight 'Video Output'.
- 2 Enter its submenu by pressing ►.
- 3 Press ▲▼ to choose a setting.  
→ **S-Video**: If you have connected the S-Video Out jack to a TV.  
→ **YPbPr**: If you have connected the YPbPr Out jacks to a TV.
- 4 Press **OK**, then press ◀ to return to the Video Setup Page.

## Progressive



To select this item you must set 'Video Output' to YPbPr (see left) and ensure your TV has progressive scan.

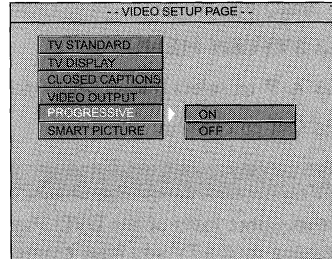

- 1 Press ▲▼ to highlight 'Progressive'.
- 2 Enter its submenu by pressing ►.
- 3 Press ▲▼ to choose a setting.  
→ **On**: Enable Progressive Scan video.  
→ **Off**: Disable Progressive Scan video.
- 4 Press **OK**, then press ◀ to return to the Video Setup Page.

### Helpful Hint:


- If a blank/distorted TV screen appears, wait for 15 seconds for auto recover.
- To deactivate the progressive function, refer to the hint menu displayed on the TV screen or see pages 15 and 16.

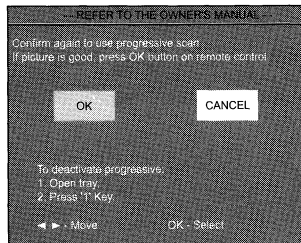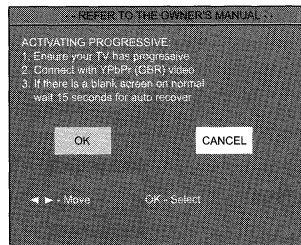

# DVD Menu Options

## Smart Picture


In this menu, you can choose an ideal predefined picture setting.

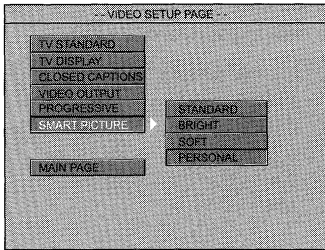

- 1 Press **▲▼** to highlight 'Smart Picture'.
- 2 Enter its submenu by pressing **▶**.
- 3 Press **▲▼** to choose a setting.
  - **Standard**: select the standard picture setting.
  - **Bright**: make the TV picture brighter.
  - **Soft**: make the TV picture softer.
  - **Personal**: set the 'Brightness', 'Contrast', 'Hue' and 'Saturation' as you prefer (see 'Brightness' below).
- 4 Press **OK**, then press **◀** to return to the Video Setup Page.

## Brightness

You can personalize your picture by adjusting brightness, contrast, hue and saturation.

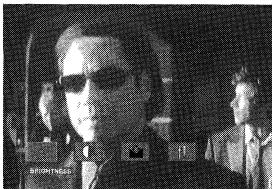

- 1 Press **◀▶** to highlight 'Brightness'.
- 2 Press **▼** to open the level bar.
- 3 Press **◀▶** to decrease or increase the brightness level.
- 4 Repeat steps 1 - 4 for adjusting the contrast, hue and saturation.
- 4 Press **OK** to exit.

## Preferences Menu


The options in the Preferences menu are: 'Audio', 'Subtitle', 'Disc Menu', 'Parental', 'Password', 'Default' and 'MP3/JPEG Nav'.

- 1 Press **STOP** twice.
- 2 Press **SYSTEM MENU** to enter the setup menu.
- 3 Press **▲▼** to select the 'Preferences' page.
- 4 Press **OK** to confirm.

## Parental

Some DVDs may have a parental level assigned to the complete disc or to certain scenes on the disc. This feature lets you set a playback limitation level. The rating levels are from 1 to 8 and are country dependent. You can prohibit the playing of certain discs that are not suitable for your children or have certain discs played with alternative scenes.

- VCD, SVCD, CD have no level indication, so parental control has no effect on those kinds of discs. This also applies to most illegal DVDs.

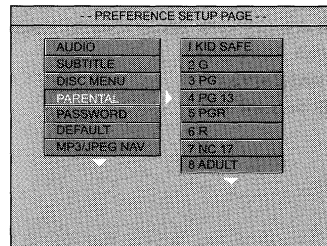

# DVD Menu Options

## Parental - cont'd

- 1 Press ▲▼ to highlight 'Parental'.
- 2 Enter its submenu by pressing ►.
- 3 Use ▲▼ to highlight a rating level for the disc inserted.  
→ DVDs that are rated above the level you selected will not play unless you enter your four-digit password and choose a higher level rating.  
→ To disable Parental controls and have all Discs play, choose 'No Parental'.
- 4 Press **OK**, then press ◀ to return to the Preferences Setup Page.

### Helpful Hint:

– Some DVDs are not encoded with a rating though the movie rating may be printed on the Disc cover. The rating level feature does not prohibit play of such Discs.

## Rating explanations

### 1KID SAFE - 2 G

– General Audience; recommended as acceptable for viewers of all ages.

### 3 PG

– Parental Guidance suggested.

### 4 PG13

– Material is unsuitable for children under age 13.

### 5 PGR - 6 R

– Parental Guidance - Restricted; recommended that parents restrict children under 17 from viewing or allow to view only when supervised by a parent or adult guardian.

### 7 NC-17

– No children under age 17; not recommended viewing for children under age 17.

### 8 ADULT


– Mature material; should be viewed only by adults due to graphic sexual material, violence or language.

### NO PARENTAL


– All discs will play.

## Password

This feature is used for Parental Control. Enter your four digit password to play a prohibit Disc or if prompt for a password. The default password is 1234.

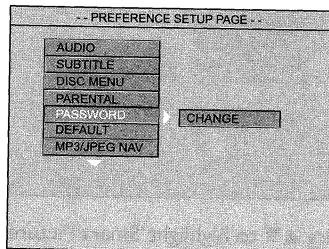

- 1 Press ▲▼ to highlight 'Password'.
- 2 Enter its submenu by pressing ►.
- 3 Press **OK** to open the password 'Change' page.

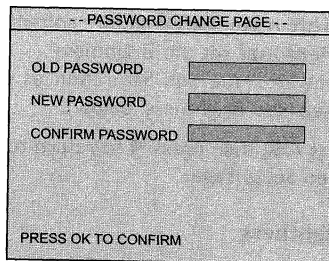

- 4 Enter your current password as the **OLD PASSWORD**. Use the numerical keypad (0-9) on the remote.
- 5 Enter a new four-digit code.
- 6 Enter the new four-digit code a second time to confirm.  
→ The new four-digit code will take effect.
- 7 Press **OK**, then press ◀ to return to the Preference Setup Page.


### Helpful Hints:

– If the new password has been set, the Parental and Disc Lock code will also be changed to new password. The default password won't take effect.  
– To reset the password to the default setting (1234), press **STOP** four times.

# DVD Menu Options

## Default

Setting the 'Default' function will reset all options to the factory defaults. Your personal settings will be erased.

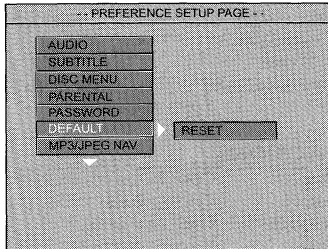


- 1 Press ▲▼ to highlight 'Default'.
- 2 Highlight RESET by pressing ►.
- 3 Press OK, then press ◀ to return to the Preference Setup Page.

### Caution!

– **When this function is activated, all settings will reset to factory defaults.**

## MP3/JPEG Navigator

This feature allows you to select alternate settings when you playback picture CDs (JPEG/DivX) and MP3 CDs.

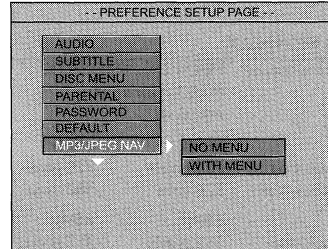

- 1 Press ▲▼ to highlight 'MP3/JPEG Nav'.
- 2 Enter its submenu by pressing ►.
- 3 Press ▲▼ to choose a setting.  
→ **No Menu:** playback all files in sequence automatically without a menu.  
→ **With Menu:** playback files in the selected folder within a menu.
- 4 Press OK, then press ◀ to return to the Preference Setup Page.

### Helpful Hints:

- MP3/JPEG Nav can be set to WITH MENU only if the disc was recorded with menu.
- It may not be available on some discs, even though it is set to 'WITH MENU'.

# Specifications

## TV STANDARD (PAL/50Hz) (NTSC/60Hz)

Number of lines	625	525
Playback	Multistandard	(PAL/NTSC)

## VIDEO PERFORMANCE

CVBS	1Vpp — 75
YPbPr	0.7Vpp — 75

## VIDEO FORMAT

Digital Compression	MPEG 2 for DVD,SVCD
	MPEG 1 for VCD
	MPEG-4

DVD	50Hz	60Hz
Horiz. resolution	720 pixels	720 pixels
Vertical resolution	576 lines	480 lines

VCD	50Hz	60Hz
Horiz. resolution	352 pixels	352 pixels
Vertical resolution	288 lines	240 lines

## AUDIO FORMAT

Digital	Mpeg/ AC-3/ PCM	compressed Digital 16, 20, 24 bits fs, 44.1, 48, 96 kHz
	MP3(ISO 9660)	96, 112, 128, 256 kbps & variable bit rate fs, 32, 44.1, 48 kHz

Analog Sound Stereo

Dolby Surround compatible downmix from Dolby Digital multi-channel sound

## AUDIO PERFORMANCE

DA Converter	24 bit	
DVD	fs 96 kHz	4Hz- 44kHz
	fs 48 kHz	4Hz- 22kHz
SVCD	fs 48 kHz	4Hz- 22kHz
	fs 44.1kHz	4Hz- 20kHz
CD/VCD	fs 44.1kHz	4Hz- 20kHz
Signal-Noise (1kHz)		95 dB
Dynamic range(1kHz)		85 dB
Crosstalk (1kHz)		>90 dB
Distortion+ noise (1kHz)		>80 dB
MPEG MP3	MPEG Audio L3	

## CONNECTIONS

YPbPr Output	Cinch 3x (red, green, blue)
Video Output	Cinch (yellow)
Audio Output(L+R)	Cinch (white/red)
Digital Output	1 coaxial, 1 optical
	IEC60958 for CDDA / LPCM
	IEC61937 for MPEG 1/2,
	Dolby Digital

## CABINET

Dimensions (w x h x d)	17.13 x 1.69 x 12.20 inch 435 x 43 x 235 mm
Weight	Approximately 4.18 pound Approximately 2.0 kg

## POWER CONSUMPTION

Power consumption in Standby mode	< 0.8W
-----------------------------------	--------

*Specifications subject to change without prior notice*




# Troubleshooting

## WARNING

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock.

If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy a problem by following these hints, please call [1-800-531-0039](tel:1-800-531-0039) for help.

Problem	Solution
<b>No power</b>	<ul style="list-style-type: none"><li>– Check if the AC power cord is properly connected.</li><li>– Press the STANDBY ON  on the front of the DVD Player to turn on the power.</li></ul>
<b>No picture</b>	<ul style="list-style-type: none"><li>– Refer to your TV's manual for correct Video In channel selection. Change the TV channel until you see the DVD screen.</li><li>– Check if the TV is switched on.</li></ul>
<b>Distorted picture</b>	<ul style="list-style-type: none"><li>– Sometimes a small amount of picture distortion may appear, depending on the disc being played. This is not a malfunction.</li></ul>
<b>Completely distorted picture or black/white picture with DVD</b>	<ul style="list-style-type: none"><li>– Connect DVD Player directly to the TV.</li><li>– Make sure the disc is compatible with the DVD Player.</li><li>– Ensure that the DVD Player's TV Standard is set to match that of the Disc and your TV.</li></ul>
<b>No sound or distorted sound</b>	<ul style="list-style-type: none"><li>– Adjust the volume.</li><li>– Check the audio cables and make sure both are connected secured to the TV or Stereo Audio In jacks.</li></ul>
<b>No audio at digital output</b>	<ul style="list-style-type: none"><li>– Check the digital connections.</li><li>– Check if your receiver can decode MPEG-2 or DTS. Make sure digital output is set to PCM Only.</li><li>– Check if the audio format of the selected audio language matches your receiver capabilities.</li></ul>
<b>Disc can't play</b>	<ul style="list-style-type: none"><li>– A DVD+R/CD-R must be finalized.</li><li>– Ensure the disc label is facing up.</li><li>– Check if the disc is defective by trying another disc.</li><li>– If you have recorded a Picture CD or MP3 CD yourself, ensure that your disc contains at least 10 pictures or 5 MP3 tracks.</li><li>– Check the Disc's Region Code. It must be 1 or ALL.</li></ul>
<b>Picture freezes momentarily during playback</b>	<ul style="list-style-type: none"><li>– Check the disc for fingerprints/scratches and clean with a soft cloth wiping from center to edge.</li></ul>
<b>No return to start-up screen when disc is removed</b>	<ul style="list-style-type: none"><li>– Reset the unit by switching the player off, then on again.</li></ul>

# Troubleshooting

Problem	Solution
<b>The player does not respond to the Remote Control</b>	<ul style="list-style-type: none"><li>- Aim the Remote Control directly at the sensor on the front of the player.</li><li>- Reduce the distance to the player.</li><li>- Replace the batteries in the Remote Control.</li><li>- Re-insert the batteries with their polarities (+/- signs) as indicated.</li></ul>
<b>Buttons do not work</b>	<ul style="list-style-type: none"><li>- To completely reset the player, unplug the AC cord from the AC outlet for 5-10 seconds.</li></ul>
<b>Player does not respond to some operating commands during playback.</b>	<ul style="list-style-type: none"><li>- Operations may not be permitted by the disc. Refer to the instructions of the disc jacket.</li></ul>
<b>DVD Player cannot read CDs/DVDs</b>	<ul style="list-style-type: none"><li>- Use a commonly available cleaning CD/DVD to clean the lens before sending the DVD Player for repair.</li></ul>
<b>Menu items cannot be selected</b>	<ul style="list-style-type: none"><li>- Press STOP twice before selecting the System Menu.</li><li>- Depending on the disc availability, some menu items cannot be selected.</li></ul>
<b>Unable to play DivX movies</b>	<ul style="list-style-type: none"><li>- Check that the DivX file is encoded in 'Home Theater' mode with DivX 5.x encoder.</li></ul>
<b>DVD Player upgrades</b>	<ul style="list-style-type: none"><li>- If a DVD does not play properly, contact Philips at 1-800-531-0339 for assistance. Due to the inconsistency of Disc formats provided by various Disc manufacturers, your DVD Player may require a playability enhancement. As DVD technology has advanced, these enhancements have become both common and easy to complete.</li></ul>

***If you are unable to remedy a problem by following these hints, contact Philips.***

**Analog:** Sound that has not been turned into numbers. Analog sound varies, while digital sound has specific numerical values. These jacks send audio through two channels, the left and right.

**Aspect ratio:** The ratio of vertical and horizontal sizes of a displayed image. The horizontal vs. vertical ratio of conventional TVs is 4:3, and that of wide-screens is 16:9.

**AUDIO OUT Jacks:** Red and white jacks on the back of the DVD Player that send audio to another system (TV, Stereo, etc.).

**Bit Rate:** The amount of data used to hold a given length of music; measured in kilobits per second, or kbps. Or, the speed at which you record. Generally, the higher the bit rate, or the higher the recording speed, the better the sound quality. However, higher bit rates use more space on a Disc.

**Chapter:** Sections of a movie or a music piece on a DVD that are smaller than titles. A title is composed of several chapters. Each chapter is assigned a chapter number enabling you to locate the chapter you want.

**Component Video Out Jacks:** Red, blue and green jacks on the back of the DVD System that send high-quality video to a TV that has Component Video In jacks (R/G/B, Y/Pb/Pr, YUV, etc.).

**Digital:** Sound that has been converted into numerical values. Digital sound is available when you use the DIGITAL AUDIO OUT (COAXIAL or OPTICAL) jacks. These jacks send audio through multiple channels, instead of just two channels as analog does.

**Disc menu:** A screen display prepared for allowing selection of images, sounds, subtitles, multi-angles, etc recorded on a DVD.

**Dolby Digital:** A surround sound system developed by Dolby Laboratories containing up to six channels of digital audio (front left and right, surround left and right, center and subwoofer).

**JPEG:** A very common digital still picture format. A still-picture data compression system proposed by the Joint Photographic Expert Group, which features small decrease in image quality in spite of its high compression ratio.

**MP3:** A file format with a sound data compression system. "MP3" is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. By using the MP3 format. One CD-R or CD-RW can contain about 10 times more data than a regular CD.

**Multichannel:** DVDs are formatted to have each sound track constitute one sound field. Multichannel refers to a structure of sound tracks having three or more channels.

**Parental Control:** Limits Disc play according to the age of the users or the limitation level in each country. The limitation varies from disc to disc; when it is activated, playback will be prohibited if the software's level is higher than the user-set level.

**PCM (Pulse Code Modulation):** A system for converting analog sound to digital sound for later processing, with no data compression used in conversion.

**Playback control (PBC):** Refers to the signal recorded on video CDs or SVCDs for controlling playback. By using menu screens recorded on a Video CD or SVCD that supports PBC, you can enjoy interactive playback and searching.

**Progressive Scan:** It displays all the horizontal lines of a picture at one time, as a single frame. This system can convert the interlaced video from DVD into progressive format when the DVD Player is connected to a Progressive Scan TV. It dramatically increases the vertical resolution and provides the best picture.

**Region code:** A system allowing discs to be played only in the region designated. This unit will only play discs that have compatible region codes. You can find the region code of your unit by looking on the product label. Some discs are compatible with more than one region (or ALL regions).

**S-Video:** Produces a clear picture by sending separate signals for the luminance and the color. You can use S-Video only if your TV has an S-Video In jack.

**Title:** The longest section of a movie or music feature on DVD. Each title is assigned a title number, enabling you to locate the title you want.

**VIDEO OUT jack:** Yellow jack on the back of the DVD Player that sends the DVD picture video to a TV.

# Limited Warranty

## Digital Video Disc Player

90 days Free Product Exchange / 91 days—One Year Reduced-Cost Exchange

### WHO IS COVERED?

You must have proof of the date of purchase to exchange your product. A sales receipt or other document showing the date that you purchased the product is considered such proof.

### WHAT IS COVERED?

Warranty coverage begins the day you buy your product. For 90 days thereafter, you may exchange the defective product for a free new or renewed product through Philips.

From 91 days to one year from the date of purchase, you will pay a preset exchange fee to obtain a new or renewed product. Follow the exchange procedures on the next page. This exchange opportunity ends one year after the date of purchase. The replacement product is covered only for the warranty period of the original product. When the warranty on the original product expires, the warranty on all replaced products also expires.

When it is necessary for you to ship the product to Philips for exchange, you will pay the shipping costs for shipment to Philips. Philips will pay the shipping costs when returning a product to you.

### WHAT IS EXCLUDED?

Your warranty does not cover:

- shipping charges to return defective product.
- labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- product repair and/or part replacement because of improper installation, abuse, neglect, misuse, accident, unauthorized repair or other cause not within the control of Philips.
- a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, prerecorded material, whether copyrighted or not copyrighted.)
- a product used for commercial or institutional purposes (including but not limited to rental purposes).

### WHERE IS EXCHANGE AVAILABLE?

Warranty exchange is available in all countries where the product is officially distributed by Philips. In countries where Philips does not distribute the product, the local Philips service organization will attempt to exchange the product, although there may be a delay if the appropriate product is not readily available.

### MAKE SURE YOU KEEP...

Please keep your sales receipt or other document showing proof of date of purchase. Attach it to the owner's manual

and keep both nearby. Also keep the original box and packing material in case you need to return your product.

### BEFORE EXCHANGING THE PRODUCT...

Please check your owner's manual before exchanging the product. Adjustments of the controls discussed there may save you time and money.

### LIMITATION OF LIABILITY AND REMEDY...

PHILIPS IS NOT LIABLE UNDER ANY CIRCUMSTANCES FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, HOWSOEVER INCURRED, EVEN IF NOTIFIED OF THE POSSIBILITY OF SUCH DAMAGES.

TO THE EXTENT PERMITTED BY LOCAL LAW, THE REMEDIES PROVIDED IN THIS WARRANTY STATEMENT ARE YOUR SOLE AND EXCLUSIVE REMEDY. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE/PROVINCE TO STATE/PROVINCE.

### TO EXCHANGE YOUR PRODUCT IN THE U.S.A., PUERTO RICO, OR U.S. VIRGIN ISLANDS...

FOLLOW THE INSTRUCTIONS STATED PREVIOUSLY IN THE "WHAT IS COVERED" SECTION, OR REFER TO THE EXCHANGE INSTRUCTIONS ON THE NEXT PAGE. IN THE U.S.A., PUERTO RICO, AND U.S. VIRGIN ISLANDS, ALL IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE SPECIFICALLY DISCLAIMED, AND TO THE EXTENT INCONSISTENT WITH LAW OF THE LOCALITY OF THE USER, LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY. BECAUSE SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY MAY LAST, THIS LIMITATION MAY NOT APPLY TO YOU.

### TO EXCHANGE A PRODUCT IN CANADA...

Please contact Philips at:

1-800-661-6162 (French Speaking)

1-800-531-0039 (English or Spanish Speaking)

In Canada, this warranty is given in lieu of all other warranties. There are no other warranties, express or implied, including any implied warranties of merchantability or fitness for a particular purpose.

### REMEMBER...

Please record below the model and serial numbers found on the product. Also, please fill out and mail your warranty registration card promptly. It will be easier for us to notify you if necessary.

MODEL # \_\_\_\_\_

SERIAL # \_\_\_\_\_

Philips, P.O. Box 520890, Miami, FL 33152 (402) 536-4171

EL6478E004 / 3-02

## Peräkkäispyyhkäisyn katkaiseminen manuaalisesti

Esille ilmestyy tyhjä näyttöruutu, jos peräkkäispyyhkäisytointo on aktivoitu, mutta TV:si ei tue peräkkäispyyhkäisytointoa tai YUV-kaapelia ei ole liitetty kunnolla. Voit katkaista peräkkäispyyhkäisytointon seuraavana kuvattulla tavalla:

- 1 Paina etupaneelin painiketta **STANDBY ON** kytkemään DVD-soitin.
- 2 Paina etupaneelin painiketta **OPEN/CLOSE** lepyväsän aukkaisemiseksi.
- 3 Paina numeronäppäintä **1**.  
→ TV:n näyttöruutuun ilmestyy sininen Philips DVD:n tausta.

## Para desactivar manualmente Progressivo

Se a função de varrimento progressivo está activada, mas a TV não suporta o varrimento progressivo ou o cabo YPbPr não se encontra devidamente ligado, aparecerá um ecrã em branco. Pode desactivar o varrimento progressivo como se segue:

- 1 Prima **STANDBY ON** no painel dianteiro para ligar o leitor de DVD.
- 2 Prima **OPEN/CLOSE** no painel dianteiro para abrir a gaveta do disco.
- 3 Prima o teclado numérico **'1'**.  
→ Aparecerá no ecrã da TV o fundo azul do DVD Philips.

## Deaktivere progressiv manuelt

Hvis den progressive funksjonen er aktivert men TV-en ikke støtter progressiv funksjon eller YUV-kabelen ikke er koblet som den skal, vil skjermen være tom. Du kan deaktivere den progressive funksjonen ved å følge instruksjonene nedenfor:

- 1 Trykk **STANDBY ON** på frontpanelet for å slå på DVD-spilleren.
- 2 Trykk **OPEN/CLOSE** på frontpanelet for å åpne plateskuffen.
- 3 Trykk på tasten **'1'**.  
→ Den blå Philips DVD-bakgrunnen vises på TV-skjermen.

## Dez aktywacja ręczną wybiera n1 kolejnoliniowego

Jeżeli tryb wybierania kolejnoliniowego jest włączony, ale odbiornik TV nie obsługuje tej funkcji lub kabel YUV jest niewłaściwie podłączony, pojawi się pusty ekran. Tryb wybierania kolejnoliniowego można wyłączyć w następujący sposób:

- 1 Naciśnij przycisk **STANDBY ON** na panelu przednim, aby włączyć odtwarzacz.
- 2 Naciśnij przycisk **OPEN/CLOSE** na panelu przednim, aby wysunąć szufladę odtwarzacza.
- 3 Naciśnij przycisk numeryczny **1**.  
→ Na ekranie odbiornika TV pojawi się niebieskie tło odtwarzacza DVD Philips.

Για να απενεργοποιήσετε μη αυτόματα την Προοδ. ευκτική σάρωση

Εάν η προοδ. ευκτική λειτουργία ενεργοποιηθεί, αλλά η τηλεόραση δε εν υποστηρίζει προοδ. ευκτική σάρωση ή εάν η σύζ. εστ. εν γίνει με το καλώζιο ΠΒΡ, θα εμφανιστεί κενή οθόνη. Μπορείτε να απενεργοποιήσετε την προοδ. ευκτική λειτουργία ως εξής:

- 1 Πατήστε το **STANDBY ON** που βρίσκεται στην πρόσψη για να θέσετε σε λειτουργία τη συσκευή αναπαραγωγής δίσκων DVD.
- 2 Πατήστε το **OPEN/CLOSE** που βρίσκεται στην πρόσψη για να ανοίξετε τη θήκη του δίσκου.
- 3 Πατήστε το **'1'** στο αριθμητικό πληκτρολόγιο.  
→ Το μπλε φόντο Πθμππ DVD εμφανίζεται στην οθόνη της τηλεόρασης

## Для де активизации ции прогрессивной ра зертки вручную

Если функция прогрессивной ра зертки активизирована, но телевизор не поддерживает эту функцию, или кабель YPbPr не подсоединен соответствующим образом, отобразится пустой экран. Де активизация ция прогрессивной ра зертки осуществляется следующим образом:

- 1 Нажмите **STANDBY ON** (Выход из режима ожидания) на передней панели включения проигрывателя DVD.
- 2 Откройте лоток для диска, нажмите на кнопку **OPEN/CLOSE** (Открыть/Закреть) на передней панели.
- 3 Нажмите цифровую клавишу **'1'**.  
→ На экране телевизора появится синий фон DVD Philips.

## İleri modunun manuel olarak devre dışı bırakılması

İleri işlevinin etkinleştirilmesine rağmen TV'niz İleri işlevini desteklemiyorsa veya YPbPr kablosu doğru biçimde bağlanmamışsa, ekranda görüntü olmaz. İleri işlevini aşağıdaki şekilde devre dışı bırakabilirsiniz:

- 1 DVD oynatıcıyı açmak için ön paneldeki **STANDBY-ON** butonuna basın.
- 2 Disk yükleme tepsisini açmak için ön paneldeki **OPEN/CLOSE** butonuna basın.
- 3 Rakamlı tuş takımında **'1'** tuşuna basın.  
→ TV ekranında mavi renkte Philips DVD arka planı gösterilir.

## Para desativar a função Progressivo manualmente

Se a função progressivo estiver ativada, mas sua TV não suportar esta função ou o cabo YPbPr não estiver ligado corretamente, aparecerá uma tela em branco. Você pode desativar a função progressivo como está descrito abaixo:

- 1 Aperte **STANDBY ON** no painel frontal para ligar o leitor de DVD.
- 2 Aperte **OPEN/CLOSE** no painel frontal para abrir a gaveta do disco.
- 3 Aperte a tecla numérica **"1"**.  
→ O fundo azul do DVD Philips aparece na tela da TV.

## To deactivate Progressive manually

If the progressive function is activated, but your TV does not support progressive function or YPbPr cable is not connected accordingly, there will be a blank screen. You can deactivate progressive function as below:

- 1 Press **STANDBY ON** on the front panel to switch on the DVD player.
- 2 Press **OPEN/CLOSE** on the front panel to open the disc tray.
- 3 Press numerical key pad '1'.  
→ The blue Philips DVD background appears on the TV screen.

## Pour désactiver le balayage progressif manuellement

Si la fonction de balayage progressif est activée, mais que votre téléviseur n'est pas compatible ou que le câble YUV n'est pas connecté correctement, l'écran restera vide. Vous pouvez désactiver la fonction de balayage progressif de la façon ci-dessous :

- 1 Appuyez sur le bouton **STANDBY ON** situé sur la façade du lecteur de DVD.
- 2 Appuyez sur le bouton **OPEN/CLOSE** situé sur la façade pour ouvrir le tiroir.
- 3 Appuyez sur la touche '1'.  
→ L'écran d'arrière-plan bleu du lecteur de DVD Philips apparaît sur le téléviseur.

## Manuelles Deaktivieren von Progressive

Wenn die Progressive-Funktion aktiviert ist, Ihr Fernsehgerät die Progressive-Funktion aber nicht unterstützt oder ein YUV-Kabel nicht entsprechend angeschlossen ist, wird ein leerer Bildschirm angetroffen. Sie können die Progressive-Funktion wie nachstehend deaktivieren:

- 1 Drücken Sie **STANDBY ON** auf dem vorderen Bedienfeld, um den DVD-Spieler einzuschalten.
- 2 Drücken Sie **OPEN/CLOSE** auf dem vorderen Bedienfeld, um die Disk-Lade zu öffnen.
- 3 Zifferntaste '1' drücken.  
→ Der blaue Philips DVD-Hintergrund erscheint auf dem Fernsehbildschirm.

## Om Progressive handmatig uit te schakelen

Als de progressive-functie ingeschakeld is maar uw tv ondersteunt de progressive-functie niet of de YPbPr-kabel is niet overeenkomstig aangesloten dan krijgt u een leeg scherm. U kunt de progressive-functie als volgt uitschakelen:

- 1 Druk op **STANDBY ON** op de voorkant om de dvd-speler in te schakelen.
- 2 Druk op **OPEN/CLOSE** op de voorkant om de disklade te openen.
- 3 Druk op cijfertoons '1'.  
→ De blauwe Philips dvd-achtergrond verschijnt op het tv-scherm.

## Para desactivar la exploración progresiva manualmente

Si la función de exploración progresiva o su televisor no admite la función de exploración progresiva o el cable YPbPr no está conectado de la forma correspondiente, aparece una pantalla en blanco. Puede desactivar la función progresiva de la forma siguiente:

- 1 Pulse **STANDBY ON** en el panel delantero para activar el reproductor de DVD.
- 2 Pulse **OPEN/CLOSE** en el panel delantero para abrir la bandeja de discos.
- 3 Pulse el botón numérico '1'.  
→ La pantalla de fondo azul de DVD de Philips aparece en la pantalla del televisor.

## Per disattivare manualmente la modalità Progressive

Se la funzione progressiva è attivata, ma il televisore non è compatibile oppure se il cavo YPbPr non è collegato correttamente, compare una schermata vuota. Per disattivare la funzione progressiva completare la seguente procedura:

- 1 Premere **STANDBY ON** sul pannello frontale per accendere il lettore DVD.
- 2 Premere **OPEN/CLOSE** sul pannello frontale per aprire il vassoio del disco.
- 3 Premere il tasto numerico "1".  
→ Sullo schermo del televisore compare lo sfondo blu Philips DVD.

## För att stänga av "progressive scan" manuellt

Om funktionen "progressive scan" är aktiverad men din TV inte stödjer denna funktion eller YPbPr-kabeln inte är ansluten korrekt, visas bara en svart skärm. Du kan stänga av funktionen "progressive scan" på följande sätt:

- 1 Tryck **STANDBY ON** på DVD-spelarens framsida för att sätta på den.
- 2 Tryck **OPEN/CLOSE** på DVD-spelarens framsida för att öppna skivslåden.
- 3 Tryck på sifvertangenten "1".  
→ Den blåa Philips DVD-bakgrunden visas på TV-skärmen.

## Sådan deaktiveres Fremad manuelt

Hvis fremadfunktionen aktiveres, men fjernsynet ikke understøtter denne funktion, eller YUV-kablet ikke er tilsluttet korrekt, giver det sort skærm. Fremad-funktionen deaktiveres som følger:

- 1 Tryk på **STANDBY ON** på frontpanelet for at tænde DVD-afspilleren.
- 2 Tryk på **OPEN/CLOSE** på frontpanelet for at åbne diskskuffen.
- 3 Tryk på '1' på det numeriske tastatur.  
→ Den blå Philips DVD baggrund kommer frem på fjernsynsskærmen.

## JPEG and MP3 simultaneous playback

- 1 Select a MP3 track and press **AUDIO**.  
→ 'Music Slide Show' appears on the TV screen.
- 2 Press **▲** to return to Root menu and select a picture file, then press **OK**.  
→ The picture will be played back in sequence together with MP3 music.
- 3 To quit simultaneous playback, press **STOP**.  
→ The picture and MP3 music playback will stop.

### Helpful Hints:

– If the disc menu doesn't appear on the TV screen, switch 'MP3/JPEG Navigator' to 'With Menu' (see page 32).

## Lecture simultanée de fichiers JPEG et MP3

- 1 Sélectionnez une piste MP3, puis appuyez sur **AUDIO**.  
→ Le message « Music Slide Show » s'affiche à l'écran du téléviseur.
- 2 Appuyez sur **▲** pour revenir au menu racine. Sélectionnez une image, puis appuyez sur **OK**.  
→ L'image est lue en boucle, parallèlement au fichier MP3.
- 3 Pour quitter le mode de lecture simultanée, appuyez sur **STOP**.  
→ La lecture de l'image et du fichier MP3 est interrompue.

### Conseils utiles :

– Si le menu du disque ne s'affiche pas à l'écran du téléviseur, passez du mode « MP3/JPEG Navigator » au mode « With Menu » (voir page 64).

## Gleichzeitige Wiedergabe von JPEG und MP3

- 1 Wählen Sie einen MP3-Titel aus, und drücken Sie **AUDIO**.  
→ Auf dem Fernsehbildschirm wird 'Music Slide Show' angezeigt.
- 2 Drücken Sie **▲**, um zum Hauptmenü zurückzukehren. Wählen Sie anschließend eine Bilddatei aus, und drücken Sie dann **OK**.  
→ Das Bild wird zusammen mit der MP3-Musik wiedergegeben.
- 3 Um die gleichzeitige Wiedergabe zu beenden, drücken Sie **STOP**.  
→ Die Wiedergabe von Bild und MP3-Musik wird angehalten.

### Hilfreiche Tipps:

– Wenn das Menü nicht auf dem Fernsehbildschirm angezeigt wird, wechseln Sie vom Modus 'MP3/JPEG Navigator' in den Modus 'With Menu' (siehe Seite 96).

## JPEG en MP3 gelijktijdig afspelen

- 1 Selecteer een MP3-nummer en druk op **AUDIO**.  
→ Op het tv-scherm verschijnt 'Music Slide Show'.
- 2 Druk op **▲** om terug te keren naar het hoofdmenu, selecteer een fotobestand en druk vervolgens op **OK**.  
→ De foto's worden op volgorde afgespeeld met MP3-muziek.
- 3 Druk op **STOP** om het gelijktijdig afspelen van muziek en foto's te beëindigen.  
→ Er worden geen foto's meer afgespeeld met MP3-muziek.

### Nuttige tips:

– Als het schijfmenu niet op het tv-scherm verschijnt, schakel dan over van 'MP3/JPEG Navigator' naar 'With Menu' (zie pagina 128).

## Reproducción simultánea de JPEG y MP3

- 1 Seleccione una pista de MP3 y pulse **AUDIO**.  
→ 'Music Slide Show' (Diapositiva de música) aparece en la pantalla de TV.
- 2 Pulse **▲** para volver al menú raíz, seleccione un archivo de imagen y, a continuación, pulse **OK**.  
→ La imagen se reproducirá en una secuencia acompañada de música en MP3.
- 3 Para detener la reproducción simultánea, pulse **STOP**.  
→ La reproducción simultánea de imagen y música MP3 se detendrá.

### Consejos útiles:

– Si el menú del disco no aparece en la pantalla de TV, cambie de 'MP3/JPEG Navigator' (Navegador MP3/JPEG) a 'With Menu' (Con menú). Consulte la página 128.

## Riproduzione simultanea JPEG e MP3

- 1 Selezionare un brano MP3 e premere **AUDIO**.  
→ Il messaggio 'Music Slide Show' compare sullo schermo del televisore.
  - 2 Premere **▲** per tornare al menu principale e selezionare un file immagine, quindi premere **OK**.  
→ L'immagine verrà riprodotta in sequenza insieme al brano musicale MP3.
  - 3 Per uscire dalla riproduzione simultanea, premere **STOP**.  
→ La riproduzione dell'immagine e del brano musicale MP3 verrà interrotta.
- Suggerimenti utili
- Se il menu del disco non viene visualizzato sullo schermo televisivo, posizionare 'MP3/JPEG Navigator' su 'With Menu' (vedere pagina 160).

## Samtidig oppspeling av JPEG och MP3

- 1 Välj ett MP3-spår och tryck på **AUDIO**.  
→ "Music Slide Show" (Musikbildspel) visas på tv-skärmen.
- 2 Gå tillbaka till huvudmenyn genom att trycka på **▲**, välj en bildfil och tryck på **OK**.  
→ Bildfilen spelas upp i sekvens med MP3-musiken.
- 3 Avsluta den samtidiga uppspelningen genom att trycka på **STOP**.  
→ Uppspelingen av bildfilen och MP3-musiken avslutas.

### Praktiskt tips:

– Om skivmenyn inte visas på TV-skärmen ändrar du inställning för MP3/JPEG Navigator till "With Menu" (Med meny) (se sidan 192).

## Samtidig afspilning af JPEG og MP3

- 1 Vælg et MP3-spør, og tryk på **AUDIO**.  
→ Der vises "Music Slide Show" (Diasshow med musik) på tv-skærmen.
- 2 Tryk på **▲** for at vende tilbage til rodmenuen, og vælg et billede. Tryk derefter på **OK**.  
→ Billedet afspilles i rækkefølge sammen med MP3-musik.
- 3 Hvis du vil afslutte samtidig afspilning, skal du trykke på **STOP**.  
→ Afspilning af billede og MP3-musik stopper.

### Nyttige tip:

– Hvis diskmenuen ikke vises på tv-skærmen, skal du skifte "MP3/JPEG Navigator" til "With Menu" (Med menu) (se side 224).

## JPEG-kuvien ja MP3-levyjen samanaikainen toisto

- Valitse MP3-raita ja valitse **AUDIO**.  
→ TV-ruutuun tulee teksti Music Slide Show (Musiikin diaesitys).
- Palaa alkuvälikköön painamalla X-painiketta, valitse sitten kuvaviedosto ja lopuksi **OK**.  
→ Kuva toistetaan nyt MP3-musiikin kanssa.
- Lopeta samanaikainen toisto valitsemalla **STOP** (LOPETUS).  
→ Kuvan ja MP3-musiikin toisto lopetetaan.

### Hyödyllisiä vihjeitä:

– Jos levyä valikko ei tule näkyviin TV-ruutuun, vaihda With Menu (Valikko) -asetus asetukseen MP3//PEG Navigator (MP3//PEG-navigaattori) (lisätietoja on sivulla 32).

## Reprodução simultânea JPEG e MP3

- Selecione uma faixa em MP3 e prima em **AUDIO**.  
→ 'Music Slide Show' (diapositivos de música) é apresentado no ecrã do televisor.
- Prima **▲** para voltar ao menu Root (raiz) e seleccionar um ficheiro de imagens e, em seguida, prima **OK**.  
→ A imagem é reproduzida em sequência com a música em MP3.
- Para parar a reprodução em simultâneo, prima **STOP**.  
→ A reprodução simultânea da imagem e do MP3 é interrompida.

### Sugestões úteis:

– Se o menu do disco não for apresentado no ecrã do televisor, mude para do 'MP3//PEG Navigator' (navegador MP3//PEG) para o 'With Menu' (C menu) (ver página 64).

## Jednoczesne odtwarzanie plików JPEG i MP3

- Wybierz utwor MP3 i naciśnij przycisk **AUDIO**.  
→ Na ekranie telewizora pojawi się napis 'Music Slide Show' (Muzyka + slajdy).
- Naciśnij przycisk **▲**, aby powrócić do menu głównego, po czym wybierz żądany plik graficzny i naciśnij przycisk **OK**.  
→ Rozpocznie się pokaz slajdów z jednoczesnym odtwarzaniem kolejnych nagrań MP3.
- Aby zakończyć jednoczesne odtwarzanie plików graficznych i muzycznych, naciśnij przycisk **STOP**.  
→ Wyświetlanie zdjęć i odtwarzanie utworów MP3 zostanie zakończone.

### Wskazówki:

– Jeśli na ekranie telewizora nie pojawia się menu płyty, wybierz dla pozycji 'MP3//PEG Navigator' (Now. MP3//PEG) ustawienie 'With Menu' (Z menu). Patrz strona 128.

## Ταυτόχρονη αναπαραγωγή JPEG και MP3

- Επιλέξτε ένα κομμάτι MP3 και πατήστε **AUDIO**.  
→ Στην οθόνη της τηλεόρασης εμφανίζεται το μήνυμα 'Music Slide Show' ("Προβολή παρουσίασης μετά μουσικής")
- Πατήστε **▲** για να επιτρέψετε στο "Root menu", επιλέξτε ένα αρχείο εικόνας και στη συνέχεια πατήστε **OK**.  
→ Η εικόνα θα αναπαραχθεί με τη σειρά παράλληλα με τη μουσική MP3.
- Για να σταματήσετε την ταυτόχρονη αναπαραγωγή, πατήστε **STOP**.  
→ Η αναπαραγωγή της εικόνας και της μουσικής MP3 θα σταματήσει.

### Χρήσιμες συμβουλές:

– Εάν το βασικό μενού του διακου δεν εμφανιστεί στ η οθόν η τ ρε τ η εορα σ ρε, ορίστε γ ια τον 'MP3//PEG Navigator' τ η επιλο'ή 'With Menu' ("Με μενού") (δείτε σελίδα 160).

## Одновременное воспроизведение JPEG и MP3

- Выберите ф а й л MP3 и ж м и т е **AUDIO** (Αυδιο).  
→ Η ε λ ε κ ρ ά не появится η δ λ ι σ ρ ις "Music Slide Show" (Μυζική λ η ν ο σ ρ α η δ - σ ο υ ).
- Η ж м и т е **▲** д л я в о з в ρ а τ а в к о ρ ν ο β ο ε м е н ю и выберите ф а й л изобр а ж е н и я, з а т е м ж м и т е **OK**.  
→ Изобр а ж е н и е б у д е т о т о б ρ а ж а т ь с я о д н о в ρ е м е н н о с в о с π ρ ο ι ζ в е д е н и е м м у з ы к и MP3.
- Д л я в ы х о д а из режим од н о в ρ е м е н н о г о в о с π ρ ο ι ζ в е д е н и я ж м и т е **STOP** (Στοπ).  
→ О т о б ρ а ж е н и е изобр а ж е н и я и в о s π ρ ο ι ζ в е д е н и е м у з ы к и MP3 о с т а н о в и т с я .

### Полезные советы:

– Если на телеэкране не появляется меню диска, установите "MP3//PEG Navigator" (Обозреватель MP3//PEG) в положение "With Menu" (C меню) (см. стр. 192).

## Reprodução simultânea JPEG e MP3

- Selecione uma trilha MP3 e pressione **AUDIO**.  
→ 'Music Slide Show' aparecerá na tela da TV.
- Pressione **▲** para retornar ao menu de raiz e, em seguida, selecione um arquivo de imagem e pressione **OK**.  
→ A imagem será reproduzida em sequência juntamente com a música MP3.
- Para sair da reprodução simultânea, pressione **STOP** (**PARAR**).  
→ A reprodução da imagem e da música MP3 parará.

### Dicas úteis:

– Se o menu do disco não aparecer na tela da TV, altere de 'MP3//PEG Navigator' para 'With Menu' (ver página 96).



# Limited Warranty (cont'd)

## EXCHANGE INSTRUCTIONS

To exchange your product with Philips (per the warranty conditions stated previously), remember:

- If you exchange the product within 90 days of the original purchase, there is no cost to you.\*
- If you exchange the product more than 90 days after but less than one year after the day of original purchase, contact Philips at 1-800-531-0039 to determine the preset cost for exchange.
- If you do not have your original sales receipt, or if you have any questions, call Philips at 1-800-531-0039.

To obtain a replacement product from Philips:

1. Contact Philips at 1-800-531-0039 to determine the cost for exchange.
2. Complete the Exchange Form below.
3. Pack the product and its accessories in the original box or a suitable alternative. You will receive replacement accessories with your replacement product. For packing details, call Philips at 1-800-531-0039.
4. Put the completed Exchange Form, a copy of the original sales receipt, and the proper payment amount into an envelope. DO NOT SEND CASH. Do not staple or clip these items together. Label the envelope "Return Documents Enclosed." Place this envelope in the box with the product.
5. Seal the box with packing tape and return the product via United Parcel Service (UPS), insured and freight prepaid, to:  
Philips Exchange Program  
Suite A  
406 North Irish Street  
Greenville, TN 37745  
ATTENTION: DVD EXCHANGE

A replacement will be sent to you via UPS within 48 business hours of Philips' receipt of the product.

*\*When it is necessary for you to ship the product to Philips for exchange, you will pay the shipping costs for shipment to Philips. Philips will pay the shipping costs when returning a product to you.*

---

## EXCHANGE FORM

Your Address (street address to which replacement should be delivered, no P.O. boxes allowed):

Name: \_\_\_\_\_  
Street Address: \_\_\_\_\_ Apt. #: \_\_\_\_\_  
City: \_\_\_\_\_ State/Province: \_\_\_\_\_ Zip Code/Postal Code: \_\_\_\_\_  
Phone (day): \_\_\_\_\_ Phone (night): \_\_\_\_\_

Exchange Fee: \_\_\_\_\_ + Sales Tax: \_\_\_\_\_ = Total: \_\_\_\_\_

Method of Payment: (Check one. Please, no cash or CODs.)

\_\_\_\_\_ Check/Money order      Check/Money order No. \_\_\_\_\_

	Account number	Expiration date
_____ American Express	_____	_____
_____ Visa	_____	_____
_____ Novus/Discover	_____	_____
_____ Mastercard	_____	_____

Signature: \_\_\_\_\_

Detailed reason for return, use additional paper if necessary: \_\_\_\_\_

Model Number \_\_\_\_\_ Serial Number \_\_\_\_\_

Remember, the return box should include the following:

- The product,
- Completed Exchange Form and sales receipt,
- Accessories supplied with the product, and
- Payment, if applicable.

**PHILIPS CONSUMER ELECTRONICS COMPANY**

A Division of Philips Electronics North America Corporation, Knoxville, Tennessee 37914-1810, USA

**DVP 640 • DVP 642**



8239 210 98531  
IB8461E001



*The products and services described herein are not necessarily available in all countries.*

*Due to continuous product improvements this document is subject to change without notice.*