

Register your product
and get support at
www.philips.com/welcome

SRP3004/53




EN User Manual

PHILIPS

Table of contents

 1	Your SRP3004	3
2	Getting started	4-7
	2.1 Inserting the batteries	4
	2.2 Setting up the universal remote control	4-7
3	Using the universal remote control	8-11
	3.1 Buttons and functions	8-10
	3.2 Resetting a button to its original function	10-11
4	Service and support	11-13
	4.1 Frequently asked questions	11-13
	4.2 Need help?	13
	Helpline	13
	Brandlist	14-29
	Information to the consumer	30
	Compliance with EMF	30
	Recycling and disposal	30
	Battery information	30

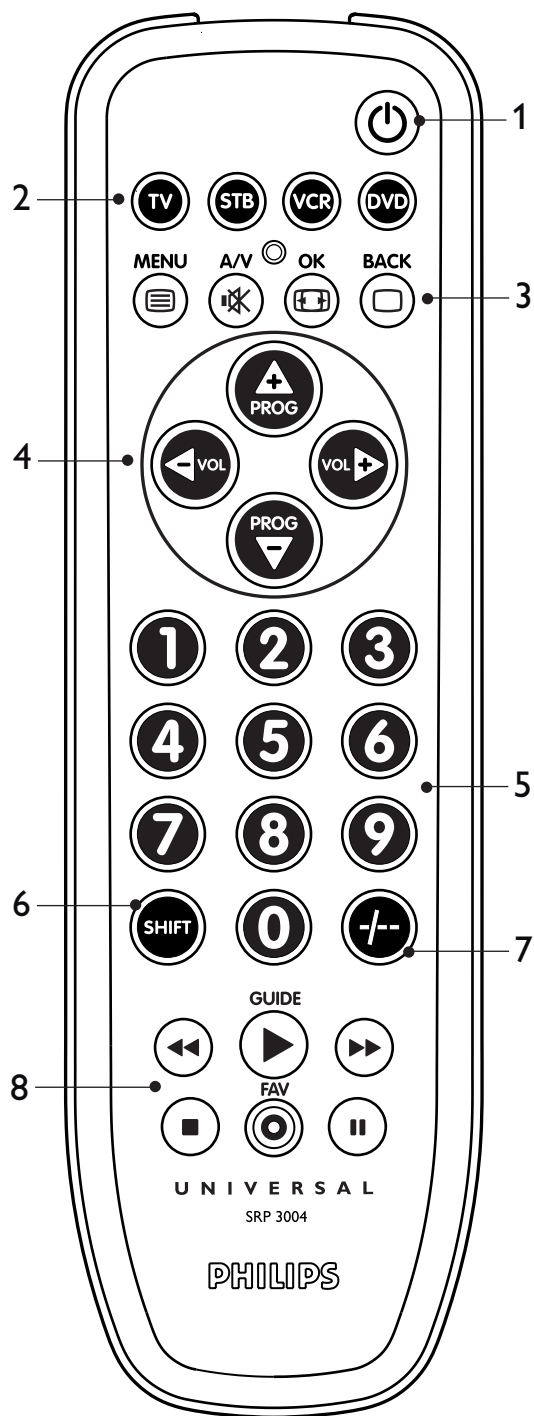

1 Your SRP3004

Congratulations on your purchase of the Philips SRP3004 universal remote control. After setting up the remote control you can operate up to 4 different devices with it.

Simple Setup

Improved with Philips patented (pending) Simple Setup technology, the SRP3004 can be set up easily for TV, DVD player / recorder, VCR and all common set-top boxes, such as Sky, British Telecom, Orange, Freebox, TNT, Canal Digital, Telefonica, Premiere, Kabel Deutschland, Belgacom TV, Telenet, Viasat and many more.

 
Simply follow the instructions in chapter 2.2 to set up the remote control for your devices.

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

2 Getting started

2.1 Inserting the batteries

- Insert 2 AAA type batteries, noting the + and - configuration in the battery compartment.

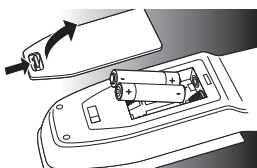

Note

When replacing the batteries, all user settings will be retained in the remote control memory for 5 minutes.

2.2 Setting up the universal remote control

The example below instructs you how to set up your universal remote control for your TV.


You can repeat the same steps for other devices (STB, DVD player/recorder and VCR) which you want to operate, using the SRP3004.

The remote control can be set up to operate any 4 of the following devices:

Device name	Description
TV	Traditional TV, flat screen TV and projection TV, TV part of TV / VCR, TV / VCR / DVD and TV / DVD combos
STB	Cable box, satellite receiver; Digital Video Broadcasting Terrestrial device (DVB-T), Internet Protocol TV (IPTV), Free To Air TV, High Definition Television decoder (HDTV)
DVD	DVD player / recorder (DVDR), DVD / Hard Disk Drive combination (DVDR-HDD), Blu-Ray player; High Definition DVD player (HD-DVD), DVD part of TV / DVD, TV / VCR / DVD and VCR / DVD combos
VCR	Video cassette player / recorder; VCR part of TV / VCR, TV / VCR / DVD and VCR / DVD combos

 
Example: setting up the universal remote control to operate your TV:

- 1 **Switch ON** the TV manually or use the original remote control for this. Tune to channel 1.


- 2 **Press and hold** the  device selection button **for 5 seconds** until it blinks twice and then remains lit.
 - The remote control is now in setup mode.



- 3 Look up the 4-digit code for your brand in the brand list at the back of this user manual. A four-digit code is shown for each brand.

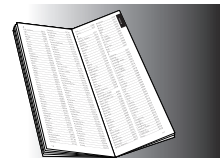



Use the digit buttons to enter the code for your brand:

- The  key will now blink twice and then remains lit.



 If the key blinks twice fast, the code has not been entered properly or the wrong code has been entered. In this case, try again.

 
- 4 Aim the remote control at the TV. **Press and hold** the  button. Release it **immediately** release it as soon the TV switches off.
 - This may take up to 30 seconds.

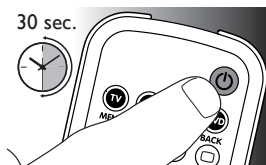

- 5 **Switch ON** the TV. Try out the buttons you need for operating it. Try, for example, if the **- PROG +** and digit buttons function properly.



- If a button does not work as expected, **press and hold** that button. Release it **immediately** as soon as it works. For more information, see chapter 2.2.2.

- 6 Press the  device selection button **twice** to finish setup.

- When no button is pressed for 2 minutes or more, the remote control will exit setup mode, automatically saving all your settings.






! Important

If you made a mistake:

- Press the device selection button **twice** to exit setup.
- Restart from the beginning.

- *If the device does not respond at all or not to all of the button commands or if you cannot find the code for your brand, enter '9, 9, 9, 9' in step 3 and continue with step 4. The remote control will now search its full database for a code that works with your TV. Full database search may take up to 15 minutes.*

2.2.1 Setting up the remote control for other devices (STB, DVD player / recorder and VCR)

- 1 Make sure the device is switched on and operational. E.g. insert a disc in the DVD player / recorder or a video cassette in the VCR.
- 2 Then follow steps 2 to 6 of 'Setting up the remote control for your TV'. Make sure to use the correct device selection button: ,  or .

2.2.2 Improving buttons

When correctly set up, the remote control should be able to operate all your devices. However, when using the remote control for the first time it might occur that some buttons do not yet function as expected.

In this case you can have the remote control search for alternatives.


≡ Note

Improving buttons is not possible when the code was found during full database search (with code '9, 9, 9, 9').



During initial setup

 
- 1 Make sure the receiving device is able to respond. E.g. when you try to repair the Play button for your DVD player, make sure to insert a DVD into the DVD player otherwise the Play button is not able to function.
- 2 Press the button that does not function, keep it pressed and **immediately** release it when the device responds. Repeat this for every button that does not function.
 - If the button still does not function as expected, try pressing it again for a longer period of time.

After initial setup

- 1 Make sure the receiving device is able to respond. E.g. when you try to repair the Play button for your DVD player, make sure to insert a DVD into the DVD player otherwise the Play button is not able to function.
- 2 Select the device you wish to operate (e.g. DVD). Press the  device selection button to select DVD.



- 3 Keep buttons  and  pressed **simultaneously for 5 seconds**.
 - The remote control is now in setup mode.

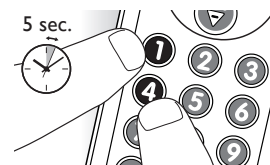

- 4 **Press and hold** the button that does not function and **immediately** release it when the device responds.
 - If the button still does not function as expected, try pressing it again for a longer period of time.

- 5 Press the  device selection button **twice** to save your settings and exit setup mode.
 - When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.



3 Using the universal remote control

3.1 Buttons and functions

The illustration on page 2 gives an overview of all buttons on the remote control. Try out the buttons you need for operating your devices.





Notes

- Buttons having the same functions as the buttons on your original remote control may have different namings on the SRP3004 (e.g. Info / Display).
- Only functions that are available on your original remote control can be used for operating your devices with the SRP3004.


1  switches the selected device on / off.


Note

For some TV brands / types, this button will only switch off the TV. You will have to press a digit button (direct channel selection) to turn on the TV again.


2     device selection buttons.


- select the device to be operated.
- light up when a remote control command is being sent.

3  DVD:


- switches the disc menu on and off.
- pressed together with : enters the system menu.


TV:


- switches teletext on/off.
- pressed together with : opens the TV menu.


VCR: pressed together with : opens the VCR menu.


STB:


- opens set-top box menu, Box office, List.
- pressed together with : switches teletext on/off.


 mutes the sound of the TV.

- pressed together with : selects external Audio/Video inputs.


 TV:

- selects wide screen TV (16:9).
- pressed together with : confirms your selection.

 
DVD: pressed together with : selects Play mode.

 - jumps back one level in the menu or turns off the menu.


- switches teletext off.

DVD: pressed together with : opens Showview


4



- **PROG +** - selects a previous or following channel / program.


- pressed together with : cursor up, down in a menu.

- **VOL +** - adjusts the TV volume.

- pressed together with : cursor left, right in a menu.

5



..... digit buttons for direct channel / track selection. Pressed together with :

1 TV: Info, Display.
DVD/STB: Info, Display, Title.

2 TV/VCR/DVD/STB: exits menu.


4 TV/DVD/STB: selects Subtitle.


5 TV: selects previous picture.
DVD: Recall.
STB: Last.

6 TV/VCR/DVD/STB: Sleep.

7 STB: *.

8 STB: #.

6  for extra functions. When pressed at the same time as a second key, the second key will get another function. Only functions featured on the original remote control are available.

7  selects between one and two-figure channel numbers and channel numbers with more than two or three figures.

8



- ◀..... TV: red fasttext key.
STB: Red, C.
VCR/DVD/STB: searches fast backwards.
- ▶ / GUIDE..... VCR/DVD: starts playback.
DVD: pressed together with : selects Electronic Program Guide.
STB: selects Electronic Program Guide. Pressed together with : starts playback.
- ▶▶..... TV: blue fasttext key.
STB: Blue, B. Pressed together with : searches fast forward.
VCR/DVD: searches fast forward.
- VCR/DVD: stops playback / recording.
TV: green fasttext key.
STB: Green, D. Pressed together with : stops playback.
- / FAV..... TV: white fasttext key.
VCR/DVD: starts recording. Pressed together with : starts recording.
STB: Favorites. Pressed together with : starts recording.
- ⏸..... TV: yellow fasttext key.
VCR/DVD: pause playback / recording.
STB: Yellow, A. Pressed together with : pauses playback.

3.2 Resetting a button to its original function

 
If an improved button (see chapter 2.2.2) still does not function as expected, you can always reset the button to its original function.

- In the current device mode, keep digit buttons **1** and **6** pressed *simultaneously for 5 seconds*.

- The remote control is now in setup mode.



- Press digit buttons **9**, **9**, and **6**, in that order.
 - After each button press the device selection button blinks once.

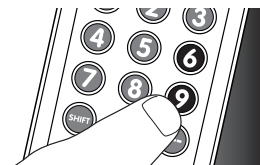

- Press the button you wish to reset **twice**. E.g. the **▶▶** button.
 - After each button press the device selection button blinks once.
 - The device selection button will blink one more time to confirm that the button was successfully reset to its original function.



4 Service and support

4.1 Frequently asked questions

In this chapter you will find answers to the most frequently asked questions about your universal remote control.

4.1.1 Setup

I cannot enter setup mode.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. For this see chapter 2.1. After replacing the batteries, test if the remote control still operates your devices. If it does not, you have to set up the remote control again. For this refer to chapter 2.2.

The brand code for my device is missing in the 'Shortlist of brands' in the Quick Start Guide.

The 'Shortlist of brands' only mentions the most common TV, STB, DVD player / recorder and VCR brands.

- You will find a complete brand list on page 14-29 of this user manual.
- Use '9999' as 4-digit code in case you cannot find your brand in the complete brand list. Note that using '9999' may result in a long setup (up to 15 minutes).

My TV switches OFF in step 4 but does not switch ON again in step 5.

TVs of some brands (e.g. Panasonic) only switch ON after a long press on one of the digit buttons. After a long button press in setup mode the remote control will start trying to improve the button (see chapter 2.2.2) instead of switching ON the TV.

- In this case, switch ON the TV manually or use the original remote control for this. Continue with step 6. After successfully completing setup, the remote control will switch ON the TV with a long button press on one of the digit buttons, just as your original remote control.

After setup, not all buttons work as expected.

- Try improving the button(s). See chapter 2.2.2.

How do I set the remote control for combo devices (TV / VCR, TV / DVD, DVD / VCR, etc)?

Some combo devices require you to set up two different source selection buttons to control both parts of the combo device. For example, if you have a TV / DVD combo, you might need to set up the remote control for both TV and DVD to operate your TV / DVD combo.

4.1.2 Operation

The remote control does not wake up anymore.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. For this see chapter 2.1. After replacing the batteries, test if the remote control still operates your devices. If it does not, you have to set up the remote control again. For this refer to chapter 2.2.

The device I want to operate does not respond at all / does not respond to all of the button commands.

- Check if the buttons you press are available on the original remote control of the device.
- Try improving buttons. See chapter 2.2.2.




Wrong code selected during setup.

- Set up the remote control again for the device. Always test if the device responds, before leaving setup mode.

It may be that the buttons that you are trying to use have a different naming on the original remote control.

- Try out all buttons to find the one(s) you need.

The Teletext buttons do not work.

- Find out whether your TV is equipped with Teletext.
- Try improving the Teletext buttons. See chapter 2.2.2.
- Check whether you are using the correct buttons to switch on Teletext. For TV this is the  button; for STB this is the  button, pressed together with .

4.1.3 Batteries

Will my settings be deleted when I replace the batteries?

No. All user settings will be retained in the remote control memory for 5 minutes.



Warning

The batteries should not be exposed to excessive heat such as sunshine, fire or the like.

4.2 Need help?

We advise you to first read this user manual carefully. It is provided to help you set up and use the remote control.

If, however, you require extra information or have additional questions about setup, usage, spare parts, warranty, etc. of the SRP3004, you can always contact us.

When calling our helpline, make sure to have the SRP3004 at hand when you call, so that our operators can help you determine whether the SRP3004 is working properly.

You will find our contact details at the end of this user manual.

The model number of your Philips universal remote control is SRP3004/53.

Date of purchase:

...../...../.....
(day/month/year)

For **online support** go to: www.philips.com/welcome.

- Click 'Support' and follow the on-screen instructions.



Helpline

Country	Phone number	Tariff
Ireland	01 601 1158	pstn
United Kingdom	0800 331 6015	free

@sat.....	0008 (DB1)	Alltech.....	0109	Atlantic.....	0233	Binatone.....	0378
1&1.....	3908	Alpha.....	0112	Atori.....	0237	Birmingham Cable	
4Kus.....	0005	Altai.....	3690	Atsat.....	0238 (DB1)	Communications....	0382
A		Ambassador.....	0120	Auchan.....	0240	Black Diamond.....	0384 (DB1)
A.R. Systems.....	0012	Amitech.....	0130	Audiosonic.....	0264	Black Panther Line.	4196
AB Sat.....	3689	Amitronica.....	0131	Audioton.....	0266	Black Star.....	0386
ABC.....	0013	Amoi.....	0132	Audix.....	0270 (DB1)	Blacktron.....	3526
Acme.....	3521	Ampere.....	0134	Aurora.....	0274	Blackway.....	0388
Acoustic Solutions.	0032 (DB1)	Amplivision.....	0138	Ausind.....	0276	Blaupunkt.....	0390
Acura.....	0036	Amstrad.....	0140	Austar.....	0277	Blue Media.....	3378 (DB1)
ADA.....	0038	AMW.....	0143	Autovox.....	0280	Blue Sky.....	0395
ADB.....	0039	Anam.....	0146	Avalon.....	0286	Blue Star.....	0396
ADC.....	0040	Anam National.....	0147	Avanit.....	4945 (DB1)	BlueH.....	3793 (DB1)
Addison.....	0043	Andersson.....	0148 (DB1)	Avious.....	0291	Boca.....	0399
Adelsound.....	0044	Andover.....	0149	AVM.....	0294	Boghe.....	0400
ADL.....	0045 (DB1)	Anglo.....	0151	Awa.....	0296	Bondstec.....	0403
Admiral.....	0046	Anitech.....	0154	Axiel.....	0297	Boots.....	0405
Advent.....	0054 (DB1)	Ankaro.....	0155	Axil.....	0298 (DB1)	Boston.....	0410
Adyson.....	0058	Ansonic.....	0156	Axis.....	0300	BPL.....	0413
AEG.....	0059	Anttron.....	0162	Axitronic.....	3608 (DB1)	Brainwave.....	0415
Aegir.....	0060	AOC.....	0165	Axxon.....	0303 (DB1)	Brandt.....	0416
Agashi.....	0063	Apex.....	3691	Ayomi.....	3525	Brimax.....	3797 (DB1)
Agazi.....	3522	Apollo.....	0171	B		Brinkmann.....	0423
AGB.....	0064	Arc En Ciel.....	0178	B&D.....	3609 (DB1)	Brionvega.....	0424
AGS.....	0067	Arcam.....	0179	Baird.....	0311	Britannia.....	0425
Aiko.....	0069	Arcam Delta.....	3524	Bang & Olufsen.....	0314	British Telecom.....	0427
Aim.....	0070	Arcelik.....	4791 (DB1)	Barcom.....	0320	Broadcast.....	0428
Airis.....	0071	Arcom.....	3736 (DB1)	BARON.....	3959	Broco.....	0431
Aiwa.....	0072	Arcon.....	0182	Basic Line.....	0325	Bruns.....	0435
Akado.....	3784 (DB1)	Ardem.....	0184	Bastide.....	0327	BskyB.....	0436
Akai.....	0074	Aristona.....	0192	Baur.....	0331	BSR.....	0437
Akiba.....	0078	Armstrong.....	0195	Baze.....	0334	BT.....	0438
Akito.....	0082	Arnion.....	0196 (DB1)	Bazin.....	0335	BT Cable.....	3995
Akura.....	0083	Arthur Martin.....	0200	BBK.....	0337	BT Satellite.....	3693
Alaron.....	0085	ASA.....	0202	BBT.....	0338	BT Vision.....	3742
Alba.....	0086	Asat.....	0204	Beijing.....	0345	BTC.....	0439
Alcatel.....	0089	Asberg.....	0205	Beko.....	0346	Bubu Sat.....	0440
Alcyon.....	0093	ASLF.....	0211	Belgacom TV.....	0349	Bush.....	0445
Aldes.....	0094	Asono.....	0212	Bell Atlantic.....	0351	BVV.....	0447
Alice.....	0098 (DB1)	AssCom.....	0215 (DB1)	Bellagio.....	0354	C	
Alize.....	0100	AST.....	0216	Belson.....	0355 (DB1)	Cabletime.....	0457
Alkos.....	3523	Astacom.....	0217	Benjamin.....	0358	Caihong.....	0462
Allantide.....	0102	Aston.....	0220	BenQ.....	0359	Cambridge.....	0469
Allegro.....	0103	Astra.....	0221	Beon.....	0361	Cambridge Audio...	0470
Allorgan.....	0105	Astro.....	0224	Best.....	0364	Cameron.....	4032
Allsat.....	0106	Asuka.....	0227	Best Buy.....	0365	Camundosat.....	0474
Allsonic.....	0107	Atacom.....	0228	Bestar.....	0368	Canal Digital.....	0476
Allstar.....	0108	Atec.....	0230 (DB1)	Bestar-Daewoo.....	0369	Canal Satellite.....	0477
		Atlanta.....	0232 (DB1)				

Canal+	0478	Colombia.....	0599	Daytron.....	0710	DNT.....	0816
Capsonic.....	0486	Columbia.....	0604	D-box.....	0682	Dongda.....	0820
Carad.....	0488	Columbus.....	0605	DCE.....	0713 (DB1)	Donghai.....	0821
Carena.....	0489	Com Hem.....	4561 (DB1)	DDC.....	0714	Dragon Systems.....	4830 (DB1)
Carrefour.....	0492	Comag.....	0606	De Graaf.....	0716	Drake.....	0825
Cascade.....	0496	Comcrypt.....	0610	DEC.....	0717	DREAMBOX.....	4392 (DB1)
Casio.....	0499	Commlink.....	0616	Decca.....	0718	Drean.....	0832
Cat.....	0500	Comtech.....	3776	Decsat.....	0719	DSE.....	0833
Catha.....	4094	Concorde.....	0626	Deitron.....	0722	DSTV.....	0835
Cathay.....	0501	Condor.....	0627	Delega.....	3697	DTS.....	0837
Catron.....	0502	Conia.....	0628	Denko.....	0730	Dual.....	0838
CCE.....	0504	Connexions.....	0631	Denon.....	0731	Dual-Tec.....	3528
Celestial.....	0511	Conrad.....	0633	Denver.....	0733	Dumont.....	0840
Centrex.....	0516	Conrad Electronic..	3695	Denzel.....	0734	Dune.....	0841
Centrum.....	0519	Conrowa.....	0634	Desay.....	0737	Duongjie.....	4101
Centurion.....	0520	Contec.....	0635	Desmet.....	0738	Durabrand.....	0842 (DB1)
Century.....	0521	Continental Edison	0637	Dew.....	0742	Dux.....	0843
CGE.....	0523	Cosat.....	0645	DGM.....	3566 (DB1)	D-Vision.....	0684
CGV.....	0524	Coship.....	0646	Dgtec.....	0745 (DB1)	DVX.....	0847
Changcheng.....	0526	Cosmel.....	0647	Diamant.....	0746	Dynasat.....	0852
Changfei.....	0527	Crosley.....	0655	Diamond.....	0747	Dynatron.....	0855
Changhai.....	0529	Crown.....	0658	DICRA.....	4938 (DB1)	Dynex.....	3476
Changhong.....	0530	Cryptovision.....	0661	Digatron.....	0751		
Channel Master.....	0531	CS Electronics.....	0663	Digitality.....	0755	E	
Chaparral.....	0533	CTC.....	0664	Digihome.....	0758 (DB1)	Easy Home.....	3700
Cherokee.....	0536	C-Tech.....	0449	Digiline.....	0759	Easy Living.....	0860 (DB1)
Chess.....	0538	CVG.....	3996	DigiLogic.....	0760 (DB1)	Echostar.....	0866
Chimei.....	3563	Cybercom.....	0671 (DB1)	Digipro.....	0762	Eclipse.....	0867
Chuangjia.....	4096	CyberHome.....	0672	DigiQuest.....	0763 (DB1)	E-Dem.....	3624
Chunfeng.....	0546	Cybermaxx.....	3696	Digital Device.....	0770 (DB1)	Edision.....	3392 (DB1)
Chung Hsin.....	0547	Cybertron.....	0675	Digitek.....	0779 (DB1)	Einhell.....	0875
Chunsun.....	0549	Cyfrowy Polsat.....	4341 (DB1)	Digitenne.....	4942 (DB1)	Elap.....	0877
Cimline.....	0552	Cyrus.....	0679	Digitor.....	0781	Elbe.....	0880
Cinetec.....	0560			Digiturk.....	0783	Elbe-Sharp.....	3529
CineVision.....	0562	D		DiK.....	0787 (DB1)	Elcatech.....	0882
Cisco.....	3801 (DB1)	Daenyx.....	0690	Dikom.....	3391 (DB1)	Elcit.....	0883
City.....	0569	Daeryung.....	0691	DirecTV.....	0794 (DB1)	Electa.....	3530
CityCom.....	0570	Daewoo.....	0692	Discoverer.....	0796	ELECTRO TECH.....	3531
Clarivox.....	0576	Dainichi.....	0694	Discovery.....	0797	Electrohome.....	0890
Classic.....	0580	Dansai.....	0699	Diseqc.....	3698	Electus.....	0894
Clatronic.....	0581	Dansat.....	0700	DishTV.....	0801 (DB1)	Elekta.....	0895
Clayton.....	0582 (DB1)	Dantax.....	0702	Diskxpress.....	0802	Elektra.....	0896
Clyde.....	0588	Darty.....	4266 (DB1)	Distratel.....	0804	Element.....	3477
Clyde Cablevision..	3694	Darty Box.....	4228	Distrisat.....	0805	Elfunk.....	0899 (DB1)
CMR.....	4694 (DB1)	Datron.....	4201	Ditristrad.....	3699	ELG.....	0900
CMS.....	0590	Datsura.....	0703	Dixi.....	0807	Elin.....	0902
CMS Hightec.....	0591	Dawa.....	0707	DK Digital.....	0808	Elite.....	0903
CNT.....	0594	Daytek.....	0708	DMTech.....	0813	Elmak.....	0907
Coby.....	0597	Dayton.....	0709	DNR.....	0815	Elonex.....	4019 (DB1)

Elsat.....	0908	Filmnet Comcrypt..	3702	Genexxa	1097	Harting und Helling	1201
Elsay	0909	Filsai	1000	Gericom.....	1103	Harwood	1204
Elta.....	0910	Finlandia.....	1003	GFM.....	3820	Hase & Igel	1205
Emanon	0913	Finlux.....	1004	Giant.....	1113	Hathw@y.....	3399 (DB1)
Emerson.....	0917	FinnSat.....	1005	Giec	1115	Hauppauge	1206
Emme Esse	0919	Fintec	1006	Global Solutions	1120	HB	1209 (DB1)
e-motion.....	3496 (DB1)	Firstline.....	1008	Global Sphere.....	1121	HCM.....	1210
Emperor.....	0921	Fisher.....	1009	Globo	1122 (DB1)	Heliocom.....	1218
eMTech.....	3626 (DB1)	Flair Mate.....	1010	GMI.....	1124	Helium.....	1220
Engel.....	0929	Flint	1014	Go Video.....	1126	Hema	1222
Enzer	0934	FNR	1016	Gold	3823 (DB1)	Hemmermann.....	1223
EP Sat.....	0935	Formenti	1023	Gold Box.....	1131	Henss.....	1224 (DB1)
Epson.....	0937	Formenti-Phoenix..	1024	Golden Channel	1133	Hifivox.....	1233
Erres.....	0942	Fortress	1027	GoldHand	1136	Higashi.....	1234
ESC	0945	Foxtel.....	1029	Goldline.....	1138	Highline.....	1236
Etron	0949	Fraba	1030	GoldStar.....	1140	Hikona.....	1237
Etzuko.....	4203	Fracarro.....	1032 (DB1)	Gooding.....	1141	HiLine	3533
Eurieult.....	0950	France Satellite/TV.	3703	Goodmans.....	1142	HiMAX	1241
Eurocrypt.....	0952	France Telecom	1033	Gorenje.....	1144	Hinari.....	1243
Eurodec.....	0953	Free.....	4157	GPM.....	1149	Hirschmann.....	1246
Eurofeel.....	0954	Freebox	1036	Gradiente.....	1151	Hisawa.....	1247
EuroLine.....	0955	Freecom.....	1037	Graetz	1152	Hisense	1249
Euroman.....	0956	Freesat.....	1038	Gran Prix.....	1153 (DB1)	Hitachi.....	1251
Europa.....	0957	Friac	1040	Granada.....	1154	Hitachi Fujian.....	1252
European	0958	Frontech.....	1042	Grandin.....	1156	Hitsu.....	1257
Europhon.....	0959	FTE	1043	Great Wall.....	4105	HNE.....	1260
Eurosat.....	0962	FTEmaximal.....	1044	Gronic	1160	Hoeher	1262
Eurosky	0963	Fuba.....	1045	Grothusen.....	1161	Hoher.....	4504 (DB1)
Eurospace.....	0964	Fugionkyo	1046	Grundig.....	1162	Home Tech Industries	
Eurostar	0965	Fujicom.....	1048 (DB1)	Grunkel.....	1164	1266
Eutelsat	0967	Fujitsu.....	1052	G-Sat.....	1067	Homecast.....	1268
Eutra.....	0968	Fujitsu General	1053	GVG	1169	HomeChoice.....	1269
Evesham	0972 (DB1)	Fujitsu Siemens.....	1054 (DB1)			Hongmei.....	1272
Exator.....	0974	Funai	1056			Hornet.....	1276 (DB1)
Expert.....	0976					Hornyphon.....	1277
Exquisit.....	0978					Hoshai.....	1278
		G				Houston.....	1280
		Galaxi.....	1068			Huafa.....	1287
		Galaxis.....	1069			Huanghai mei.....	1288
		Galaxisat.....	1070			Huanghe.....	1289
		Gardiner.....	1073			Huanglong.....	1290
		GBC.....	1078			Huangshan.....	1291
		GbSAT.....	1079 (DB1)			Huanyu	1292
		Geant Casino	1082			Huari.....	1294
		GEC.....	1083			Hughes Network Systems	
		Geloso.....	1087			1296 (DB1)
		General.....	1090			Hugoson	1297 (DB1)
		General Instrument	1093			Hujiaban.....	4108
		General Satellite.....	1094 (DB1)			Humax.....	1298
		General Technic	1095				
				H			
				H&B.....	3635		
				Haaz.....	1172		
				Haensel & Gretel...	1173		
				Haier.....	1175		
				Haihong.....	1176		
				Halifax.....	1179		
				Hallo.....	4563 (DB1)		
				Hampton	1183		
				Hanns.G	3478 (DB1)		
				Hannspree	1189 (DB1)		
				Hanseatic.....	1190		
				Hantarex.....	1192		
				Hantor.....	1193		
				Hanuri.....	1194		
				Harman/Kardon.....	1198		

Huth..... 1305
 Hygashi 1308
 Hyper..... 1309
 HyperVision 1311
 Hypson 1312
 Hyundai 1315

I

Iberia 1320
 ICE..... 1324
 ICeS..... 1325
 ID Digital..... 1329
 Iekei..... 1332 (DB1)
 IISonic..... 1334 (DB1)
 Iiyama..... 1335 (DB1)
 Imex..... 1344
 Impego..... 4207
 Imperial..... 1346
 Indesit..... 1349
 Indiana..... 1350
 Indovision 1351 (DB1)
 Ingelen..... 1354
 Ingersol 1355
 Inno Hit..... 1358
 Innovation 1360
 Interactive..... 3534
 Interbuy 1376
 Interfunk..... 1377
 Internal..... 1379
 International..... 1380
 Interstar 1383
 Intertronic..... 1384
 Intervision..... 1386
 InVideo..... 1388
 IR..... 4110
 Irradio..... 1396
 Isukai..... 1402
 ITC..... 1404
 ITS..... 1405
 ITT..... 1406
 ITT Nokia..... 1407
 ITV..... 1408

J

Janeil 1414
 JEC..... 1426
 Jepsen 1430 (DB1)
 Jerrold..... 1431
 JGC..... 1434 (DB1)

Jiahua..... 1435
 Jinhai 1439
 Jinxing..... 1442
 Johansson..... 1449
 JOK..... 1451
 JSR 1459
 JVC..... 1464

K

Kabel Deutschland. 1468
 Kabel Digital..... 4448 (DB1)
 Kaisui 1471
 Kamm 1474
 Kamosonic 3535
 Kamp..... 1475
 Kangchong..... 1476
 Kanghua..... 1477
 Kangwei 4115
 Kansai..... 1480
 Kansas Technologies
 1481 (DB1)
 Kaon 1482 (DB1)
 Kapsch 1483
 Karcher..... 1484
 Kathrein 1486
 Kathrein Eurostar... 3707
 Kawa..... 1487
 Kawasho..... 1489
 Kendo 1500
 Kennedy 1504
 Kennex..... 1505
 Kenwood 1507
 Key West..... 1509
 KeyPlug 3646
 KIC..... 1512
 Kiiro 1513
 Kingavon..... 1519
 Kingsley 1520
 Kiota 1522
 Kiss 1524
 Kiton 1525
 Klap 1526
 Kneissel 1535
 Koda 1539
 Kolin..... 1541
 Kolon..... 1542
 Kolster 1543
 Konig..... 1547
 Konka..... 1548

Korpel..... 1552
 Korting..... 1554
 Kosmos..... 1557
 Koyoda..... 1561
 KPN 4941 (DB1)
 KR..... 1562
 Kreiling..... 1566 (DB1)
 Kreiselmeier 1567
 K-SAT..... 1467
 KTV..... 1572
 Kuro..... 1579
 KXD 1581
 Kyoshu..... 1583
 Kyostar 1584
 Kyoto..... 1585

L

L&S Electronic 1588
 Lafayette..... 1591
 LaSAT 1597
 Lawson..... 1603
 Layco..... 4117
 Lecson..... 1606
 Leiko..... 3840 (DB1)
 Lemon..... 1614
 Lenco 1615
 Leng..... 3708
 Lennox..... 1616
 Lenoir 1617
 Lenoxx..... 1618 (DB1)
 Lenson..... 1620
 Lesa..... 1622
 Lexus..... 3649
 Leyco 1627
 LG..... 1628
 LG Alps..... 1629
 LG/Goldstar..... 3536
 Liesenk 3537
 Liesenk & Tter..... 1630
 Liesenkotter 1631
 Life..... 3538
 Lifesat..... 1632
 Lifetec 1633
 Limit..... 1637
 Linsar..... 4564 (DB1)
 Lion..... 1643
 Listo..... 3406 (DB1)
 LiteOn..... 1645
 Lloyds..... 3539

Local India TV..... 1653
 Lodos..... 1659 (DB1)
 Loewe..... 1660
 Loewe Opta..... 3540
 LogicLab..... 3650
 Logik..... 1661
 Logisat..... 4850 (DB1)
 Lorenzen..... 1666
 Lorraine..... 1669
 Luma 1674
 Lumatron..... 1676
 Lupus 1678
 Lux May..... 1680
 Luxor 1683
 Lyonnaise..... 3709

M

M&B..... 1691
 M/A Com..... 4229
 Macab 1692
 Madison 1698
 Magnadyne 1702
 Magnafon 1703
 Magnavox 1706
 Magnex 1707
 Magnum 1709
 Majestic..... 1713
 Maligne TV 4851 (DB1)
 Manata 1716
 Mandor..... 1717
 Manesth..... 1718
 Manhattan 1719
 Maqma..... 1722 (DB1)
 Marantz..... 1724
 Marelli..... 1729
 Mark 1731
 Marquant 1734
 Mascom..... 1738
 Maspro..... 1739
 Master's..... 1742
 Masuda..... 1744
 Matav 1745
 Matsui 1750
 Matsushita 1751
 Max..... 1753
 Maxdome..... 3586
 Maxim..... 1759 (DB1)
 MB..... 3711
 MBO 1765 (DB1)

McMichael.....	1768	MTC.....	1889	Nimbro.....	4065 (DB1)	Orsowe.....	2116
MDS.....	1772 (DB1)	MTEC.....	1890	Noblex.....	2013	Osaki.....	2118
Mecotek.....	1776	MTlogic.....	1892	Nobliko.....	2014	OSAT.....	2119
Mediabox.....	1779	Mudan.....	1896	Nogamatic.....	2016	Osio.....	2121
Mediacom.....	1780	Multichoice.....	1900	Nokia.....	2017	Oso.....	2122
Mediamarkt.....	1781	Multistandard.....	1904	Nomex.....	2018	Osume.....	2123
MediaSat.....	1782	Multisystem.....	4121	Noos.....	2019	Otto Versand.....	2126
Mediator.....	1784	Multitec.....	1906	Nordic.....	2021	Oulin.....	4123
Mediencom.....	1786 (DB1)	Multitech.....	1907	Nordmende.....	2022	Oxford.....	2131
Medion.....	1787	Muratto.....	1910	Nordvision.....	3543		
Medison.....	1788	Murphy.....	1911	Normerel.....	2024	P	
Mega.....	1789	Musikland.....	1915	Northcoast.....	2026	P&B.....	2132
MegaDrive.....	4297 (DB1)	Mustek.....	1916	Nova.....	2031	Pace.....	2134
Melectronic.....	3654	Mx Onda.....	1919	Novaplex.....	2034	Pacific.....	2135
Melvox.....	1799	Myrica.....	3946 (DB1)	Novatronic.....	2035	Packsat.....	2139
Memorex.....	1800	Mysat.....	1923	Novis.....	2036	Pael.....	2140
Memphis.....	1802	Mystral.....	1925	NTC.....	2045	Palcom.....	2144
Mercury.....	1804			NTL.....	2047	Palladium.....	2145
Metronic.....	1809	N		Nu-Tec.....	2048	Palsat.....	2146
Metz.....	1810	NAD.....	1926			Palsonic.....	2147
MiCO.....	1813	Naiko.....	1930	O		Panama.....	2149
Micro Com.....	3998	Nakamichi.....	1932	Oceanic.....	2061	Panasat.....	2151
Micro Electronic.....	3656	Nakamura.....	1933	Octagon.....	2062	Panasonic.....	2153
Micro Technology.....	1820	NanoXX.....	4045 (DB1)	Okana.....	4122	Panavision.....	2154
Micromaxx.....	1822	Naonis.....	1936	Okano.....	2065	Panda.....	2155
Micromedia.....	1823	National.....	1942	Omni.....	2074	PARK.....	3951 (DB1)
Micromega.....	1824	National Panasonic.....	4661	ONCEAS.....	3544	Pathe Cinema.....	2168
Microspot.....	3849 (DB1)	Navex.....	1944	Onida.....	2081	Pathe Marconi.....	2169
Microstar.....	1827	NEC.....	1950	Onimax.....	2082	Patriot.....	2170
Microtec.....	1828	Neckermann.....	1951	Onkyo.....	2085	Pausa.....	2171
Migros.....	1832	NEI.....	1952	Onn.....	3663 (DB1)	peeKTon.....	2178
Mikomi.....	1833 (DB1)	Nesco.....	1960	Ono.....	2086	Pensonic.....	3778
Minato.....	1835	Netsat.....	1966	Onwa.....	2087	Perdio.....	2185
Minax.....	1836	Network.....	1968	Onyx.....	3864 (DB1)	Perfekt.....	2186
Minerva.....	1838	Neuf Telecom.....	3999	Oopla.....	2088	Philco.....	2192
Minoka.....	1840	Neufunk.....	1970	Opera.....	2090	Philharmonic.....	2194
Minowa.....	1843	Neuhaus.....	1971	Optex.....	2093	Phillips.....	2195
Mirai.....	1849 (DB1)	Neuling.....	1972 (DB1)	Optim.....	2094	Phillips Magnavox.....	3715
Mitsubishi.....	1855	Neusat.....	1974	Optus.....	2100	Phocus.....	2198 (DB1)
Mivar.....	1857	Nevir.....	1977	Orange.....	3866	Phoenix.....	2199
Mizuda.....	1860	New Tech.....	1979	Orava.....	2101	Phonola.....	2201
MNET.....	1862	New World.....	1980	Orbit.....	2103	Phonotrend.....	2202
Monyka.....	1873	Next Base.....	1983	Orbitech.....	2104	Pioneer.....	2212
Morgan Sydney.....	3712	Next Wave.....	3777	Origo.....	2110	Pionier.....	2213
Morgan's.....	1875	Nicamagic.....	1994	Orion.....	2111	Plantron.....	2219
Motion.....	1877	Nikai.....	4566 (DB1)	Oritron.....	2112	Playsonic.....	2224
Motorola.....	1878	Nikkai.....	1998	Orline.....	2113	Plu2.....	2225 (DB1)
Movie Time.....	1880	Nikkei.....	1999 (DB1)	Ormond.....	2114	Pointer.....	2229
Mr Zapp.....	3713	Nikko.....	2000	Orson.....	2115	Polaroid.....	2230

Polsat.....	3716	RadioShack.....	2333	Sakura.....	2441	Serino.....	2539
Poppy.....	2236	Radiotone.....	2334	Salora.....	2443	Servi Sat.....	3721
Portland.....	2238	Radix.....	2335	Sambers.....	2445	Shanghai.....	2547
Powerpoint.....	2241	Rainbow.....	2339	Sampo.....	2446	Shanshui.....	4133
Prandoni Prince.....	4125	Raite.....	2340	Samsung.....	2448	Shaofeng.....	2549
Precision.....	2244	Rank.....	2345	Samurai.....	2451	Sharp.....	2550
Predki.....	2245	RBM.....	2350	Sandra.....	2454	Shencai.....	2553
Preisner.....	2246	RCA.....	2351	Sansui.....	2458	ShengCai.....	4217
Premiere.....	3666	Rebox.....	2356 (DB1)	Sanwa.....	2461	Shenyang.....	2555
Priesner.....	3717	REC.....	2357	Sanyo.....	2462	Sherwood.....	2557
Prima.....	2253	Recor.....	2359	Sanyuan.....	2464	Shinelo.....	4074 (DB1)
PrimeView.....	3513 (DB1)	Rectiligne.....	2362	SAT.....	2470	Shintom.....	2563
Prinz.....	2260	Red Star.....	3669	Sat Control.....	2471 (DB1)	Shintoshi.....	2564
Pro Basic.....	3593 (DB1)	Rediffusion.....	2364	Sat Cruiser.....	2472	Shivaki.....	2567
Pro2.....	2265 (DB1)	Redpoint.....	2365	Sat Partner.....	2473	Shorai.....	2569
Profekt.....	4126	Redstar.....	2366	Sat Team.....	2474	Siam.....	2572
Profex.....	2269	Reflex.....	2368	Satbox.....	2476	Siarem.....	2573
Profile.....	2271	Regency.....	2371	Satcom.....	2477	Siemens.....	2574
Profilo.....	2272	Relisys.....	2374 (DB1)	Satec.....	2479	Siera.....	2576
Profitronic.....	2273	Render.....	4072 (DB1)	Satel.....	2480	Siesta.....	2577
Proline.....	2274	Reoc.....	2379	Satelco.....	2481	Sigmatek.....	2580
Promax.....	2275	Revox.....	2383	Satford.....	2483	Silva.....	2591
Prosat.....	2278	Revoy.....	2384	Satline.....	2484	Silva Schneider.....	2592
Proson.....	2281 (DB1)	Rex.....	2385	Satmaster.....	2485	Silver.....	2594
Prosonic.....	2282	RFT.....	2386	Satplus.....	2486	Singer.....	2599
Protech.....	2284	Rhapsody.....	2387	Saville.....	2491	Sinudyne.....	2601
Protek.....	2285	Rimax.....	2391	SBR.....	2492	Skantic.....	2605
ProVision.....	2291	Ritar.....	4718 (DB1)	ScanMagic.....	2496	Skantin.....	2606
PVP Stereo Visual Matrix.....	2301	R-Line.....	2327	Schacke.....	3720	Skardin.....	2607
Pye.....	2302	Roadstar.....	2398	Schaub Lorenz.....	2500	Skinsat.....	3722
Pyle.....	2303 (DB1)	Robotron.....	2401	Schneider.....	2501	SKR.....	2608
Pymi.....	2304	Roch.....	2402	Schoentech.....	3504 (DB1)	SKY.....	2610
Pyxis.....	2305	Rockdale.....	2403	Schwaiger.....	2502	Sky Digital.....	3723
Q		Ronin.....	2412	Scientific Atlanta.....	2503	Sky Germany.....	4443 (DB1)
Quadril.....	2314	Rover.....	2415	Scientific Labs.....	2504	SKY Italia.....	2612 (DB1)
Quandra Vision.....	3546	Rowa.....	2416	Scott.....	2508	SkyCable.....	2617
Quasar.....	2320	Rownsonic.....	2417	SCS.....	2510	Skymaster.....	2621
Quelle.....	2322	Royal.....	2419	Sedeae Electronique.....	2518	Skymax.....	2622
Questa.....	2324	Royal Lux.....	2420	Seeltech.....	2519	SkySat.....	2625
Quiero.....	3718	RTF.....	3548	Seemann.....	2521	Skyvision.....	2630
R		S		SEG.....	2522	Skyworth.....	2631
Radialva.....	2329	SAB.....	2428 (DB1)	SEI.....	2524	SL.....	2632
Radio.....	4128	Saba.....	2429	Sei-Sinudyne.....	2525	Slim Art.....	2636
Radiola.....	2330	Sabaki.....	2430	Seitech.....	3433 (DB1)	SM Electronic.....	2639
Radiomarelli.....	2331	Sabre.....	2431	Seleco.....	2528	Smart.....	2642
Radionette.....	2332	Sagem.....	2434	Sencora.....	2531	S-Media.....	3515 (DB1)
		Saisho.....	2437	Sentra.....	2534	Sogera.....	2649
		Saivod.....	2439	Sentron.....	4216	Solavox.....	2654
				Septimo.....	2536	Sonawa.....	2663

Songdian.....	4136	Supervision.....	2791	Teco.....	2886	Tioko.....	2989
Soniko.....	2669	Supra.....	2792	Tedelex.....	2889	Tiscali.....	3442
Sonitron.....	2671	Supratech.....	2793 (DB1)	Tee-Comm.....	2890	Tividi.....	3443 (DB1)
Sonneclair.....	2673	Susumu.....	2797	Teknika.....	2895	Tivo.....	2991 (DB1)
Sonoko.....	2675	Sutron.....	2798	Telanor.....	3727	TNT.....	4184
Sonolor.....	2676	Swedx.....	2803 (DB1)	Telasat.....	2897	Tobo.....	2999
Sontec.....	2677	Swissflex.....	2805 (DB1)	Tele+1.....	2900	Tocom.....	3000
Sontech.....	3435	Swisstec.....	2806 (DB1)	Teleavia.....	2901	Tokai.....	3001
Sony.....	2679	Sydney.....	2808	Teleciel.....	2903	Tokyo.....	3004
Sound & Vision.....	2680	Sylvania.....	2809	Telecom.....	2906	Tomashi.....	3006
Soundmaster.....	2685	Symphonic.....	2810	Telecor.....	2910	Tonna.....	3011
Soundmax.....	2687	Synn.....	2813	Teledirekt.....	2912	Tonsai.....	4223
Soundwave.....	2689	Sysline.....	2815	Telefonica.....	2913	Top Suxess.....	3013
Soyo.....	2693 (DB1)	Systec.....	2816	Telefunken.....	2914	Topfield.....	3014
Spectra.....	2697	Sytech.....	2819 (DB1)	Telefusion.....	2915	Torx.....	3020
SR.....	2704	Sytong.....	2820	Telegazi.....	2917	Toshiba.....	3021
Srypton.....	4138			Telegent.....	2918	Towada.....	3028
Standard.....	2713	T		Teleka.....	2919	Towika.....	4224
Star Cluster.....	3724	T.D.E. Systems.....	2822	Telemaster.....	2922	Toyoda.....	3030
Star Trak.....	2720 (DB1)	Tactus.....	2825	Telemeister.....	2924	TPS.....	3032
Starcom.....	2722	Taishan.....	2835	Telenet.....	2925	Trakton.....	3036
Stargate.....	2723	Taisho.....	2836	Telepiu.....	2926	Trans Continens.....	3037
Starland.....	2726	Tandberg.....	2842	Telesat.....	2928	Transfec.....	4143
Starlite.....	2728	Tandy.....	2843	Telesonic.....	2930	Transonic.....	3041
Starmedia.....	2730	Tantec.....	2845	Telestar.....	2931	Transtec.....	3042
Starring.....	2733	Tashiko.....	2850	Telesystem.....	2933 (DB1)	Triad.....	3049
Start Trak.....	3725	Tatung.....	2852	Teletech.....	2934	Triasat.....	3050
Stenway.....	2739	TBoston.....	2853 (DB1)	Teleton.....	2935	Triax.....	3051
Stern.....	2741	TCL.....	2856	Televes.....	2937	Trident.....	3054
Strato.....	2745	TCM.....	2857	Televideon.....	2938	Trio.....	3056
Stream System.....	3675 (DB1)	Teac.....	2860	Television.....	2939	Tristar.....	3057
Strong.....	2748	Teachimagen.....	4140	Televiso.....	2941	Triumph.....	3058
STVI.....	2751	Tec.....	2861	Telewest.....	2942	TruVision.....	3061
Stylandia.....	2752	Tech Line.....	2863	Telewire.....	2943	TSM.....	3065
Sumida.....	2756	Techica.....	2865	Temco.....	2946	Tudi.....	3068
Sungoo.....	3767 (DB1)	Technema.....	2866	Tempo.....	2949	Turnsat.....	3071
Sunkai.....	2762	Technica.....	2868 (DB1)	Tennessee.....	2952	TVA.....	4225
Sunny.....	2764 (DB1)	Technical.....	3888 (DB1)	Tenosal.....	2953	TVB.....	3078 (DB1)
Sunny Sound.....	2765	Technics.....	2869	Tensai.....	2954	TVE.....	3897 (DB1)
Sunsat.....	2767	Technika.....	2870	Tenson.....	2955	TVonics.....	3080
Sunstar.....	2768	Techniland.....	2872	Tesla.....	3680 (DB1)	Twinner.....	3083
Sunstech.....	2769 (DB1)	TechniSat.....	2873	Tesmet.....	3550		
Suntronic.....	2770	Technisson.....	2874	Tevion.....	2962	U	
Sunwood.....	2772	Technology.....	3726	Texet.....	2963	UEC.....	3088
Super Sat.....	2775	Technosat.....	2877	Thes.....	3769 (DB1)	Uher.....	3089
Superla.....	2782	Technotrend.....	2879	Thomson.....	2972	Ultravox.....	3095
Supermax.....	2783	Technowelt.....	2881	Thorens.....	2973	Umax.....	3098
Supersonic.....	2787	Techvision.....	4307 (DB1)	Thorn.....	2974	UMC.....	3099 (DB1)
SuperTech.....	2789	Techwood.....	2884 (DB1)	Tiankeban.....	4142	Unic Line.....	3100

Uniden	3101
Union	3781
Unisat.....	3104
United	3106
United Cable.....	3108
United Quick Star ..	4226
Unitor.....	3110
Unity DigitalTV.....	4863 (DB1)
Unitymedia	4328 (DB1)
Universal	3113
Universum	3115
Univox.....	3116
UPC.....	3118 (DB1)

V

V7 Videoseven	3130 (DB1)
Variosat.....	3134
VEA.....	3957 (DB1)
Vector.....	3136
Vega.....	3138
Ventana.....	3142
Vestel	3148
Vexa.....	3149
Via Digital.....	3729
Viasat.....	3153
Vibrant	3154
Victor	3155
Videologic.....	3165
Videologique.....	3166
Videon.....	4227
Videosat	3170
VideoSystem.....	3172
Videotechnic.....	3173
Videoton.....	3174
Videoway	3176
VideoWorks	3177
Vidtech.....	3179
Viewmaster	3182
Viewsonic.....	3186
Viewstar	3187
Viore	3192 (DB1)
Virgin.....	4185
Visiola.....	3197
Vision	3198
Visionetics	3199
Visionic.....	3200
Visiopass.....	3203
Visiosat.....	3204
Vistar	3207

Visual Innovations... 4773	(DB1)
Vivanco.....	3209
Vivax.....	3601 (DB1)
Vivid.....	3210
Vodafone	4944 (DB1)
Volcasat.....	4053 (DB1)
Vortec	3217
Voxson.....	3220
VTech.....	3222

W

Waitec.....	3227
Waltham	3230
Watson.....	3233
Watt Radio.....	3234
Wega.....	3238
Wegavox.....	3239
Wela.....	3730
Welkin	3242 (DB1)
Wellington	3243 (DB1)
Welltech.....	3244
Weltblick.....	3245
Weltstar.....	3247 (DB1)
Weston.....	3251
WestStar	3519 (DB1)
Wetekom	3252
Wevasat	3253
Wewa.....	3254
Wharfedale.....	3255
White Westinghouse	3258
Wilson.....	3260 (DB1)
Windsor.....	3265 (DB1)
Windstar.....	3266
Winersat.....	3269
Wintel	3271 (DB1)
Wintergarten	3272
Wisi.....	3273
Wittenberg.....	3731
Woorisat.....	3280
World-of-Vision.....	3282 (DB1)
Worldsat.....	3283
Woxter.....	3286

X

Xbox.....	3295
Xcom Multimedia..	4000
Xiahua	3299
Xiangyu.....	3302
Xingfu.....	3305
Xinghai.....	3306
Xinrisong	3308
XLogic.....	3310
XMS.....	3312
Xoro.....	3315
Xrypton.....	3317
Xsat.....	3318
Xtreme	3319 (DB1)
Xuelian.....	3320


Y

Yakumo.....	3324
Yamada	3325
Yamaha	3326
Yamakawa	3327
Yamishi	3328
Yokan	3335
Yoko.....	3336
Yorx	3340
Yuhang.....	3345
Yukai.....	3346
Yüsmart.....	4777 (DB1)

Z

Zanussi.....	3349
Zaunkonig	3352
Zehnder	3353
Zenith.....	3356
ZhuHai.....	3364
Ziggo.....	4007 (DB1)
Zinwell	3365
Zodiac.....	3366
Zwergnase.....	3371

 (DB1) Brands only available from version DB1 onwards.
You can find the DB version on the sticker inside the battery compartment.

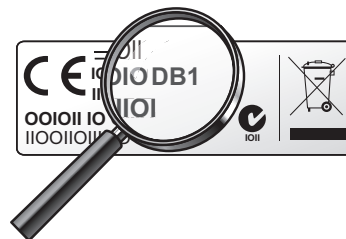

EN Information to the consumer

Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.



Recycling and disposal

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

Battery information

Your product operates on batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.

Please inform yourself about the local rules on separate collection of batteries because the correct disposal will help prevent negative consequences for the environmental and human health.

© 2011 Koninklijke Philips Electronics N.V.
All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner.
The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication there of does not convey nor imply any license under patent- or other industrial or intellectual property rights.

Document order number: 3139 235 5251 5

November 2011

www.philips.com

RTP/4811