

Docking Entertainment System

AZ1330D



Thank you for choosing Philips.

Need help fast?

Read your Quick Start Guide and/or User Manual first for quick tips that make using your Philips product more enjoyable.

If you have read your instructions and still need assistance, you may access our online help at

www.philips.com/support



Philips vous remercie de votre confiance.

Besoin d'une aide rapide?

Les Guide d'utilisation rapide et Manuel de l'utilisateur regorgent d'astuces destinées à simplifier l'utilisation de votre produit Philips. Toutefois, si vous ne parvenez pas à résoudre votre problème, vous pouvez accéder à notre aide en ligne à l'adresse

www.philips.com/support



Gracias por escoger Philips

Necesita ayuda inmediata?

Lea primero la Guía de uso rápido o el Manual del usuario, en donde encontrará consejos que le ayudarán a disfrutar plenamente de su producto Philips.

Si después de leerlo aún necesita ayuda, consulte nuestro servicio de asistencia en línea en

www.philips.com/support



PHILIPS

Return your Product Registration Card today to get the very most from your purchase.

Registering your model with PHILIPS makes you eligible for all of the valuable benefits listed below, so don't miss out. Complete and return your Product Registration Card at once to ensure:

*Proof of Purchase

Returning the enclosed card guarantees that your date of purchase will be on file, so no additional paperwork will be required from you to obtain warranty service.

*Product Safety Notification


By registering your product, you'll receive notification - directly from the manufacturer - in the rare case of a product recall or safety defect.


*Additional Benefits of Product Ownership

Registering your product guarantees that you'll receive all of the privileges to which you're entitled, including special money-saving offers.

Know these
safety symbols



 This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

 The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

For Customer Use

Enter below the Serial No. which is located on the bottom of the cabinet. Retain this information for future reference.

Model No. _____

Serial No. _____

WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture, and objects filled with liquids, such as vases, should not be placed on this apparatus.

 
CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

IMPORTANT SAFETY INSTRUCTIONS

1. **Read these instructions.**
2. **Keep these instructions.**
3. **Heed all warnings.**
4. **Follow all instructions.**
5. **Do not use this apparatus near water.**
6. **Clean only with dry cloth.**
7. **Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.**
8. **Do not install near any heat sources** such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. Do not defeat the safety

purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.



AC Polarized Plug

10. Where the MAINS plug or an appliance coupler is used as the disconnct device, the disconnct device shall remain readily operable.

11. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

12. Only use attachments/accessories specified by the manufacturer:

- 13. Use only with the cart,** stand tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is

used, use caution when moving the cart /apparatus combination to avoid injury from tip-over:

14. Unplug this apparatus during lightning storms or when unused for long periods of time.

15. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

16. Battery usage CAUTION – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:

Install **all** batteries correctly, + and - as marked on the unit.

Do not mix batteries (**old** and **new** or **carbon** and **alkaline**, etc.).

Remove batteries when the unit is not used for a long time.

17. Apparatus shall not be exposed to dripping or splashing.

18. Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).

19. This product may contain lead and mercury. Disposal of these materials may be regulated due to environment considerations.

For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org.

EL 6475-S004: 03/12

Class II equipment symbol



This symbol indicates that the unit has a double insulation system

PHILIPS LIMITED WARRANTY ONE (1) YEAR

WARRANTY COVERAGE:

PHILIPS warranty obligation is limited to the terms set forth below.

WHO IS COVERED:

Philips warrants the product to the original purchaser or the person receiving the product as a gift against defects in materials and workmanship as based on the date of original purchase ("Warranty Period") from an Authorized Dealer. The original sales receipt showing the product name and the purchase date from an authorized retailer is considered such proof.

WHAT IS COVERED:

The Philips warranty covers new products if a defect arises and a valid claim is received by Philips within the Warranty Period. At its option, Philips will either (1) repair the product at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new, or serviceable used parts and is at least functionally equivalent or most comparable to the original product in Philips current inventory, or (3) refund the original purchase price of the product.

Philips warrants replacement products or parts provided under this warranty against defects in materials and workmanship from the date of the replacement or repair for ninety (90) days or for the remaining portion of the original product's warranty, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Philips' property. When a refund is given, your product becomes Philips' property.

Note: Any product sold and identified as refurbished or renewed carries a ninety (90) day limited warranty.

Replacement product can only be sent if all warranty requirements are met. Failure to follow all requirements can result in delay.

WHAT IS NOT COVERED - EXCLUSIONS AND LIMITATIONS:

This Limited Warranty applies only to the new products manufactured by or for Philips that can be identified by the trademark, trade name, or logo affixed to it. This Limited Warranty does not apply to any non-Philips hardware product or any software, even if packaged or sold with the product. Non-Philips manufacturers, suppliers, or publishers may provide a separate warranty for their own products packaged with the bundled product.

Philips is not liable for any damage to or loss of any programs, data, or other information stored on any media contained within the product, or any non-Philips product or part not covered by this warranty. Recovery or reinstallation of programs, data or other information is not covered under this Limited Warranty.

This warranty does not apply (a) to damage caused by accident, abuse, misuse, misapplication, or non-Philips product, (b) to damage caused by service performed by anyone other than Philips or Philips Authorized Service Location, (c) to a product or a part that has been modified without the written permission of Philips, or (d) if any Philips serial number has been removed or defaced, or (e) product, accessories or consumables sold "AS IS" without warranty of any kind by including refurbished Philips product sold "AS IS" by some retailers.

This Limited Warranty does not cover:

- Shipping charges to return defective product to Philips.
- Labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- Product repair and/or part replacement because of improper installation, connections to improper voltage supply, abuse, neglect, misuse, accident, unauthorized repair or other cause not within the control of Philips.
- Damage or claims for products not being available for use, or for lost data or lost software.
- Damage occurring to product during shipping.
- A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- A product used for commercial or institutional purposes (including but not limited to rental purposes).
- Product lost in shipment and no signature verification receipt can be provided.
- Failure to operate per Owner's Manual.

TO OBTAIN ASSISTANCE IN THE U.S.A., PUERTO RICO, OR U.S. VIRGIN ISLANDS...

Contact Philips Customer Care Center at:
1-888-PHILIPS (1-888-744-5477)

TO OBTAIN ASSISTANCE IN CANADA...

1-800-661-6162 (French Speaking)
1-888-PHILIPS (1-888-744-5477) - (English or Spanish Speaking)

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY FOR THE CONSUMER. PHILIPS SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.


Some states do not allow the exclusions or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.



Philips, P.O. Box 671539, Marietta, GA. 30006-0026

3121 233 48801

1

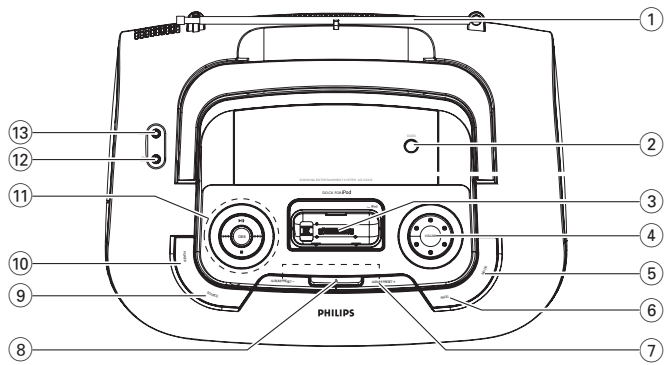

6 x R20 · UM-1 · D-CELLS

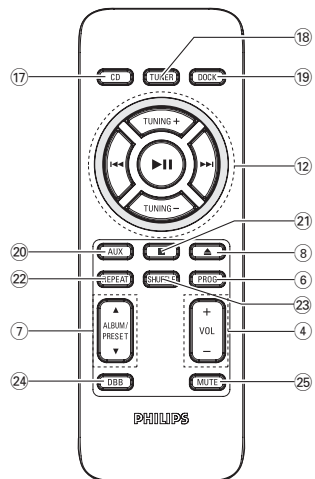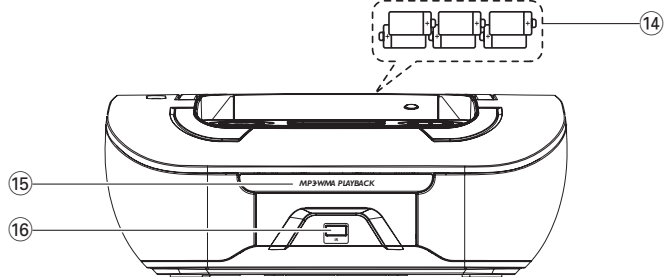


2




8




3

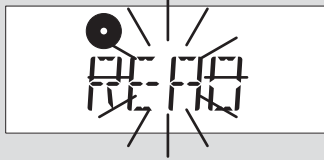


4

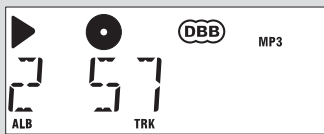


5

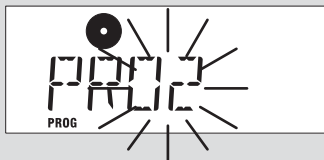



6

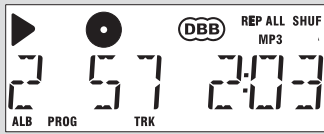

9

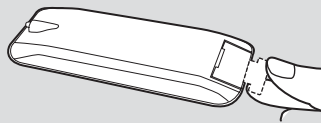

7

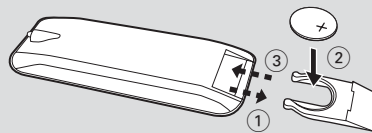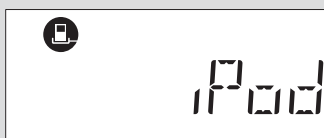

English

Supplied accessories

- AC power cord
- Remote control
- AUX-in cable
- Docking kit
- 1 x Apple iPod dock (pre-installed with the main set)
- dock adaptors (8 adaptors for different iPod types)
- 1 dust cover (keep the dock connector from covering dust and dirt)

Top and front panels (See 1)

- ① **Telescopic antenna** – improves FM reception
- ② **DOCK** – selects dock source
- ③ **Dock connector** – connects iPod player
- ④ **VOLUME/VOL +/-** – adjusts volume level
- ⑤ **MODE** – selects different play modes: e.g. REPEAT or SHUFFLE (random order)
- ⑥ **PROGRAM**
For disc – programs tracks and reviews the program
For Tuner – auto searches and stores radio stations
- ⑦ **ALBUM/PRESET +/- (▲, ▼)**
For MP3-CD/ WMA play:
– select albums
For Tuner
– selects a preset radio station
- ⑧ **▲** – opens/closes the disc tray
- ⑨ **SOURCE:** – selects CD/MP3-CD, DOCK mode, Tuner or AUX
- ⑩ **POWER** – powers on/off the system
- ⑪ **▶||** – starts or pauses disc/DOCK playback
◀◀ ▶▶
For disc/ DOCK play:
– skips to the beginning of a current/ previous/ later track
– fast searches backwards and forwards within a track

Controls / Power Supply

For Tuner:

- tunes to a radio station
- – stops disc playback;
– erases a program
- DBB** – turns on/off bass enhancement
- ⑫ **🎧** – 3.5 mm stereo headphone socket
Helpful hints: The speakers will be muted when headphones are connected to the set.
- ⑬ **AUX jack** – connects an external source (3.5 mm socket)
- ⑭ **Battery door** – opens to insert 6 x 1.5V **R-20/ -UM1/ D-cells**
- ⑮ **Disc tray** – load a disc
- ⑯ **iR** – infrared sensor for remote control

Remote control (See 1)

- ⑰ **CD** – selects disc mode
- ⑱ **TUNER** – selects tuner mode
- ⑲ **DOCK** – selects dock (iPod) source
- ⑳ **AUX** – selects AUX mode
- ㉑ **■** – stops disc playback;
– erases a program
- ㉒ **REPEAT** – repeats a track/disc/all programmed tracks
- ㉓ **SHUFFLE** – turns on/off the random play mode
- ㉔ **DBB** – turns on/off bass enhancement
- ㉕ **MUTE** – mutes or restores the volume

Power Supply

Whenever convenient, use the power supply cord if you want to conserve battery life. Make sure you remove the plug from the set and wall outlet before inserting batteries.

Batteries

Main set (See 1)

- Insert **6** batteries, type **R-20, UM1** or **D-cells** (not included, preferably alkaline) with the correct polarity.

Power Supply

Remote control

Important!

- **Before using the remote control, remove the insulation plastic tab as shown in figure 9.**
- **If the remote control does not function correctly or the operating range is reduced, replace the battery with a new (CR2025) type battery.**

- 1 Pull the battery tray out as shown in figure 9.
 - 2 Replace a new battery according to polarity indication, and fully insert the battery tray back to the original position.
- Incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst:
 - Do not mix battery types: e.g. alkaline with carbon zinc. Only use batteries of the same type for the set.
 - When inserting new batteries, do not try to mix old batteries with the new ones.
 - Remove the batteries if the set is not to be used for a long time.

Batteries contain chemical substances, so they should be disposed of properly.

Using AC power

- 1 Check if the power/mains voltage, **as shown on the type plate located on the bottom of the set**, corresponds to your local power supply. If it does not, consult your dealer or service center.
- 2 Connect the power cord to the **AC~ MAINS** inlet and the wall socket. The set is now ready for use.
- 3 To switch the set off completely, withdraw the power cord from the wall socket.
- 4 Install the unit near the AC outlet and where the AC power plug can be easily reached.

- Disconnect the power cord from the wall socket to protect your set during heavy thunderstorms. Children could seriously injure themselves as the free end of the cable may still be live if only the connector is removed from the MAINS socket at the back of the unit.

All markings are located on the bottom of the set.

Auto power saving

- In CD and DOCK mode, if AZ1330D is in the PAUSE position for 5 minutes, it will auto switch to the stop position.
- In CD and DOCK mode, if AZ1330D is in the STOP position for 15 minutes, it will auto switch to standby to save power.

Helpful hints:

- To avoid unnecessary energy consumption, always press **POWER** on the set to power off the set after using the set.

CAUTION

- Visible and invisible laser radiation. If the cover is open, do not look at the beam.

- High voltage! Do not open. You run the risk of getting an electric shock. The machine does not contain any user-serviceable parts.

- Modification of the product could result in hazardous radiation of EMC or other unsafe operation.

Basic Function/ Radio

Basic functions

Switching on/off the set

- 1 To switch on, press **POWER**.
→ Display lights up. The system will switch to the last selected source.
- 2 To switch off, press **POWER** again.
→ Display lights off.

Adjusting volume and sound

Adjust the sound with the **VOLUME** and **DBB** controls.

Digital tuner

Tuning to radio stations

- 1 Press repeatedly **SOURCE** (or **TUNER** on the remote control) to select **FM** or **AM**.
→ "TUNER" is displayed briefly, then the radio station frequency, waveband and, if programmed, a preset number are shown (See [2]).
 - 2 Press and hold **◀** or **▶** until the frequency in the display starts running.
→ The radio automatically tunes to a station of sufficient reception. Display shows "SEARCH" during automatic tuning.
 - 3 Repeat step 2 if necessary until you find the desired station.
- To tune to a weak station, press **◀** or **▶** briefly and repeatedly until you have found optimal reception.

To improve radio reception:

- For **FM**, extend, incline and turn the telescopic aerial. Reduce its length if the signal is too strong.
- For **AM**, the set uses a built-in aerial. Direct this aerial by turning the whole set.

Programming radio stations

You can store 15 FM and 10 AM radio stations in the memory manually or automatically (Auto store).

MP3-CD/ CD Player

Manual programming

- 1 Tune to your desired station (see **Tuning to radio stations**).
- 2 Press **PROG** to activate programming.
→ Display: **PROG** flashes.
- 3 Press **ALBUM/PRESET +/-** (**ALBUM/PRESET ▲, ▼** on the remote control) once or more to allocate a number (from 1 to 25).
- 4 Press **PROG** to confirm.
- 5 Repeat steps 1-4 to store other stations.

Helpful hints:

- You can erase a preset station by storing another frequency in its place.

Autostore

Autostore automatically starts programming radio stations from preset 1. Any previous presets e.g. manually programmed will be erased.

- 1 Press repeatedly **SOURCE** (or **TUNER** on the remote control) to select **FM** or **AM**.
- 2 Press **PROG** until "AUTO" flashes.
→ Available stations are programmed (AM or FM). After all stations are stored, the first autostore preset station will then automatically play.

To listen to a preset or autostore station

Press the **ALBUM/PRESET +/-** (**ALBUM/PRESET ▲, ▼** on the remote control) buttons once or more until the desired preset station is displayed.

MP3-CD/ CD Player

About MP3

The music compression technology MP3 (MPEG1 Audio Layer 3) significantly reduce the digital data of an audio CD while maintaining CD quality sound.

- **Getting MP3 files:** you can either download legal music files from the internet to your computer hard disc, or create such files by converting audio CD files in your computer through appropriate encoder software. (128kbps bit rate or higher is recommended for MP3 files.)
- **Creating a MP3 CD:** burn the music files from your computer hard disc on a CDR or CDRW using your CD burner.

Helpful hints:

- Make sure that the file names of the MP3 files end with **.mp3** or **.wma**.
- Number of albums: maximum 100.
- Number of tracks: maximum 999.
- The length of file names affects the number of tracks for playback. With shorter file names, more files can be burned on a disc.

Playing a disc

This player plays Audio Discs including CD-R/CD-RW, MP3 CD and WMA. Do not try to play a CD-ROM, CD-I, CDV, VCD, DVD or computer CD.

IMPORTANT!

- CDs encoded with **copyright protection technologies** by some record companies may be unplayable by this product.
 - DRM-protected WMA disc is not supported.
- 1 Press repeatedly **SOURCE (CD)** on the remote control) to select CD source.
 - Display shows flashing "READ" if CD source is selected (see [3]).
 - "NO DISC" will be displayed if CD is not loaded.

- 3 Press **▲** to open the disc door.
- 4 Insert a disc with the printed side facing up and press the disc door gently to close.
 - The disc scanning of MP3-CD may run longer than audio CD.
 - Display: The total number of tracks appears (and album number for MP3/WMA) (see [4]).
- 5 Press **▶II** to start playback.
 - First the song title of the track scrolls across the display, then the track number and the elapsed playing time are displayed.

For MP3-CD/ WMA only:

- The current track number (**TRK**) and album number (**ALB**) will be displayed interchangeably.
- 6 To pause playback press **▶II**.
 - Display: **▶** and the elapsed playing time flash.
 - 7 Press **▶II** again to resume playback.
 - 8 To stop playback, press **■**.

Helpful hints:

- The disc playback will also stop when:
- you open the disc compartment door;
 - you select **FM, AM, AUX** or **DOCK**;
 - the disc has reached the end of the playback.

Selecting a different track

- Press **◀◀** or **▶▶** once or repeatedly until the desired track number appears in the display.

For MP3-CD/WMA: First press

ALBUM/PRESET +/- (**ALBUM/PRESET ▲, ▼** on the remote control) once or more to find your album.

- In the pause/stop position, press **▶II** to start playback.

MP3-CD/ CD Player

Finding a passage within a track

- 1 During playback, press and hold down **⏮** or **⏭**.
→ The disc is played at high speed and low volume.
- 2 When you recognize the passage you want, release **⏮** or **⏭**.
→ Normal playback resumes.

Programming tracks

You may store up to 20 tracks in the desired sequence. If you like, store any track more than once.

- 1 In the stop position, press **⏮** or **⏭** to select your desired track number.
 - **For MP3-CD/WMA:** First press **ALBUM/PRESET +/-** (**ALBUM/PRESET ▲, ▼** on the remote control) once or more to find your album.
- 2 Press **PROG** to store desired track.
→ Display shows "PRO 2", indicating programmed location (See [5]).
 - If you attempt to program without first selecting a track, display will show "SELECT TRACK" briefly, then the total track number and playing time.
- 3 Repeat steps 1 to 2 to select and store all desired tracks.
- 4 Press **▶||** to play the program.
→ "PROG" is displayed during program playback.

To review your program

In the stop position, press and hold **PROG** 3 seconds.

→ The display shows all the stored tracks (and album numbers for MP3) in sequence.

Helpful hints:

- Display shows "NO PROG" if no track is programmed.
- If you try to store more than 20 tracks, no track can be stored and the display will show "PROGRAM FULL".

To erase a program

You can erase a program by:

- pressing **■** (twice during playback or once in the stop position);
- selecting **FM, AM, AUX** or **DOCK**;
- pressing **POWER** to power off;
- opening the disc door.
→ "PROGRAM CLEAR" scrolls across the display once, and "PROG" disappears.

Selecting different play modes (See [6])

You can select and change the various play modes before or during playback, and combine play modes with **PROG**.

REP – plays the current track continuously.

REP ALL – plays the entire disc/program continuously.

SHUF – plays all tracks in random order.

REP ALL SHUF – plays all tracks in random order continuously.

- 1 To select play modes, press **MODE** on the set (**REPEAT** or **SHUFFLE** on the remote control) once or more.
- 2 Press **▶||** to start playback if in the stop position.
→ Shuffle play will start automatically soon after shuffle mode is selected.
- 3 To select normal playback, press **MODE** on the set (**REPEAT** or **SHUFFLE** on the remote control) repeatedly until the various play modes are no longer displayed.
 - You can also press **■** to cancel your play modes.

Helpful hints:

- Shuffle (SHUF and REP ALL SHUF) play is not available in the program mode.

DOCK

Playing iPod using AZ1330D

By connecting the iPod to your AZ1330D, you can listen to the sound of the docked player through the powerful speakers of the Hi-Fi system.

Compatible portable player

- Most Apple iPod models with 30-pin dock connector as follows:
20GB, 40GB, 20/30GB photo, 40/60GB photo, 30GB video, 60/80GB video, mini and nano.

Dock adaptor

Before plugging your player in the dock, snap the suitable dock adaptor into the dock to provide a snug fit for the player to be docked.

Selecting the correct dock adaptor

- For the iPod dock, 8 dock adaptors of different type, as indicated at the back of the adaptor, are included to fit the following iPod: 20GB, 40GB, 20/30GB photo, 40/60GB photo, 30GB video, 60GB video, mini and nano.

Playing Apple iPod using AZ1330D

- 1 Snap the compatible iPod into the dock connector.
- AZ1330D will auto switch to DOCK source (See [7]).
- 2 For iPod, the connected player will play automatically.

Notes:

- By using the buttons (▶||, ◀◀, ▶▶ and **VOLUME**) on the AZ1330D and its remote control, the following disc playback features are available: Play/Pause, selecting next/previous track, fast forwarding/rewinding and changing volume.
- The buttons (▶||, ◀◀, ▶▶ and **VOLUME**) on the AZ1330D and its remote control can work only with playback of the audio contents stored on the docked player.

Auxiliary connection

Charging iPod battery using the dock

In the power-on and standby mode of AZ1330D, you can charge the iPod when docking.

Helpful hints:

- In DOCK and CD mode, if AZ1330D is in the STOP position for 15 minutes, it will auto switch to standby.

Connecting an external device

You can listen to the sound of the connected external device through your AZ1330D's speakers.

- 1 Press repeatedly **SOURCE** (or **AUX** on the remote control) to select **AUX** mode.
- 2 Use the supplied Aux-in cable to connect AZ1330D's AUX jack (3.5 mm, located on the top panel) to an AUDIO OUT or headphone jack on an external equipment (such as CD player, or VCR).

Safety & Maintenance (See 8)

Safety information

- Place the set on a hard, flat and stable surface so that the system does not tilt.
- Do not expose the set, batteries, CDs to humidity, rain, sand or excessive heat caused by heating equipment or direct sunlight.
- The apparatus shall not be exposed to dripping or splashing.
- Adequate ventilation with a minimum gap of 15 cm between the ventilation holes and surrounding surfaces is necessary to prevent heat build-up.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc..
- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- The mechanical parts of the set contain self-lubricating bearings and must not be oiled or lubricated.
- To clean the set, use a dry cloth. Do not use any cleaning agents containing alcohol, ammonia, benzene or abrasives as these may harm the housing.

CD player and CD handling

- If the CD player cannot read CDs correctly, use a cleaning CD to clean the lens before taking the set to repair.
- The lens of the CD player should never be touched!
- Sudden changes in the surrounding temperature can cause condensation on the lens of your CD player. Playing a CD is then not possible. Do not attempt to clean the lens but leave the set in a warm environment until the moisture evaporates.
- Always close the CD door to avoid dust on the lens.
- To clean the CD, wipe in a straight line from the center towards the edge using a soft, lint-free cloth. Do not use cleaning agents as they may damage the disc.
- Never write on a CD or attach any stickers to it.

Troubleshooting

If a fault occurs, first check the points listed below before taking the set for repair.

If you are unable to remedy a problem by following these hints, consult your dealer or service centre.

WARNING: *Do not open the set as there is a risk of electric shock. Under no circumstances should you try to repair the set yourself, as this will invalidate the guarantee.*

No sound/ power

- Volume not adjusted
- Adjust the VOLUME
- Power cord not securely connected
- Connect the AC power cord properly
- Batteries dead/ incorrectly inserted
- Insert (fresh) batteries correctly
- Disc contains non-audio files
- Insert a suitable disc or press ◀◀ or ▶▶ once or more skip to an audio track, instead of the data files.

Display does not function properly/No reaction to operation of any of the controls

- Electrostatic discharge
- Switch off and unplug the set. Reconnect after a few seconds.

no indication

- No disc inserted
- Insert a suitable disc
- Disc badly scratched or dirty
- Replace/clean CD (See Maintenance)
- CD-R(W) is blank or the disc is not finalized.
- Use a finalized CD-R(W)
- Laser lens steam up
- Wait until lens has cleared.

Note:

Make sure the CD is not encoded with Copyright protection technologies, as some do not conform to the Compact Disc standard.

The disc skips tracks

- Disc damaged or dirty
- Replace or clean disc
- Shuffle or program is active
- Switch off shuffle/program

Sound skips during MP3 playback

- MP3 file made at compression level exceeding 320kbps
- Use a lower compression level to record CD tracks into MP3 format
- Disc damaged or dirty
- Replace or clean disc.

Note:

DRM-protected WMA disc is not supported.

Dock operation

- The menu navigation or photo playback of the docked player cannot be carried out through the buttons on AZ1330D or its remote control.
- The buttons on AZ1330D and its remote control can control playback of audio contents only. To navigate the menu, use the controls on the docked player.
- Some buttons on AZ1330D and its remote control have no function.
- The buttons (▶▶, ◀◀, ▶▶ and VOLUME) function only.

English

Français

Español

PHILIPS CONSUMER ELECTRONICS COMPANY
Marietta, GA 30006-0026, U.S.A.

Meet Philips at the Internet
<http://www.philips.com>



CLASS 1
LASER PRODUCT

AZ1330D



Printed in China

PDCC-JH/ZC-0716