




# PHILIPS

## AZ1330D

### 1 Choosing Power Supply


- a Connect the AC power cord to the **AC~ Mains** inlet and the wall socket.
- OR-
- b Open the **battery door** and insert 6 x D batteries (not included).

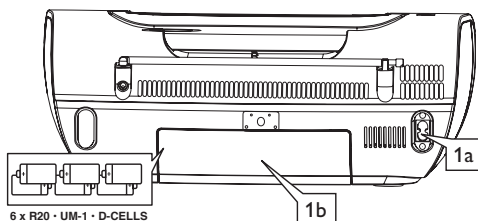

**R-20, UM-1 or D-cells  
(not included)**

### 2 Listening to Radio

- a Press **SOURCE** repeatedly to select the tuner source.
- b Press **PROGRAM** for more than two seconds to program all available stations in order of waveband.
- c Press **PRESET/ALBUM +/-** until the desired preset station is displayed.

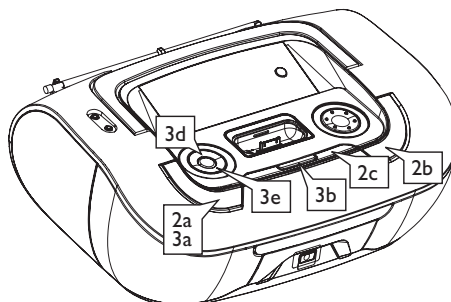

### 3 Playing a disc

This player plays Audio Discs including CD-R/CD-RW, MP3-CD and WMA.

- a Press **SOURCE** repeatedly to select **CD**.
- b Open the disc door.
- c Insert a disc with the printed side facing up and close the door.
- d Press **▶||** to start playback.
- e To stop disc playback, press **■**.


### 4 Playing Apple iPod using AZ1330D

- a Select a correct iPod adaptor, then snap it to the dock to provide a snug fit for the player to be docked.
  - 8 dock adaptors of different type, as indicated at the back of the adaptor, are included to fit the following iPod: 20GB, 40GB, 20/30GB photo, 40/60GB photo, 30GB video, 60/80GB video, mini and nano.
- b Snap a compatible iPod into the dock connector.
  - AZ1330D will auto switch to **DOCK** source.
- c The connected player will play automatically.
  - In the power-on and standby mode of AZ1330D, you can charge the iPod when docking.
  - The buttons (**▶||**, **◀◀**, **▶▶** and **VOLUME**) on the AZ1330D and its remote control can work only with playback of the audio contents stored on the docked player.


#### Tip:

Refer to the user manual supplied for detailed descriptions of "Compatible portable player", "Selecting the correct dock adaptor", "Installing the dock adaptor", and the important notes for dock operation.



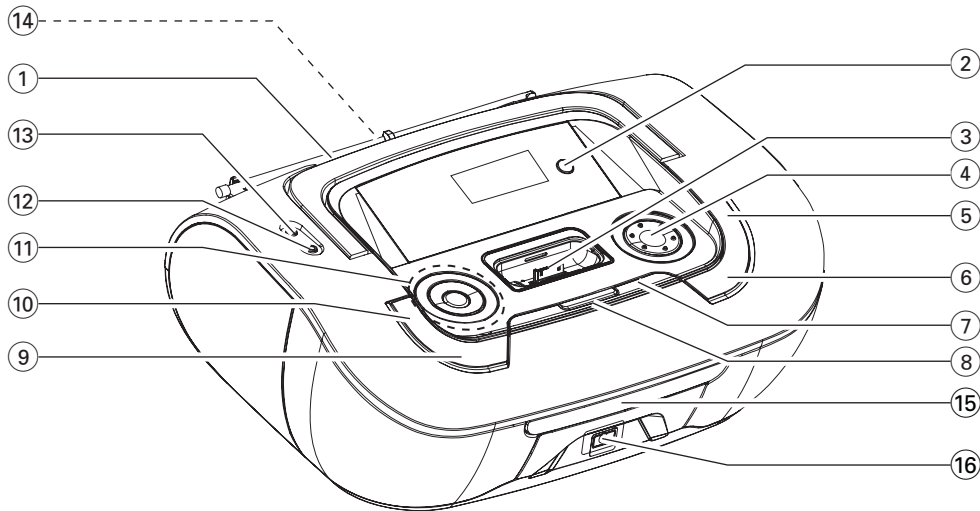

- ① **Telescopic antenna** – improves FM reception
- ② **DOCK** – selects dock source
- ③ **Dock connector**  
– connects iPod player
- ④ **VOLUME** – adjusts volume level
- ⑤ **MODE** – selects different play modes:  
e.g. REPEAT or SHUFFLE (random order)
- ⑥ **PROGRAM**  
*For disc* – programs tracks and reviews the program  
*For Tuner* – auto searches and stores radio stations
- ⑦ **ALBUM/PRESET +/-**  
*For MP3-CD/ WMA play:*  
– select albums  
*For Tuner*  
– selects a preset radio station
- ⑧ **▲** – opens/closes the disc tray
- ⑨ **SOURCE:** – selects CD/MP3-CD, DOCK mode, Tuner or AUX
- ⑩ **POWER** – powers on/off the system
- ⑪ **▶||** – starts or pauses disc/DOCK playback  
**◀▶**  
**For disc DOCK play:**  
– skips to the beginning of a current/ previous/ later track  
– fast searches backwards and forwards within a track  
**For Tuner:**  
– tunes to a radio station  
**■** – stops disc playback;  
– erases a program  
**DBB** – turns on/off bass enhancement
- ⑫ **🎧** – 3.5 mm stereo headphone socket  
**Helpful hints:** *The speakers will be muted when headphones are connected to the set.*
- ⑬ **AUX jack** – connects an external source (3.5 mm socket)
- ⑭ **Battery door** – opens to insert 6 x 1.5V **R-20/ -UM1/ D-cells**
- ⑮ **Disc tray** – loads a disc
- ⑯ **iR** – infrared sensor for remote control

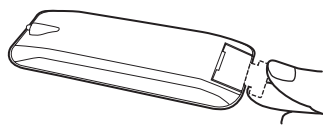

Removing the insulation plastic tab before use