

Call from the phonebook

1. Press **PhBook** in idle mode.
2. Scroll **↕** to a phonebook entry.
3. Press **CALL**.

The call is initiated.

Listen to messages recorded on the answering machine (for CD155 only)

Press **on/off** on the base station to turn on the answering machine (the LED is turned on).

Press **on/off** again to turn off the answering machine (the LED is turned off).

Press **play/stop** on the base station to play phone messages (the first recorded message will be played first).

Press **skip** to skip the current message and play the next message.

Press **repeat** to go back to the previous message (if pressed within 1 second of current message playback).

Press **repeat** to replay current message (if pressed after 1 second of current message playback).

Press **- +** to adjust speaker volume during message playback.

Press **erase** to delete the current message.

Refer to your CD155 User Manual for details about the answering machine function.

Troubleshooting

For more information, please refer to the User Manual that came with your phone.

Problem	Solution
<ul style="list-style-type: none">• There's no dialling tone!	<ul style="list-style-type: none">• Check the connections• Charge the batteries• Use the line cable provided
<ul style="list-style-type: none">• Caller cannot hear me clearly!	<ul style="list-style-type: none">• Move closer to the base station• Move the base station at least one metre away from any electrical appliances
<ul style="list-style-type: none">• SEARCHING... is displayed on handset and Y icon is blinking!	<ul style="list-style-type: none">• Move closer to the base station• Reset your unit and restart the handset registration
<ul style="list-style-type: none">• Caller number is not displayed!	<ul style="list-style-type: none">• Check your subscription with your network operator

Welcome to Philips!

Register your product and get support at
www.philips.com/welcome

Need help?

User Manual

Refer to the User Manual that came with your CD150/155.

Online help

www.philips.com/support

© 2008 Koninklijke Philips Electronics N.V.

All rights reserved.

Reproduction in whole or in part is prohibited without the written consent of the copyright owner.

Document number: 3111 285 42441 (US-EN)



Quick start guide

- 1 Connect
- 2 Install
- 3 Enjoy

PHILIPS

What's in the box



Handset



Base station with bracket for CD150
OR



CD155



Battery door



Belt clip



2 AAA rechargeable NiMH batteries



Power supply



Line cord*



User manual



Guarantee



Quick Start Guide

*You may find in the box the line adaptor delivered separately from the line cable. In this case, you have to connect the line adaptor to the line cord first before plugging the line cord to the line socket.



In multihandset packs, you will find one or more additional handsets, chargers with power supply units and additional rechargeable batteries.

WARNING Always use the cables and batteries that came with your phone.

1 Connect

Connect the base station

1. Place the base station in a central location near the telephone line socket and electricity socket.

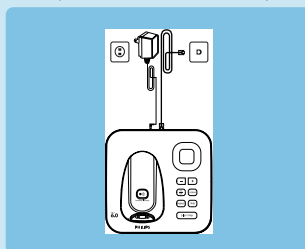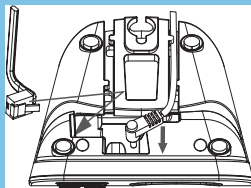


2. Connect the line cord and the power cable to their corresponding connectors at the back of the base station.
3. Connect the other end of the line cord and power cable to their respective sockets.

2 Install

Insert rechargeable batteries and charge

Insert batteries

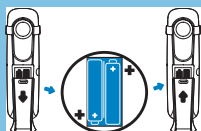

Charge handset for 24 hours



3 Enjoy

Make a call

Dial the number (maximum 24 digits) and press key.

OR

Press or key to take the line and dial the number (maximum 24 digits).

Answer a call

When the phone rings, press key.

End a call

To end a conversation, press key.

Adjust earpiece volume

During a call, press to select from **VOLUME 1**, **VOLUME 2** or **VOLUME 3**,

Set the ring melody

1. Press key in idle mode, scroll to **PERSONAL SET** and press OK, scroll to **HANDSET TONES** and press OK, scroll to **RING TONES** and press OK.

2. Scroll to your desired melody to play the melody.

3. Press OK to set the ring melody.

A validation tone is emitted and the screen returns to previous menu.

Store a contact in the phonebook

1. Press key in idle mode, scroll to **PHONEBOOK** and press OK, press OK to enter **NEW ENTRY**.

2. **ENTER NAME** is displayed on the screen.

3. Enter the name of the contact (maximum 12 characters) and press OK.

4. Enter the number (maximum 24 digits) and press OK.

A validation tone is emitted.

Access the phonebook

1. Press in idle mode and scroll to browse the phonebook.

2. To view the details, press OK.