

# Docking Entertainment System

DCI010

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)



Thank you for choosing Philips.

## Need help fast?

Read your Quick Start Guide and/or User Manual first for quick tips that make using your Philips product more enjoyable.

If you have read your instructions and still need assistance, you may access our online help at

[www.philips.com/welcome](http://www.philips.com/welcome)  
or call

1-888-PHILIPS (744-5477)  
while with your product.

(and Model / Serial number)



Philips vous remercie de  
votre confiance.

## Besoin d'une aide rapide?

Le Guide rapide de début et Manuel de l'utilisateur regorgent d'astuces destinées à simplifier l'utilisation de votre produit Philips.

Toutefois, si vous ne parvenez pas à résoudre votre problème, vous pouvez accéder à notre aide en ligne à l'adresse

[www.philips.com/welcome](http://www.philips.com/welcome)  
ou formez le

1-800-661-6162 (Francophone)  
1-888-PHILIPS (744-5477) (English speaking)

Veillez à avoir votre produit à portée de main.  
(et model / serial nombre)



Gracias por escoger Philips

## Necesita ayuda inmediata?

Lea primero la Guía rápida del comienzo o el Manual del usuario, en donde encontrará consejos que le ayudarán a disfrutar plenamente de su producto Philips.

Si después de leerlo aún necesita ayuda, consulte nuestro servicio de asistencia en línea en

 
 
 
 
[www.philips.com/welcome](http://www.philips.com/welcome)  
o llame al teléfono

1-888-PHILIPS (744-5477)  
y tenga a mano el producto.  
(y número de model / serial)




# PHILIPS

1

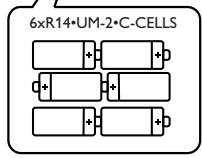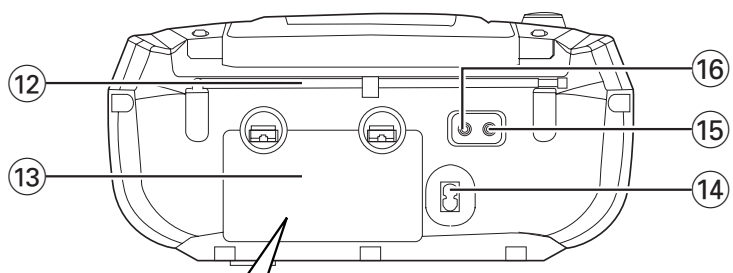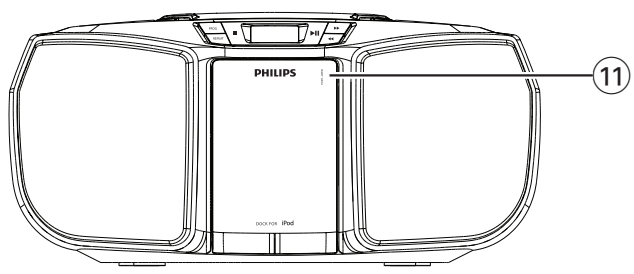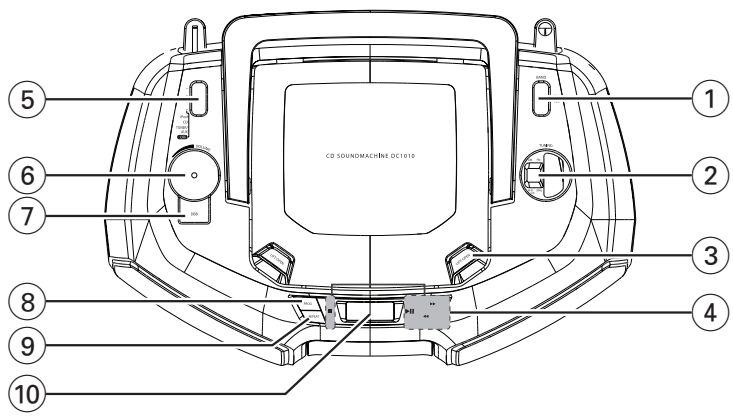

2

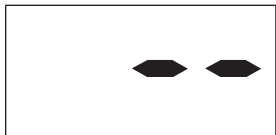 

3



 
4



5



6

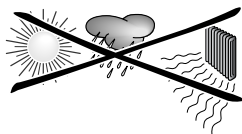

Return your Product Registration Card or register online at  
[www.philips.com/welcome](http://www.philips.com/welcome) today to get the very most from your purchase.

Registering your model with PHILIPS makes you eligible for all of the valuable benefits listed below, so don't miss out. Complete and return your Product Registration Card at once, or register online at [www.philips.com/welcome](http://www.philips.com/welcome) to ensure:

#### \*Proof of Purchase

Returning the enclosed card guarantees that your date of purchase will be on file, so no additional paperwork will be required from you to obtain warranty service.

#### \*Product Safety Notification

By registering your product, you'll receive notification - directly from the manufacturer - in the rare case of a product recall or safety defect.

#### \*Additional Benefits

Registering your product guarantees that you'll receive all of the privileges to which you're entitled, including special money-saving offers.

## PHILIPS

*Congratulations on your purchase, and welcome to the "family!"*

#### Dear PHILIPS product owner:

Thank you for your confidence in PHILIPS. You've selected one of the best-built, best-backed products available today. We'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the PHILIPS "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry. What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

Most importantly, you can count on our uncompromising commitment to your total satisfaction.


All of this is our way of saying welcome - and thanks for investing in a PHILIPS product.


**P.S. To get the most from your PHILIPS purchase, be sure to complete and return your Product Registration Card at once, or register online at:**

[www.philips.com/welcome](http://www.philips.com/welcome)

Know these  
**safety symbols**



 This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

 The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

**WARNING:** To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, fully insert.

**ATTENTION:** Pour éviter les choc électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

#### For Customer Use

Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

# PHILIPS

Visit our World Wide Web Site at <http://www.philips.com/welcome>

# PHILIPS LIMITED WARRANTY

## ONE (1) YEAR

### WARRANTY COVERAGE:

PHILIPS warranty obligation is limited to the terms set forth below.

### WHO IS COVERED:

Philips warrants the product to the original purchaser or the person receiving the product as a gift against defects in materials and workmanship as based on the date of original purchase ("Warranty Period") from an Authorized Dealer. The original sales receipt showing the product name and the purchase date from an authorized retailer is considered such proof.

### WHAT IS COVERED:

The Philips warranty covers new products if a defect in material or workmanship occurs and a valid claim is received by Philips within the Warranty Period. At its option, Philips will either (1) repair the product at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new, or serviceable used parts and is at least functionally equivalent or most comparable to the original product in Philips current inventory, or (3) refund the original purchase price of the product. Philips warrants replacement products or parts provided under this warranty against defects in materials and workmanship from the date of the replacement or repair for ninety (90) days or for the remaining portion of the original product's warranty, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Philips' property. When a refund is given, your product becomes Philips' property.

**Note: Any product sold and identified as refurbished or renewed carries a ninety (90) day limited warranty.**

**Replacement product can only be sent if all warranty requirements are met. Failure to follow all requirements can result in delay.**

### WHAT IS NOT COVERED - EXCLUSIONS AND LIMITATIONS:

This Limited Warranty applies only to the new products manufactured by or for Philips that can be identified by the trademark, trade name, or logo affixed to it. This Limited Warranty does not apply to any non-Philips hardware product or any software, even if packaged or sold with the product. Non-Philips manufacturers, suppliers, or publishers may provide a separate warranty for their own products packaged with the bundled product.

Philips is not liable for any damage to or loss of any programs, data, or other information stored on any media contained within the product, or any non-Philips product or part not covered by this warranty. Recovery or reinstallation of programs, data or other information is not covered under this Limited Warranty.

This warranty does not apply (a) to damage caused by accident, abuse, misuse, neglect, misapplication, or non-Philips product, (b) to damage caused by service performed by anyone other than Philips or Philips Authorized Service Location, (c) to a product or a part that has been modified without the written permission of

Philips, or (d) if any Philips serial number has been removed or defaced, or (e) product, accessories or consumables sold "AS IS" without warranty of any kind by including refurbished Philips product sold "AS IS" by some retailers.

### This Limited Warranty does not cover:

- Shipping charges to return defective product to Philips.
- Labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna/signal source systems outside of the product.
- Product repair and/or part replacement because of improper installation or maintenance, connections to improper voltage supply, power line surge, lightning damage, retained images or screen markings resulting from viewing fixed stationary content for extended periods, product cosmetic appearance items due to normal wear and tear, unauthorized repair or other cause not within the control of Philips.
- Damage or claims for products not being available for use, or for lost data or lost software.
- Damage from mishandled shipments or transit accidents when returning product to Philips.
- A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- A product used for commercial or institutional purposes (including but not limited to rental purposes).
- Product lost in shipment and no signature verification receipt can be provided.
- Failure to operate per Owner's Manual.

### TO OBTAIN ASSISTANCE IN THE U.S.A., PUERTO RICO, OR U.S. VIRGIN ISLANDS...

Contact Philips Customer Care Center at:  
1-888-PHILIPS (1-888-744-5477)

### TO OBTAIN ASSISTANCE IN CANADA...

1-800-661-6162 (French Speaking)  
1-888-PHILIPS (1-888-744-5477) - (English or Spanish Speaking)

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY FOR THE CONSUMER. PHILIPS SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusions or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

*This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.*

Philips, P.O. Box 10313 Stamford, CT 06904

3140 035 50201

 
# IMPORTANT SAFETY INSTRUCTIONS

1. **Read these instructions.**
2. **Keep these instructions.**
3. **Heed all warnings.**
4. **Follow all instructions.**
5. **Do not use this apparatus near water.**
6. **Clean only with dry cloth.**
7. **Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.**
8. **Do not install near any heat sources**

such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. **Do not defeat the safety**


**purpose** of the polarized or



**AC Polarized Plug**

grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. **Protect the power cord** from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. **Only use attachments/accessories** specified by the manufacturer.

12.  **Use only with the cart**, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart /apparatus combination to avoid injury from tip-over.

13. **Unplug this apparatus** during lightning storms or when unused for long periods of time.
14. **Refer all servicing** to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. **Where the MAINS plug or an appliance coupler is used as the disconnet device, the disconnet device shall remain readily operable.**

16. **Battery usage CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:

Install **all** batteries correctly, **+** and **-** as marked on the unit.

Do not mix batteries (**old** and **new** or **carbon** and **alkaline**, etc.).

Remove batteries when the unit is not used for a long time.

17. **Apparatus shall not be exposed to dripping or splashing.**
18. **Do not place any sources of danger on the apparatus** (e.g. liquid filled objects, lighted candles).
19. This product may contain lead and mercury. Disposal of these materials may be regulated due to environment considerations.  
**For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: [www.eiae.org](http://www.eiae.org).**

**EL 6475-S004: 03/12**

**Class II equipment symbol**



This symbol indicates that the unit has a double insulation system

## Supplied accessories

- AC power cord
- iPod dock
- line-in cord

## Top and front panels (See 1)

- ① **BAND** – selects FM or AM waveband
- ② **TUNING** – tunes to radio stations
- ③ **LIFT•OPEN** – opens the CD door
- ④ **▶||** – starts or pauses CD playback.  
**■** – stop playback;  
– erases a CD program  
**◀▶** – skips or searches a passage/track backwards
- ⑤ **Source selector: Tuner/AUX, CD, iPod, OFF**  
– selects tuner AUX, CD, or iPod, tuner source of sound  
– switches off the set
- ⑥ **VOLUME** – adjusts volume level
- ⑦ **DBB**  
– enhance bass effect
- ⑧ **PROG** – programs and reviews programmed track numbers
- ⑨ **REPEAT** – repeats a track/CD program/entire CD
- ⑩ **Display** – shows the CD/iPod functions

## Back panel (See 1)

- ⑪ **DOCK for iPod**  
– cradle for docking adaptors used to dock your iPod player for playback or recharging through this system.
- ⑫ **Telescopic antenna** – improves FM reception
- ⑬ **Battery door** – open to insert 6 x 1.5V R-14/ UM2/ C-cells

- ⑭ **AC MAINS** – inlet for power cord

- ⑮ **🎧** – 3.5 mm stereo headphone socket

**Helpful hints:** *The speakers will be muted when headphones are connected to the set.*

- ⑯ **AUX** – 3.5 mm audio input jack

# Power Supply

---

## CAUTION

**- Visible and invisible laser radiation. If the cover is open, do not look at the beam.**

**- High voltage! Do not open. You run the risk of getting an electric shock.**

**The machine does not contain any user-serviceable parts.**

**- Modification of the product could result in hazardous radiation of EMC or other unsafe operation.**

**- Do not put the unit into cupboard for use.**

**This set complies with the radio interference requirements of the European Community.**

---

## Power Supply

Whenever convenient, use the mains supply cord if you want to conserve battery life.

Make sure you remove the plug from the set and wall outlet before inserting batteries.

### Batteries (not included)

- 1 Open the battery compartment and insert six batteries, type **R-14**, **UM-2** or **C-cells**, (preferably alkaline) with the correct polarity as indicated by the "+" and "-" symbols inside the compartment. (See **1**)
- 2 Replace the compartment door, making sure the batteries are firmly and correctly in place. The set is now ready to operate.

**– Remove battery if it is exhausted or will not be used for a long time.**

**– Batteries contain chemical substances, so they should be disposed of properly.**

**– Perchlorate Material-special handling may apply. See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate).**

- Incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst.
- Do not mix battery types: e.g. alkaline with carbon zinc. Only use batteries of the same type for the set.
- When inserting new batteries, do not try to mix old batteries with the new ones.
- Remove the batteries if the set is not to be used for a long time.

### Using AC Mains

- 1 Check if the power/mains voltage, **as shown on the type plate located on the bottom of the set**, corresponds to your local power supply. If it does not, consult your dealer or service center.
  - 2 Connect the power cord to the AC MAINS inlet and the wall socket. The mains lead is now connected and ready for use.
  - 3 To switch the set off completely, withdraw the power cord from the wall socket.
  - 4 Install the unit near the AC outlet and where the AC power plug can be easily reached.
- Disconnect the mains lead from the wall socket to protect your set during heavy thunderstorms. Children could seriously injure themselves as the free end of the cable may still be live if only the connector is removed from the MAINS socket at the back of the unit.

**The type plate is located on the bottom of the set.**

### Helpful hints:

- To avoid unnecessary energy consumption, always adjust the **source selector** to **OFF** after using the set.



## Basic operation

- 1 To select your sound source, adjust the **source selector** to: **TUNER, AUX, CD, iPod,** or **OFF**.
- 2 To switch off the set, adjust the **source selector** to **OFF** position and check the cassette keys are released.

### Helpful hints:

In tuner mode, if you connect a 3.5 mm aux-in cable, the source changes to **AUX** automatically.

### Adjusting volume

Adjust the volume with the **VOLUME** control.

## Radio reception

- 1 Adjust the **source selector** to **TUNER**.
- 2 Adjust **BAND** to **FM** or **AM** as your desired band.
- 3 Turn **TUNING** to tune to a station.
  - For **FM**, extend and turn the telescopic antenna for best reception. Reduce its length if the signal is too strong.
  - For **AM**, the set uses a built-in antenna. Direct this antenna for best reception by turning the whole set.
- 4 To switch off the radio, adjust the source selector to **OFF** position.

## Playing a CD

This CD player plays Audio Discs including CD-Recordables and CD-Rewritable.

- MP3 CD-ROMs, CD-I, CDV, VCD, DVD or computer CDs are not possible for playback on this set.

### IMPORTANT!

- CDs encoded with **copyright protection technologies** by some record companies may be unplayable by this product.

- 1 Adjust the **source selector** to **CD**.
- 2 Open the disc door.
- 3 Insert a CD with the printed side facing up and press the CD door gently to close.  
→ Display shows -- and later; the total number of tracks. (See [2], [3])
- 4 Press **▶II** on the set to start playback.  
→ Display: ▶ and the current track number. (See [4])
- 5 To pause playback press **▶II**. To resume playback, press **▶II** again.
- 6 To stop CD play, press **■**.

### Helpful hints:

CD play will also stop when:

- you open the CD compartment;
- you select **TUNER, AUX,** or **OFF** sound source;
- the CD has reached the end of playback.

## Selecting a different track

- Press **◀◀** or **▶▶** once or repeatedly until the desired track number appears in the display.
- In the stop/pause position, press **▶II** to start playback.

# CD Player

---

## Finding a passage within a track

- 1 During playback, press and hold down **◀/ ▶**.  
→ The CD is played at high speed and low volume.
- 2 When you recognize the passage you want release **◀/ ▶**.  
→ Normal playback resumes.

### Helpful hints:

- When your searching reaches the end of the last track, the CD goes to stop mode.

---

## Programming track numbers

You may store up to 20 tracks in the desired sequence. If you like, store any track more than once.

- 1 In the stop position, press **PROG** to activate programming.  
→ Display: **PROG** and **⏮ ⏭** flash (see [5]).
- 2 Press **◀** or **▶** to select your desired track number.  
→ Display: **PROG** and your desired track number flash.
- 3 Press **PROG** to store the desired track number.  
→ Display: **PROG** and **⏮ ⏭** flash for you to program the next track.
- 4 Repeat steps **2** to **3** to select and store all desired tracks in this way.
- 5 To play your program, press **▶II**.  
→ Display: **PROG** flashes during program playback.

### Helpful hints :

- If you try to store more than 20 tracks, no track can be selected and the display will show flashing - - .

### To review a program

- In the stop position, press and hold **PROG** for two seconds to see your stored track numbers.

### Erasing a program

You can erase the contents of the memory by:

- in the stop position, press **PROG** to enter program mode, and then press **■**;
  - Selecting **TUNER, AUX, or OFF** sound source;
  - opening the CD door.
- Display: **PROG** disappears.

---

## Different play mode

### REPEAT

You can play the current track or the whole disc repeatedly, and combine REPEAT modes with PROGRAM.

**REPEAT** – plays the current track continuously.

**REPEAT ALL**– repeats the entire CD/program.

- 1 To select play mode, press **REPEAT** once or more.  
→ The display shows selected mode.
- 2 Press **▶II** to start playback if in the stop/pause position.
- 3 To return to normal playback, press **REPEAT** repeatedly until the modes are no longer displayed.  
– You can also press **■** to cancel your play mode.

---

## Compatible iPod players

- The docking entertainment system is compatible with all the existing Apple iPod models with 30-pin connector: iPod touch (8GB, 16GB), iPod classic (80GB, 160GB), iPod video (30GB, 60GB, 80GB), and iPod nano generation 1 to 3.

---

## Playing an iPod portable player

- 1** Correctly dock your iPod portable player in the cradle. Make sure the dock adapter is compatible.
- Make sure that you have powered on your iPod player before selecting iPod source.
- 2** Switch the source selector to **iPod**.  
→ The iPod dock icon appears.
- 3** Playback starts automatically. Playback functions play, skip, fast search and, pause are possible using the controls on this system and its remote control.

---

## Charging iPod battery using the dock

- In iPod/Tuner/AUX mode, directly dock your iPod portable player on the cradle for charging.

---

## Connecting an external device

You can listen to the sound of the connected external device through your DC1010's speakers.

- 1** Adjust the **source selector** to **AUX**.
- 2** Use a line-in cable (not supplied) to connect DC1010's AUX jack (3.5 mm, located on the back panel) to an AUDIO OUT or headphone jack on an external equipment (such as CD player, or VCR).

## CD player and CD handling

- If the CD player cannot read CDs correctly, use a cleaning CD to clean the lens before taking the set to repair.
- The lens of the CD player should never be touched!
- Sudden changes in the surrounding temperature can cause condensation on the lens of your CD player. Playing a CD is then not possible. Do not attempt to clean the lens but leave the set in a warm environment until the moisture evaporates.
- Always close the CD door to avoid dust on the lens.
- To clean the CD, wipe in a straight line from the center towards the edge using a soft, lint-free cloth. Do not use cleaning agents as they may damage the disc.
- Never write on a CD or attach any stickers to it.

## Safety information

- Place the set on a hard, flat and stable surface so that the system does not tilt.
- Do not expose the set, batteries, CDs to humidity, rain, sand or excessive heat caused by heating equipment or direct sunlight.
- Do not expose the apparatus to dripping or splashing.
- Adequate ventilation with a minimum gap of 6 inches between the ventilation holes and surrounding surfaces is necessary to prevent heat build-up.
- The ventilation should be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc..
- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- The mechanical parts of the set contain self-lubricating bearings and must not be oiled or lubricated.
- To clean the set, use a dry cloth. Do not use any cleaning agents containing alcohol, ammonia, benzene or abrasives as these may harm the housing.

## Specifications

Power Consumption.....3.1W

# Troubleshooting

---

If a fault occurs, first check the points listed below before taking the set for repair.

If you are unable to remedy a problem by following these hints, consult your dealer or service centre.

**WARNING:** *Do not open the set as there is a risk of electric shock. Under no circumstances should you try to repair the set yourself, as this will invalidate the guarantee.*

## Problem

---

- Possible cause
- Remedy

## No sound /power

---

- Volume not adjusted
- Adjust the VOLUME
- Power cord not securely connected
- Connect the AC power cord properly
- Batteries dead/ incorrectly inserted
- Insert (fresh) batteries correctly
- CD contains non-audio files
- Press ◀, ▶ once or more to skip to a CD audio track, instead of the data file.

## Display does not function properly/ No reaction to operation of any of the controls

---

- Electrostatic discharge
- Switch off and unplug the set. Reconnect after a few seconds

## Severe radio hum or noise

---

- Electrical interference: set too close to TV, VCR or computer
- Increase the distance

## - - indication

---

- No CD inserted
- Insert a CD
- CD badly scratched or dirty
- Replace/ clean CD, see Maintenance
- Laser lens steamed up
- Wait until lens has cleared
- CD-R(W) is blank or not finalized
- Use a finalized CD-R(W) or suitable CD Audio disc only

### Note:

**Make sure the CD is not encoded with Copyright protection technologies, as some do not conform to the Compact Disc standard.**

## The CD skips tracks

---

 
- CD damaged or dirty
- Replace or clean CD
- Program is active
- Quit program mode

### Note:

**A CD badly scratch or dirty may result in improper operation.**

**Meet Philips at the Internet**

**<http://www.philips.com>**

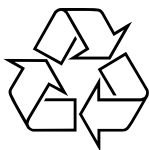

DC1010

Philips Consumer Lifestyle  
a division of Philips Electronics North America Corporation  
P.O. Box 10313  
Stamford, CT 06904  
Phone: 1-888-PHILIPS (744-5477)



© 2010 Koninklijke Philips Electronics N.V.  
All rights reserved.  
DC1010\_UM\_37\_V2.1