



PHILIPS

Philips Electronics Singapore

BLC AV Systems

Software Upgrade Instructions

For

Philips DVD Players:

DVP5500S & DVP5505S

Version History

Date:	Version No:	Remarks
06 Jan 2006	v19_25d	1) Update DivX Cyrillic subtitle.
29 Aug 2005	v16_22d	1) Stop during playback of SACD 2) During playback of SACD in multi channel mode, the track display is always the title of one track ahead.

1 Introduction

The upgrade version of this software is Version v19_25d

This software can be used to upgrade the following Philips DVD Players:

- DVP5500S/00
- DVP5500S/02
- DVP5500S/04
- DVP5500S/05
- DVP5505S/00
- DVP5505S/02
- DVP5505S/04
- DVP5505S/05

After you have completed the upgrade procedure, your DVD player will typically perform better. What improvements are made depends on the upgrade software you are using as well as the software that your DVD player contained before the upgrade.

2 Key Features

This software version includes:

- Update DivX Cyrillic subtitle

3 Preparations

You will need the following items:

- Personal Computer
- CD-R/RW drive and writing application software
- 1x blank CD-R

4 Software Version Verification Procedure

It's important to write down the Software Version information of your DVD player before you start the upgrade procedure. This information is also useful in case you need to call Philips Customer Care Center.

- POWER ON the set.
- Press SYSTEM MENU key to enter SETUP menu
- Press < or > to navigate to GENERAL menu
- Press keys 1,3,7,9 successively. Version table will be displayed on screen.

Version	00.05.01.0D (Software Version)
SUB-VER	XX.XX.XX.XX
8032	XX.XX.XX.XX
Servo	XX.XX.XX.XX
RISC	XX.XX.XX.XX
DSP	XX.XX.XX.XX
Region Code	X

5 Software Filename Verification Procedure

- Open the tray
- Press key 5, 5

Upgrade file name will be displayed on the TV Screen.

6 Download Software

1. Click the link to save the software on your computer.
2. Unzip the .zip file and extract files into your PC.

7 Steps to Upgrade Software

1. Burn the files to blank CD-R or CD-RW, not a DVD, using the following settings:
 - File System CD-ROM ISO Level 2
 - Mode 1/2/XA
 - Character set ISO 9660
 - Finalized, single session
 - Write speed slow (e.g. 2x, 4x)

Finalize the disc. (The application may do this automatically.)

NOTE: Packet writing application for drag & drop copying cannot be used for creating an upgrade disc. Use only a dedicated CD writing application allowing 'disc at once' recording.

No UDF setting as well.

2. Power on the set
3. Put in the disc
4. A message will be displayed on the OSD after the upgrade file is recognized
5. Follow the instruction displayed on the TV Screen – Press "OK" to upgrade
6. After reading the file, the disc will be ejected
7. Remove the disc, but DO NOT close the tray
8. Wait approximately 3-5 minutes for the software to be upgraded
9. The set will restart itself once the upgrade is completed.

Caution: Do not unplug or power off the set while upgrading in progress.

8 After the upgrade

Do check the Software Version to confirm the upgrade.

Please follow the procedure described in the Section 4.