


## Quick Start Guide

- 1** Preparation
- 2** Connect it
- 3** Mount it
- 4** Use it



## What's in the box


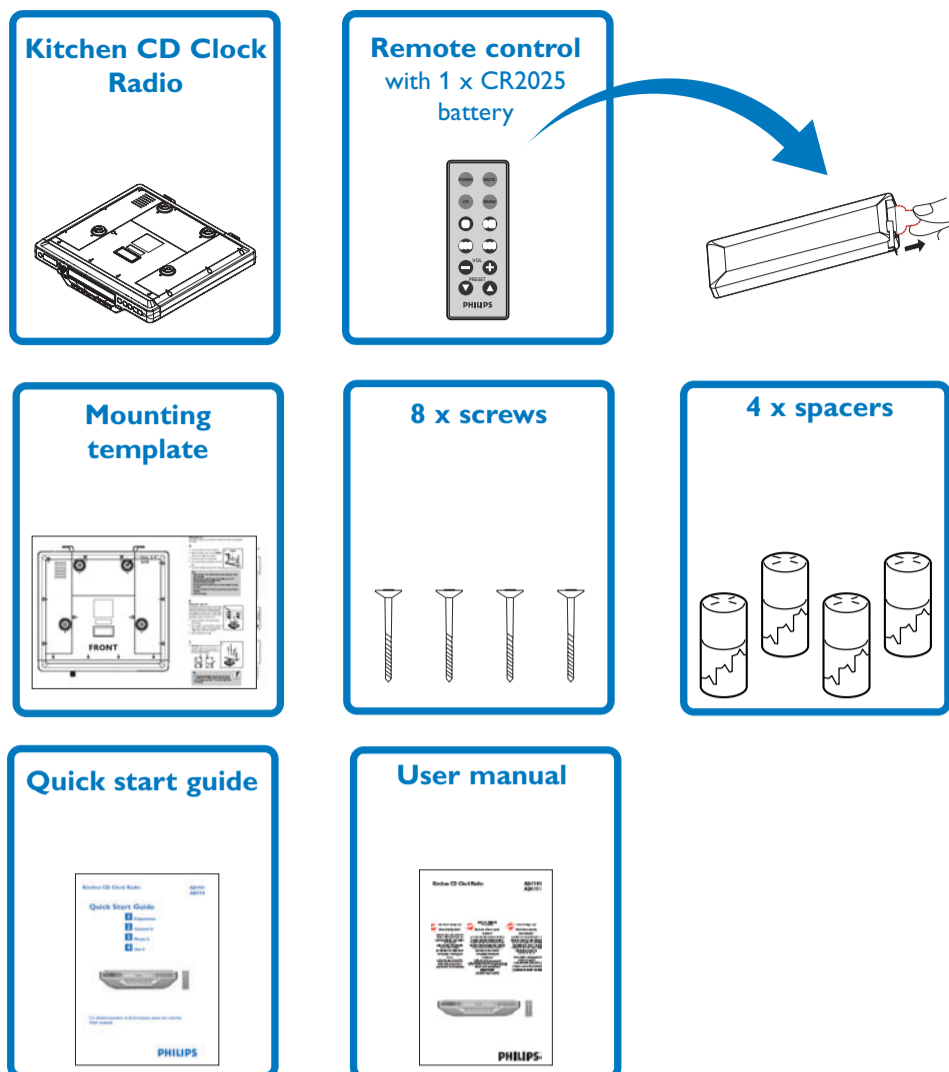


For detailed operation of all the features, please also read the **User manual**.

# PHILIPS

## What else you'll need


These tools (not included) will help you mount the unit as described in part 3 Mount it, and on the template.

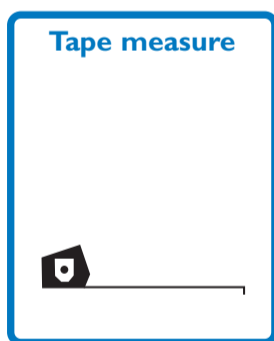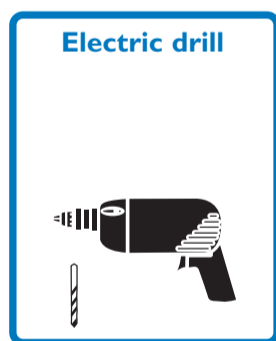

## 1 Preparation



For best performance, install the unit as far as possible from sources of noise and interference (e.g. fridges, microwaves, fluorescent lamps)

- a** Find a mounting location near a wall outlet.
- b** Use the mounting template to test the design and thickness your kitchen cabinet bottom.
- c** **Before you decide where and how to place your unit, try the following connections.** ( See **2** below)

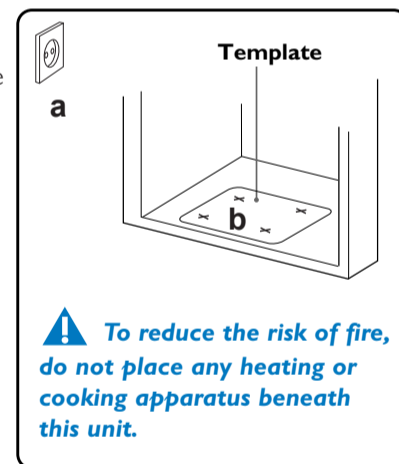

## 2 Connect it

- a** **For memory back-up power supply**, insert 1 x 9V battery (preferably alkaline, not supplied) with the correct polarity.
- b** Connect the AC power cord to the wall socket.
- c** **For AM**, the set is provided with a built-in antenna. Follow the steps under **4 D**. Direct the antenna by adjusting the position of your unit.

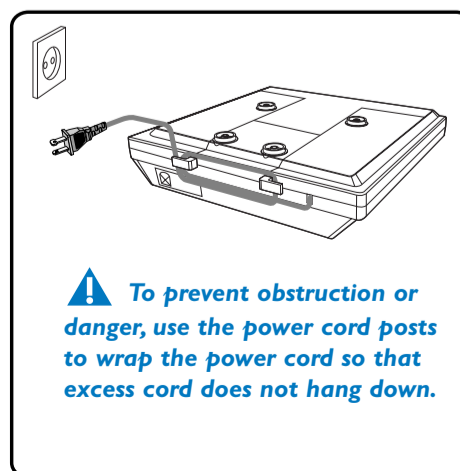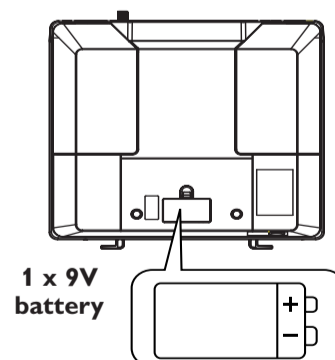

**Tip**  
We recommend you insert a 9V battery for memory back-up power supply. In the event of a power interruption, this will help safeguard the clock, timer settings and preset radio stations. To save energy, the display switches off and you will not be able to operate the CD/Tuner functions.




# 3

## Mount it

Ask a friend to help out. An extra hand to hold the unit makes mounting easier and quicker

### A

- Cut the template to fit inside the cabinet.
- Align the template border marked "FRONT" along the front edge of your cabinet.
- Use adhesive tape to fix the template.
- Drill 1/4 inch holes, as marked X on the template.
- Remove the template when you finish drilling.

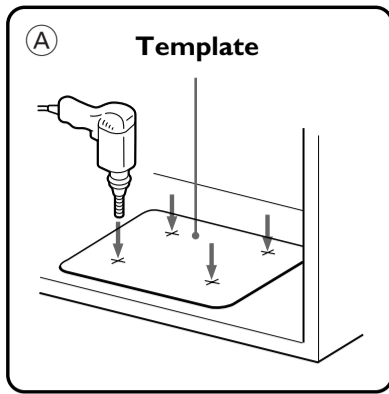

### Tip


- Clean the bottom of the cabinet surface and also empty your cabinet before mounting.
- Place the unit in a clean, safe place when drilling to avoid wood shavings dropping into the ventilation slots.
- Use a nail to start each drill hole.
- Drill from the bottom upwards if you do not have enough room inside the cabinet.
- Hold your drill firmly at 90° with the cabinet bottom and drill holes at low speed.
- Clear wood shavings.

### B

#### Using the spacers



On the spacers, there are 4 pairs of notch length options. Depending on the thickness of your cabinet bottom (with/ without an overhang), these notch lengths correspond to the 4 notch height in the space holders, and allow you to adjust to the best height to help you mount the unit.

- Measure the height of the cabinet bottom and/overhang.
- Turn the spacer counterclockwise to determine which of the 4 heights is most suitable: **Low** • • **High**. Align to the arrow indication.
- Insert the spacers accordingly.

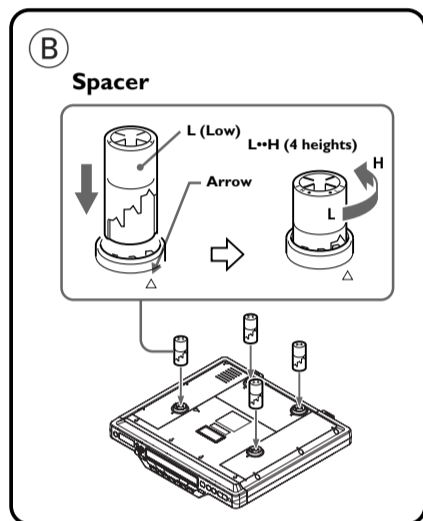


### C

- **Manually** fasten the 8 long screws down into the spacer holder holes to mount your set. Start screwing at opposite corners of the unit for better support.

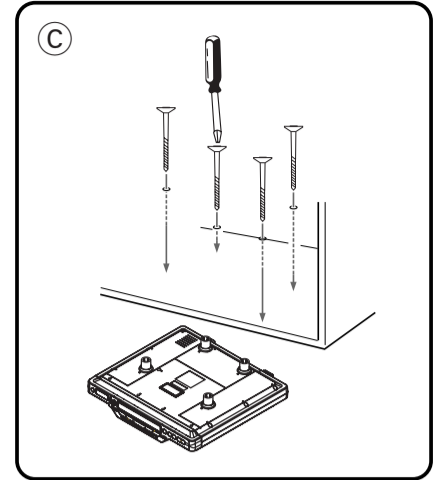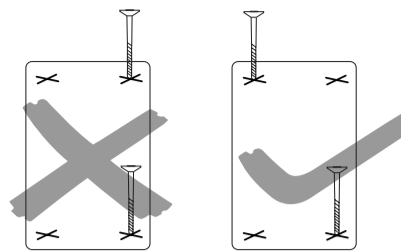

### Tip

**!** To prevent damage to your set, do not use an electric drill to secure screws when mounting!



- If the overhang is more than 1 1/4 inch, use longer screws (not included).

# 4


## Use it

For full details, please read and follow the instructions inside the **User manual**.

### A


#### Setting the clock

- 1 On the set, press and hold **CLOCK**.  
→ The hour digits start flashing (AM 12:00 by default).
- 2 Hold down or press **◀** or **▶** repeatedly to set the hour.
- 3 Press **CLOCK** to confirm the setting.  
→ The minute digits start flashing.
- 4 Repeat step 3 to set the minute.
- 5 Press **CLOCK** to confirm the setting.

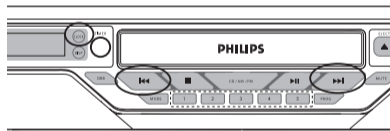

#### To turn on the Daylight Saving Time (DST) mode


- 1 In the standby mode, press and hold **DISP** on the set.  
→ Current time setting moves ahead by 1 hour.  
**DST** appears.
- 2 Press **DISP** again.  
→ The set returns to normal time setting. **DST** disappears.

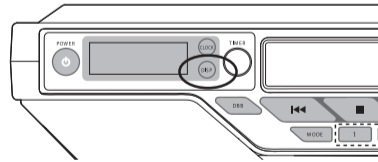

### B

#### Setting the timer


- 1 On the set, press **TIMER** to activate.  
→ 0:15 flashes. **TIMER** appears
- 2 Turn the **TIMER** control counter-/clockwise to adjust your timer period (from 1 to 180 minutes).  
→ Display shows selected timer period.
- 3 Press **TIMER** to confirm.  
→ Timer period starts to count down. **TIMER** flashes
- 4 To cancel the timer, press **TIMER** during the countdown.  
→ Display shows the clock time.

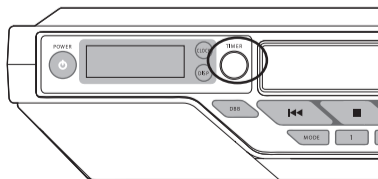

### C

#### Playing discs


- 1 Press **POWER** to on, then press **CD/AM/FM** once or more to select CD source.
- 2 Press **▲ EJECT** to open the CD compartment
- 3 Insert a disc with the printed side facing up.  
Press **▲** again to close the compartment  
→ Playback starts automatically. Display shows current track number
- 4 To pause playback, press **▶ ||**. To resume playback, press the button again
- 5 To stop playback, press **■**  
→ Display shows the total number of tracks

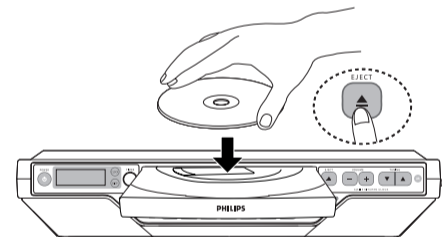

### D

#### Tuning to radio stations

- 1 Press **POWER** to on, then press then press **CD/AM/FM** once or more to select radio source (AM or FM)
- 2 Press and hold **◀ / ▶** until the frequency in the display starts running  
→ The radio automatically tunes to a station of sufficient reception
- 3 Repeat step 2 if necessary until you find the desired radio station  
→ To tune to a weak station, press **◀ / ▶** briefly and repeatedly until optimal reception is found

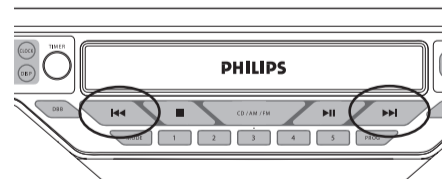

### Tip

**To Improve radio reception:**

- For FM, extend and adjust the AC power cord